Electro-Voice®

OWNER'S MANUAL
BEDIENUNGSANLEITUNG

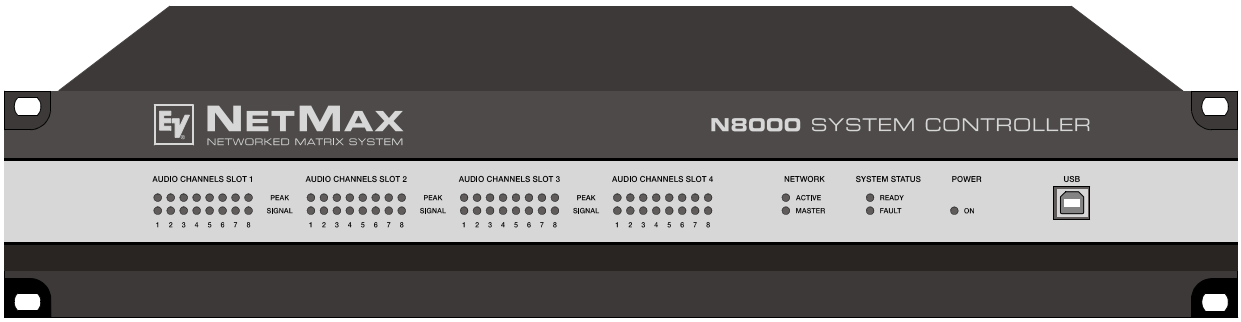

NETMAX
NETWORKED MATRIX SYSTEM

N8000 SYSTEM CONTROLLER

Contents

Introduction 6
Description of the system 6
N8000 features 7
Unpacking and warranty 8
Installation instruction 9
IRIS-Net 9
Browser Interface 10
Control Elements and Connections 11
Front Faceplate 11
SIGNAL / PEAK-LEDs 11
NETWORK-LEDs 11
SYSTEM STATUS-LEDs 12
POWER-LED 12
USB Interface 12
Rear Panel 13
AUDIO SLOTs 13
Network Module Slot 13
ETHERNET Interface 14
RS-232 Interfaces 14
REMOTE CAN BUS 14
CONTROL PORT 15
Mains Connector and Power Switch 15
Preparations 16
Mounting 16
Installation of expansion cards 16
System expansion with analog/digital inputs or outputs 17
System expansion with a network module 17
Expansion of the DSP performance of the system 17
Interface description 18
Ethernet Interface 18
CAN Interface 19
USB connection 21
RS-232 Interface 21
CONTROL PORT 22
Audio Interfaces 24
Network configuration 26
Introduction 26
Configuration 28
Configuration and testing of an Ethernet connection with N8000 28
Appendix 32
Application Example 32
Installation in a multi-purpose hall 32
Troubleshootings 33
Ethernet principles 34
IP addresses 35
Subnet mask 35
Automatic/Manual Allocation of IP Addresses 36
CAN-Bus Principles 37
System Examples 39
Performance Specifications 40
IP Address Table 41

Einleitung 46
Systembeschreibung 46
N8000 Eigenschaften 47
Auspacken und Garantie 48
Installationshinweise 49
IRIS-Net 49
Browser Interface 50
Bedienelemente und Anschlüsse 51
Frontblende 51
SIGNAL / PEAK-LEDs 51
NETWORK-LEDs 51
SYSTEM STATUS-LEDs 52
POWER-LED 52
USB-Schnittstelle 52
Rückseite 53
AUDIO SLOTs 53
Netzwerk-Modul-Slot 53
ETHERNET-Schnittstelle 54
RS-232-Schnittstellen 54
REMOTE CAN BUS 54
CONTROL PORT 55
Netzbuchse und Netzschalter 55
Inbetriebnahme 56
Aufbauverfahren 56
Installation von Erweiterungskarten 57
Systemerweiterung mit analogen/digitalen Audioein- bzw. Ausgängen 57
Systemerweiterung mit einem Netzwerk-Modul 57
Erweiterung der DSP-Leistung des Systems 58
Schnittstellenbeschreibung 58
Ethernet-Schnittstelle 58
CAN-Schnittstelle 59
USB-Schnittstelle 61
RS-232-Schnittstelle 62
CONTROL PORT 63
Audioschnittstellen 65
Netzwerk-Konfiguration 67
Einführung 67
Konfiguration 69
Aufbau und Überprüfung einer Ethernet-Verbindung mit dem N8000 69
Anhang 73
Anwendungsbeispiel 73
Installation in einer Mehrzweckhalle 73
Problemlösungen 74
Ethernet-Grundlagen 75
IP-Adressen 76
Subnetzmaske 77
Automatische/manuelle Vergabe von IP-Adressen 77
CAN-Bus-Grundlagen 78
Systembeispiele 80
Leitungsspezifikation 81
Tabelle IP-Adressen 83

Specifications/Technische Daten 84
Block Diagram/Blockschaltbild 86
Dimensions/Abmessungen 87

IMPORTANT SAFETY INSTRUCTIONS

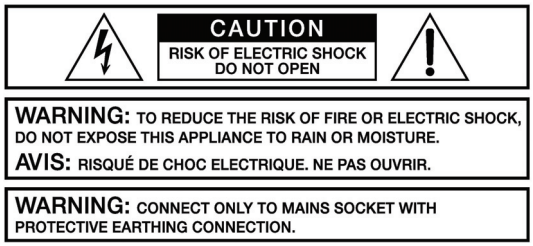
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
AVIS: RISQUÉ DE CHOC ELECTRIQUE. NE PAS OUVRIR.
WARNING: CONNECT ONLY TO MAINS SOCKET WITH PROTECTIVE EARTHING CONNECTION.

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage“ within the product’s enclosure that may be of sufficent magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture’s instructions.
8. Do not install near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or the grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for a long period of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.
16. To completely disconnect this equipment from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
17. The mains plug of the power supply cord shall remain readily operable.

Management of WEEE (waste electrical and electronic equipment) (applicable in Member States of the European Union and other European countries with individual national policies on the management of WEEE) The symbol on the product or on its packaging indicates that this product may not be treated as regular household waste, but has to be disposed through returning it at a Telex dealer.

IMPORTANT SERVICE INSTRUCTIONS

CAUTION: These servicing instructions are for use by qualified personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the Operating Instructions unless you are qualified to do so. Refer all servicing to qualified service personnel.

1. Security regulations as stated in the EN 60065 (VDE 0860 / IEC 65) and the CSA E65 - 94 have to be obeyed when servicing the appliance.
2. Use of a mains separator transformer is mandatory during maintenance while the appliance is opened, needs to be operated and is connected to the mains.
3. Switch off the power before retrofitting any extensions, changing the mains voltage or the output voltage.
4. The minimum distance between parts carrying mains voltage and any accessible metal piece (metal enclosure), respectively between the mains poles has to be 3 mm and needs to be minded at all times. The minimum distance between parts carrying mains voltage and any switches or breakers that are not connected to the mains (secondary parts) has to be 6 mm and needs to be minded at all times.
5. Replacing special components that are marked in the circuit diagram using the security symbol (Note) is only permissible when using original parts.
6. Altering the circuitry without prior consent or advice is not legitimate.
7. Any work security regulations that are applicable at the locations where the appliance is being serviced have to be strictly obeyed. This applies also to any regulations about the work place itself.
8. All instructions concerning the handling of MOS-circuits have to be observed.

NOTE: **SAFETY COMPONENT (MUST BE REPLACED BY ORIGINAL PART)**

HF-Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection agains harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or televsion reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

DECLARATION OF CONFORMITY

Applicant: **Telex EVI Audio GmbH**
Hirschberger Ring 45
94315 Straubing
Germany

Type of Equipment: System Controller

Model Number: **N8000**

Serial Number: **1703230424010021**

Test Report Number: **266.242**

Test Report Is On File At: **EMV Testhaus GmbH**
Gustav-Hertz-Straße 35
94 315 Straubing
Germany

Deutscher Akkreditierungs Rat
DAR
Registration number: TTI-P-G 101/95-20

This device complies with Part 15 of the FCC Rules for Class B Devices.

Regulation: **United States Code of Federal Regulations 47**
Part 15-Digital Devices, Subpart B-Unintentional Radiators, Class B

Standard: **ANSI C63.4-2003 Methods of Measurement of Radio-Noise Emissions from Low Voltage Electrical Equipment in the Range of 9 kHz to 40 GHz.**

Limit: **DIN EN 55022:1999-05 Information Technology Equipment Radio Disturbance Characteristics – Limits and Methods of Measurement**

Verified by:

Date: Straubing, May 2nd, 2006

1 Introduction

First of all we want to express our thanks and offer our congratulations that you have selected the NetMax N8000 System Controller from Electro-Voice. Before operating the NetMax N8000 please read this instruction manual attentively to ensure that this device provides optimal performance and that damages due to improper use are avoided.

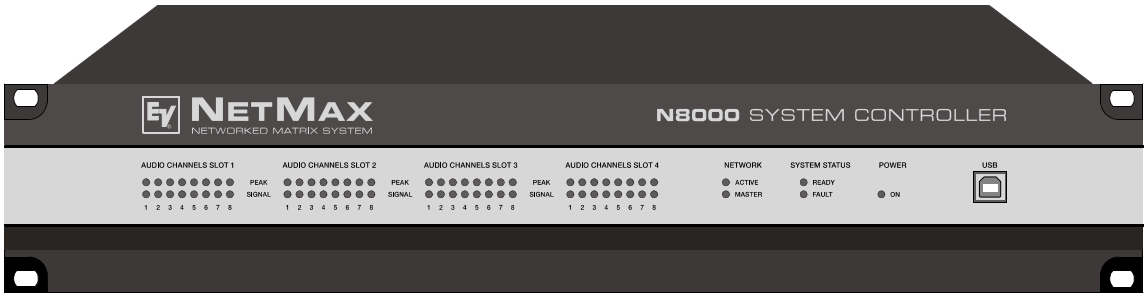

N8000 front view

1.1 Description of the system

NetMax is a modular, network-compatible and freely configurable audio system with which complete system solutions can be constructed. These system solutions exactly meet the customers' requirements. Applications are all kinds of professional audio installations, complex building sound reinforcement systems as well as concert sound applications. NetMax integrates all components ranging from the matrix to the speakers including system control and system monitoring in a common audio platform. The configuration, operation and monitoring of a NetMax system are effected by the PC Software IRIS-Net - Intelligent Remote & Integrated Supervision.

The central unit of NetMax is the N8000 system controller with up to 32 audio channels, mixer and matrix functions, signal processing and extensive control and monitoring functions. Several N8000 can be connected via a CobraNet™ audio and control network so that a large, decentralized audio system can be assembled.

NetMax also manages the Electro-Voice P-series remote amplifiers including its speaker and system monitoring functions. The connection is directly effected via CAN to the N8000.

A NetMax system meets all relevant safety requirements. All audio connections, interfaces and processor systems are monitored and displayed in case of fault. By using CobraNet™ redundant networks can be assembled.

1.2 N8000 features

NetMax N8000 is an all-purpose digital audio system controller with outstanding performance features. A high quality system design provides excellent audio quality and clear sound, which is achieved by the application of high-end 24 Bit A/D and D/A converters with 120 dB volume range, high-quality input and output circuits in the analog domain and digital signal processing with optimized 48 bit double-precision algorithms. Hence, the N8000 is even particularly suitable for demanding applications in theatres, concert halls, big churches etc.

NetMax N8000 is highly flexible due to the modular hardware design which renders many other applications possible. Four slots with 8-channel audio modules at the rear of the device offer up to 32 local audio channels. Each slot can be equipped either with an audio input module or an audio output module. So, various configurations (e.g. 8-in/8-out, 8-in/16-out, 8-in/24-out, 16-in/16-out, 24-in/8-out) can be realized in only one single device. In addition, N8000 can be equipped with a CobraNet™ network module. Therefore, several N8000 can be integrated in a network and be connected to a large, sophisticated system.

The signal processing in the N8000 is effected on powerful audio signal processors where, depending on the stage of expansion, up to 8 DSPs are available. The software contains a multitude of freely programmable signal processing components. Among other things, these are filters with all possible characteristics, parametric and graphic equalizer, crossover network, matrix router and matrix mixer, delays, dynamic functions, etc. Diverse configurations can be created by combining and connecting these DSP blocks. The programming is done via the PC software IRIS-Net. With that, you choose the desired components from a signal processing library, place them in a working area on the screen and wire them to a signal flow chart. Thus, the resulting DSP configuration has only to be transferred to the N8000 and is ready for immediately use.

The powerful signal processing allows complex configurations for the adjustment and control of the sound system, depending on the application or type of event. Thus, the sonic quality of PA speakers, monitor speakers, front fill systems as well as of the sound reinforcement of adjoining rooms, lobbies, areas for the staff etc. can be optimized and tuned individually. In other words, the N8000 copes with every application - even with large and complex systems - absolutely exactly and reliably.

In addition to the audio processing, the NetMax N8000 is equipped with diverse control functions. The scheduling with calendar function makes it possible to program one-time or recurring events. The recurrence can occur annually, monthly, weekly, daily, hourly or even within smaller time intervals. Furthermore, daily programs can be set up and can also be combined to weekly operations. With the event control, reactions to certain events or system states can be configured, e.g. in case of overstepping or undershooting of threshold values. Faults in the device or in the complete NetMax system are detected automatically and can be displayed on the PC screen or transmitted to external sites if necessary.

Faults and other events are recorded in an internal log file with date and time. Furthermore, it can be defined which types of errors or events should be recorded. The log can be read out and displayed on the screen at any time. In the NetMax N8000 individual functions can be integrated into complex operations. For example, several parameters can be set with various values or states in a scene and can be changed manually or automatically at any time.

The NetMax N8000 is equipped with all relevant interfaces by default in order to provide the connection to the network and external components. The Ethernet port makes the connection to existing building networks (intranet) and communication via the Internet possible. Ethernet is also the common connection between one or more N8000s and a PC with IRIS-Net software for the configuration, control and monitoring of a complete NetMax system. Two RS-232 serial ports can be used in order to control the N8000 from external multi-media systems, e.g. Crestron™ or AMX™. For that, an open interface protocol is available. The remote CAN-bus serves as connection to Electro-Voice remote amplifiers. Up to 100 amplifiers can be attached via CAN to one single N8000. Together with additional N8000s and amplifiers they can also be integrated in a complex and powerful audio system. The NetMax N8000 also has a control port which offers freely programmable control inputs and outputs. Switches, potentiometers or external control voltages can be connected to the control inputs (GPIs). Any logic and analog functions can be programmed. External elements which can be used to signal certain states can be attached to the control outputs (GPOs). A PC can be connected to the USB port on the front faceplate if the N8000 has been installed in a rack and the Ethernet port cannot be reached easily. Via the USB interface the network parameters of the N8000 can be edited and files containing the entire N8000 configuration can be transferred.

The highest standards regarding construction and mechanical working have been followed. The chassis is extremely robust and, therefore, effectively protects the electronics against outside influences. A temperature controlled fan provides thermal stability and also constant ambient conditions inside the device. All audio interfaces are electronically balanced and have Phoenix screw terminal connectors.

By reading this instruction manual you will get to know many additional features and functions of the NetMax N8000. Please read on attentively and keep this manual in order to be able to consult it at any time.

1.3 Unpacking and warranty

Please open the packaging and uncase the N8000. The following accessories are added to the device:

- N8000 owner’s manual (this document)
- Power supply cord
- 2 CAN terminating impedances
- 2 Phoenix connectors (6-pin)
- Warranty card

Please completely fill out the warranty card in the event that you need to make a warranty claim. We also ask you to keep the sales slip and the packaging together with the warrenty card in case the unit has to be returned.

1.4 Installation instruction

The N8000 has to be set up and installed so that both air supply and ventilation are ensured on both sides of the device. The direction of ventilation is from left to right when you look at the front faceplate. Devices with an opposing routing of air flow should not be installed in the same rack. When installing the N8000 in a rack, a free air duct between the sides of the N8000 and the side panel of the rack to the upper rack ventilation must be observed in order to ensure sufficient air ventilation. There must be at least 100 mm free space for ventilation above the rack.

ATTENTION:
The maximum ambient air temperature of +40°C should not be exceeded in order to ensure failure-free operation.

Standard installation rails should be used when mounting an N8000 in transport racks in order to prevent twisting of the front faceplate.

The N8000 must be protected against: dripping/splashing water, direct solar radiation, high ambient air temperature or direct impact of heat sources, high moisture, heavy vibrations and dust deposit.

If these conditions cannot be ensured permanently, maintenance is obligatory at regular intervals in order to prevent any breakdowns which are mainly due to negative environmental influences.

If the N8000 is transported from a cold to a warm environment, moisture may condense at the core. The device should not be started up before warming to the changed temperature (approx. after 1 hour). If a solid or liquid is in the housing, cut the device off from the mains power at once and have the device checked by an authorized service center before re-using it.

1.5 IRIS-Net

The IRIS-Net (Intelligent Remote & Integrated Supervision) PC software is used to configure and operate the N8000 system controller. The configuration of the N8000 can be done offline (i.e. without connection between the PC and the N8000) on the PC. After the connection between the PC and the N8000 has been established via Ethernet, the configuration can be transmitted to it. In addition to configurations, IRIS-Net can also be used for extensive supervision, control and monitoring of N8000 system controllers (and Electro-Voice Precision Series Remote Amplifiers which are connected to them).

Please see the short IRIS-Net instruction in the menu: ? > Quick Start Guide ... .

1.6 Browser Interface

Some of the configuration and operation options of the N8000 which are available in IRIS-Net are also provided by the N8000 browser interface. Any standard Internet browser with activated JavaScript and CSS can be utilized in order to use the browser interface. Please find the detailed information on the N8000 browser interface in the file N8000 browser manual in the IRIS-Net setup directory (\Documentation\NetMax).

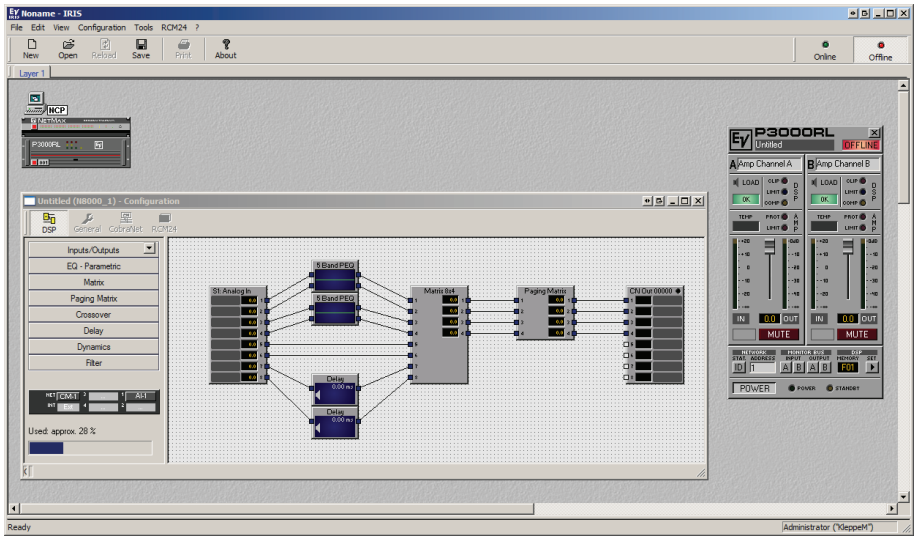

IRIS-Net (Intelligent Remote & Integrated Supervision)

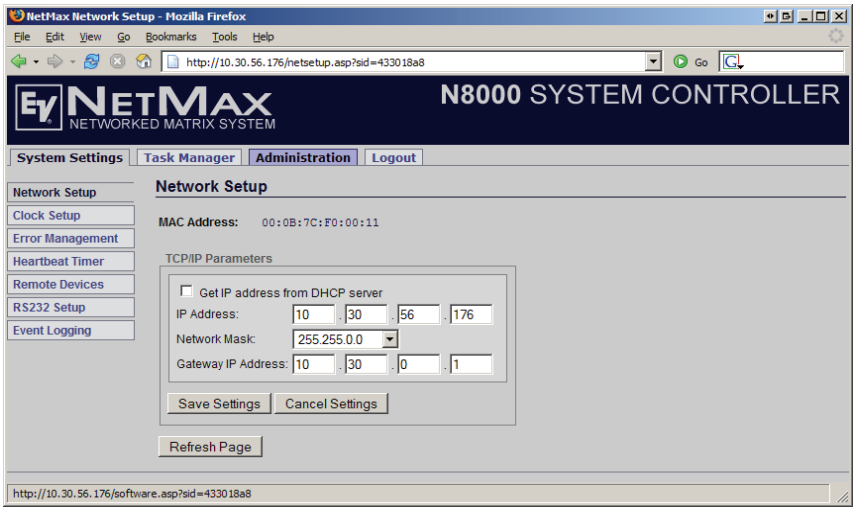

N8000 Browser Interface

2 Control Elements and Connections

2.1 Front Faceplate

The front faceplate of the N8000 has level and status displays and it offers also the possibility to connect a PC via a USB interface. SIGNAL / PEAK-LEDs exist for all 32 audio channels. The channels are combined to groups of 8 and assigned to the audio-slots 1 to 4 at the rear. Additional LEDs inform about the states of the network, system and device and give a quick overview of whether the system is working faultlessly or if a problem has occurred.

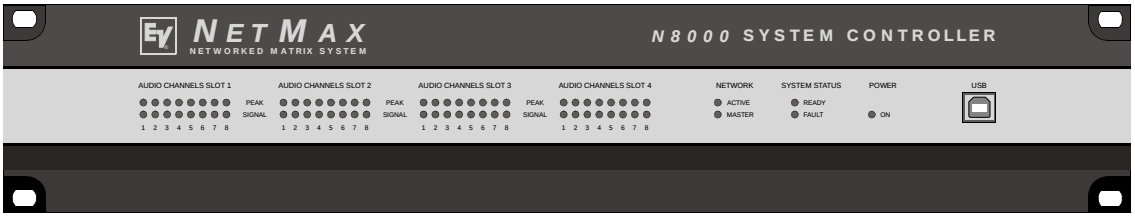

SIGNAL / PEAK-LEDs

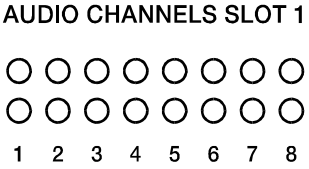

These LEDs serve as level meter display for input and output signals. The SIGNAL-LED begins to flash at -25 dBU and indicates if a signal generally exists at the input or at the output. The PEAK-LED flashes when the N8000 is operated close to the level meter's limit. The limit is approx. at +18 dBU. The maximum level meters is +21 dBu so that there is 3 dB of head room until the final clip limit is reached. The PEAK-LEDs should only flare up sporadically in case of dynamic peaks. If the PEAK-LED of an input flashes constantly or very often, you should reduce the corresponding input signal slightly. If the PEAK-LED of an output flashes constantly, the internal gain should be reduced or else the connected device will be permanently overdriven.

NETWORK-LEDs

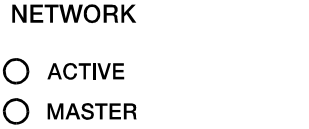

If the N8000 is operated on an audio network, e.g. CobraNet™, these LEDs show the status of the network. The ACTIVE-LED flashes or twinkles when audio data is sent or received via the network. If the LED is off, no communication via the audio network is taking place. The MASTER-LED is on when the N8000 serves as clock-master - in case of CobraNet™ it is also named the conductor. There is always only one master in an audio network, i.e. the MASTER-LED will only be illuminated on one N8000 within the network. If the unit currently functioning as

clock master breaks down or is removed from the network, another N8000 will take over this function automatically.

SYSTEM STATUS-LEDs

SYSTEM STATUS

○ READY

○ FAULT

These LEDs indicate device or system states. The READY-LED is on when the device has booted after switch-on and when it is ready for operation. An illuminated FAULT-LED indicates an internal error in the N8000 or an error in the NetMax system. During the configuration of the N8000, it can be specified which errors should be displayed. If the FAULT display is on, the error should be identified promptly. This can be done using the detailed diagnostics within the IRIS-Net PC software. The source of the fault has to be remedied immediately.

POWER-LED

POWER

○ ON

This LED is permanently green when the N8000 is powered on. If the ON indication is not illuminated, even though the device is switched on, this device may not be connected to the power supply system or the primary fuse may be faulty.

USB Interface

USB



A PC can be connected at the front panel via the USB interface. Thus, it is possible to connect the N8000 with a PC even it is already installed - i.e. when the Ethernet interface at the rear panel is perhaps no longer accessible. Via the USB interface the network parameters of the N8000 can be edited and files containing the entire N8000 configuration can be transferred. You can find the necessary USB driver in the subdirectory \Driver\USB in the IRIS-Net setup directory. Please see chapter *Interface description* for more information on technical details concerning the USB interface and the other interfaces of the N8000 which are described in the following section.

2.2 Rear Panel

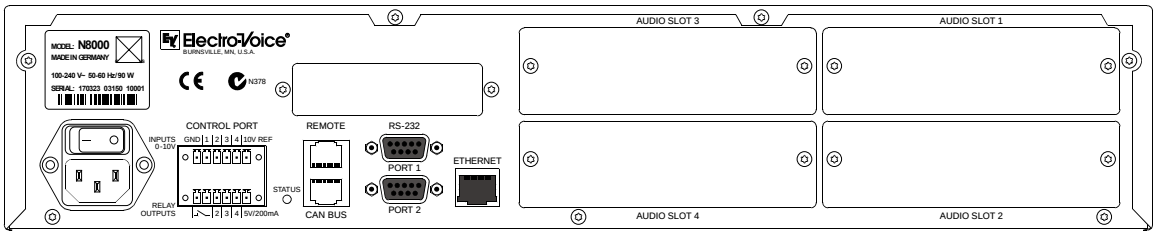

There are all connections for analog and digital audio signals, control interfaces and the power supply at the rear panel of the N8000.

AUDIO SLOTs

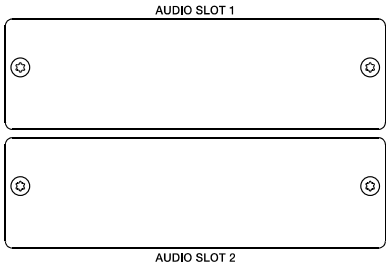

The AUDIO SLOTs 1 - 4 are module slots for the installation of NetMax audio modules. There are both analog and digital input and output modules available. Also, a module for microphone input sensitivity is optionally available. Each slot can accept any module so you can equip those inputs and outputs which you need for your specific application. The N8000 detects the type of the module automatically and offers the corresponding configuration possibilities.

ATTENTION:
The N8000 has to be switched off if you want to change or install a module. You will find detailed instructions in the data sheet of the corresponding module.

Network Module Slot

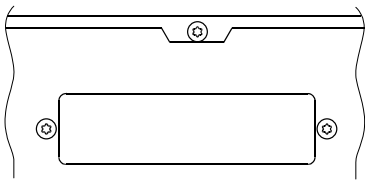

This slot is provided for the installation of a network module, e.g. CM-1 CobraNet™ module. There are all 64 audio channels - 32 inputs and 32 outputs - internally available at this slot. The CM-1 allows up to 32 digital audio input signals and 32 digital audio output signals to be transmitted via a CobraNet™ network simultaneously. Thus, several N8000 NetMax system controllers can be connected to create a large, distributed audio system. The

N8000 automatically detects an installed network module. The module can be configured in the PC software IRIS-Net.

ATTENTION:
The N8000 has to be switched off if you want to change or install a module. You will find detailed instructions in the data sheet of the corresponding module.

ETHERNET Interface

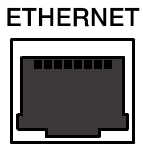

A computer and/or other N8000 devices can be connected via the Ethernet interface for 100Base-TX / 10Base-T Ethernet networks. Normally this connection is established via a standard (straight throug) Ethernet cable and an Ethernet hub or a switch. If the N8000 is to be connected directly with a computer or another N8000, a crossed Ethernet cable (crossover cable) must be used.

RS-232 Interfaces

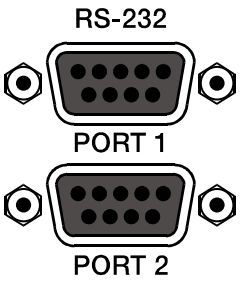

The N8000 can be connected to external devices, such as multimedia system (AMX™, Crestron™) or facility management systems via the two RS-232 interfaces. All N8000 functions and parameters can be controlled and monitored via RS-232. Communication is done using an ASCII parser which is easy to implement. Thus, a NetMax system can be easily combined with media and touch panel control systems. A PC can also be connected to the RS-232 port to access N8000 parameters using a terminal program like Hyperterminal. A special instruction set is available in order to establish a connection to a PROMATRIX/PROANNOUNCE system. The two RS-232 ports can be configured according to their corresponding application via the IRIS-Net PC software.

REMOTE CAN BUS

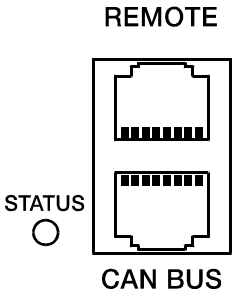

Electro-Voice remote amplifiers and other devices with CAN interfaces can be connected to the N8000 via the CAN interface. Up to 100 remote amplifiers can be connected with a single N8000. All connected components are linked to the NetMax monitoring and control platform.

The STATUS-LED is provided to monitor the communication on the CAN bus. If the CAN interface is not in use, the LED is deactivated. In normal mode the LED flashes every 2

seconds. The duration of the flashing within these 2 seconds depends on the bus load. The higher the bus load is the longer the duration of the flashing within these two seconds will be.

CONTROL PORT

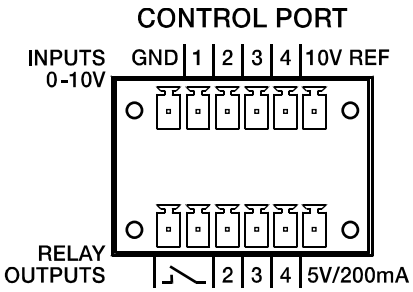

The CONTROL PORT contains four freely programmable control inputs, three freely programmable control outputs, one ready/fault output as well as reference connections for ground, +5 V and +10 V.

The control inputs IN1 - IN4 are DC inputs, which internally are connected to ground via pull-down resistors. From external sources voltages between 0 V and +10 V are possible. Either switch-mode functions or variable functions can be programmed for the control input via the IRIS-Net PC software. Examples of use are: power on/standby switching, preset switching or parameter control.

The control outputs OUT2 - OUT4 are relay contacts, which are open circuits in off-state (off). When the output is in on-state (on) the outputs are connected to ground. The outputs are able to signal internal states and they can directly operate LEDs, indicator lights or relays. The +5 V reference voltage is able to energize the externally connected elements with up to 200 mA. Operating states (critical temperature, overstepping or falling below of defined limit values, faults, etc.) can be relayed to central operation stations or other systems (fire alarm systems, life safety systems) even without use of a PC via the control outputs. You will find detailed information regarding configuration of the control ports in the IRIS-Net documentation.

Mains Connector and Power Switch

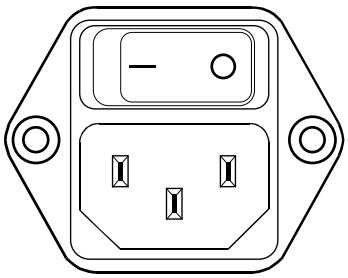

Please use the enclosed power cable in order to connect NetMax N8000 to the mains power supply. The N8000 is compatible with a supply voltage between 100 V AC and 240 V AC. Therefore, a supply voltage switch is not necessary. Internally, there is a mains fuse which is normally only blown in case of a fault. The fuse should only be replaced with an equivalent fuse with identical values for current, voltage and actuating characteristics by an authorized service center.

The N8000 can be switched on and off with the power switch on the rear of the device. The ON-LED on the front panel is immediately illuminated after switch-on. The N8000 boots and initializes all parameters with those values that had been previously active. The initialization takes some seconds. As soon as N8000 is ready for operation, the READY-LED is also illuminated.

3 Preparations

3.1 Mounting

1. **Install the expansion cards.**
   If you have purchased expansion cards (AI-1, AO-1, CM-1, DSP-1, etc.) for your N8000 system controller, please install them. In this regard, please note the paragraph page 16 as well as the installation instructions in the manuals which are enclosed to the expansion cards.

2. **Connect the power cable.**
   Please pay attention that the power switch of the N8000 (above the mains connector) is off.

3. **Install the program IRIS-Net (Intelligent Remote & Integrated Supervision) on your PC.**
   Please see the installation instruction for IRIS-Net in the file iris_readme.htm.

4. **If you have installed expansion cards with inputs or outputs (AI-1, AO-1 or CM-1) in step 1, connect the corresponding devices now.**
   Please note the instruction manual both of the expansion cards and the used devices.

5. **Connect the Ethernet interface of the N8000 with the PC via an appropriate Ethernet cable.**
   Please see the corresponding chapter *Ethernet Interface* on page 18.

6. **If your application also utilizes Electro Voice P-series Remote Control amplifiers, connect the CAN interface of the N8000 with the amplifiers.**
   Please see the corresponding chapter *CAN Interface* on page 19.

7. **Switch on the N8000 (via the power switch at the rear), the computer and any additional connected devices, if used.**
   In order to avoid any pops or thumps that may damage your speakers, please switch on the connected devices (if used) in the following order: audio signal sources - mixer and/or recorders - (power) amplifiers. These devices should be switched off in the reverse order.

8. **Now start the IRIS-Net program on your PC.**
   You will find a program introduction in the online help of IRIS-Net and the corresponding quick start guide in the menu: ? > Quick Start Guide ... .

3.2 Installation of expansion cards

The options for expanding the N8000 controller through the use of expansion cards are explained in this chapter. The N8000 can be equipped with expansion cards in different ways:

- 4 Slots (module slots) for the expansion of the system with analog/digital inputs (AI-1, MI-1, DI-1) or outputs (AO-1)
- 1 network module slot for the installation of a network module, e.g. CM-1 CobraNet™ Module

- 1 DSP expansion module (DSP-1) for the expansion of the storage capacity and signal processing

ATTENTION:
It is essential to switch off the N8000 if you want to install or change a module. You will find detailed instructions in the data sheet of the corresponding module.

System expansion with analog/digital inputs or outputs

There are four slots at the rear of the N8000 which are intended to expand the systems with analogue or digital inputs or outputs. These slots have the marking AUDIO SLOT 1 to AUDIO SLOT 4 (see the figure on page 13). Any combination of the following types of expansion cards can be installed:

- AI-1 with 8 analog inputs
- MI-1 with 8 microphone inputs
- DI-1 with 8 digital inputs
- AO-1 with 8 analog outputs

You can choose any slot for the installation of the expansion cards as the slot is automatically detected by the N8000 after the installation.

System expansion with a network module

An audio network interface for CobraNet™ can be installed in the network module slot on the rear panel of the N8000. The CM-1 module that is used for this purpose has two Ethernet connections (Primary and Secondary) so a redundant network can be established. Up to 32 digital audio input signals and 32 digital audio output signals can be transmitted simultaneously.

Expansion of the DSP performance of the system

The N8000 system controller has efficient DSP modules with a total computing power of 300 MIPS and a working memory for a maximum delay of 21.8 seconds. If this does not meet the requirements of your application, the processing power as well as the working memory of the N8000 can be increased by installing the DSP-1 NetMax DSP expansion module. This allows the execution of more complex DSP programs and the use of longer delay times or additional delay lines.

3.3 Interface description

Ethernet Interface

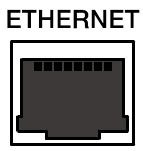

By connecting the N8000 system controller via the Ethernet interface, the communication between the N8000 and one or several PC is possible. This allows the configuration of N8000 via IRIS-Net software. Furthermore, the whole connected system (consisting of N8000s and EV Precision Series Remote Control Amplifiers) can be operated and monitored. By using appropriate network hardware it is even possible to operate the N8000 via a wireless network (WLAN). The Ethernet interface on the rear of N8000 is a RJ-45 connector (8P8C). Both 10Base-T and 100Base-TX Ethernet standards are supported. The connections of the Ethernet interfaces can be seen in the following figure and table.

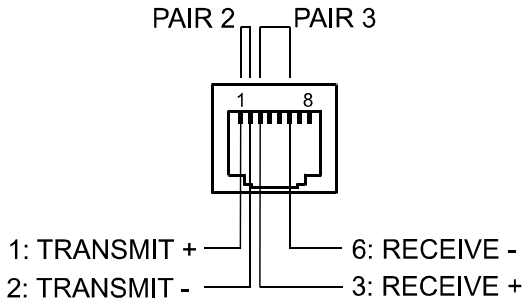

Pin Assignment of Ethernet jack

Pin	Name	Description	Pair	Colour	
				T568A	T568B
1	Tx+	Transmit+	2	Green striped	Orange striped
2	Tx-	Transmit-		Green	Orange
3	Rx+	Receive+	3	Orange striped	Green striped
6	Rx-	Receive-		Orange	Green

The pin assignment of the Ethernet connector is shown in the following figure. The connector is viewed from the contact side.

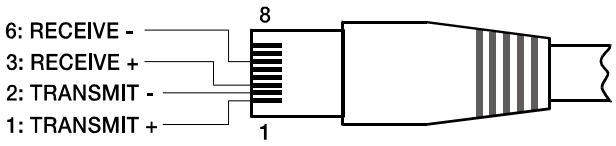

Pin Assignment of Ethernet plug

The maximum length of a connected cable segment is 100 meters in both Ethernet standards, in which two twisted pairs are used in one cable. Category 3 (unshielded CAT-3) can be used for 10Base-T communication. Category 5 (CAT-5) must be used for 100Base-TX. Cat-5 cable is compatible with 10Base-T as well.

If the N8000 is connected via a patch cable to a hub/switch, the wiring of the cable at pin 1 of the first connector has to be connected with Pin 1 of the other connector; this is the same regarding the other pins as well. There are the T568A and T568B standards for the colors of the different wires used. However, T568B standard is more widely-used.

If a crossover cable is used in order to connect a N8000 with a PC directly, pair 2 has to be interchanged with pair 3 on one side of the crossover cable. Thus, the necessary swap of the sending and receiving lines that is internally processed in a hub/switch takes place.

CAN Interface

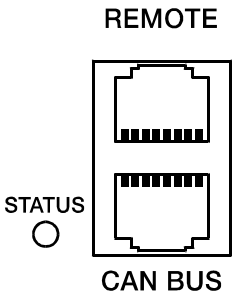

The network for the Electro-Voice remote power amplifiers is based on the CAN-bus standard, which has become widely accepted in the automotive, industrial and security sector and which has proved itself for years. The CAN-bus is a balanced serial interface to transmit commands and data. 100 power amplifiers or other devices up to a maximum cable length of 1000 meters can be connected per CAN-bus.

Each bus member has 2 RJ-45 connectors for the remote CAN-bus. The connectors are connected in parallel and serve as input or output (for a loop-through) of the remote network. The CAN-bus has to be terminated with a 120 Ω terminating resistance at both ends. Therefore, two terminating connectors CAN-TERM 120 Ω are included with the N8000. Please plug these terminating connectors in the free RJ-45 connectors of the first and the last device at the CAN-bus.

In addition to the CAN-bus, a balanced audio monitor signal is carried in the network wiring in order to monitor the input and output signals of all remote networks. This monitor bus makes it possible to monitor the input and output signals of all power amplifiers existing in the remote network via the software without the need for additional wiring work. At the N8000, the monitor bus can be gripped at a CAN connector (pins 7 and 8), it can be connected with an audio input and routed to a monitor box (e.g.) for monitoring purposes.

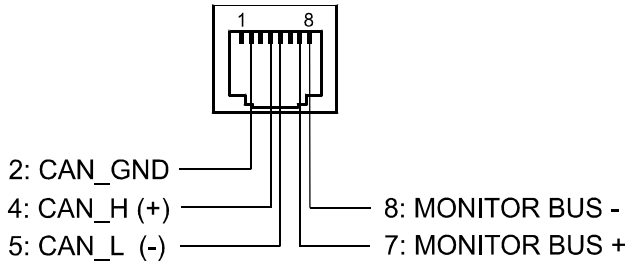

Pin Assignment of CAN jack

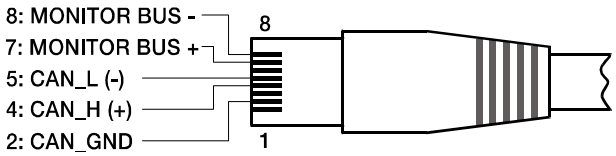

Assignment of CAN plug

Pin	Name	Colour	
		T568A	T568B
2	CAN_GND	Green	Orange
4	CAN_H (+)	Blue	
5	CAN_L (-)	Blue striped	
7	MONITOR BUS +	Brown striped	
8	MONITOR BUS -	Brown	

The CAN-bus makes it possible to use different data transmission rates, in which the boud rate is indirectly proportional to the length of the bus. If the network is only slightly extended, higher baud rates up to 500 kbit/s are possible. In case of larger extensions, the baud rate has to be lowered (to a min. transmission rate of 10 kbit/s). The following table explains the relationship between baud rate and length of the bus or extension of the network. In principle, bus lengths over 1000 meters should only be realized with repeaters.

Transfer rate (in kbit/s)	Bus length (in m)
500	100
250	250
125	500
62,5	1000
20	2500
10	5000

Please see the *CAN bus principles* chapter on page 37 in the appendix of this document as well as the instruction manuals of the connected devices for further information on CAN bus (especially on system examples and performance specifications).

USB connection

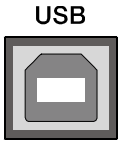

The USB interface on the front panel of the N8000 uses the USB 1.1 standard. Accordingly, the low speed (1,5 MBit/s) and full speed (12 MBit/s) transfer rates are supported. According to USB specifications, the cable which is connected to this interface must not be longer than 5 meters. The USB interface of the N8000 is a USB-B (female) connector.

The standard pin configuration can be seen in the following figure and table.

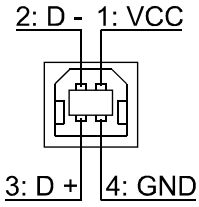

Pin Assignment of USB jack

Pin	Name	Description
1	VCC	+5 V
2	D-	Data -
3	D+	Data +
4	GND	Ground

RS-232 Interface

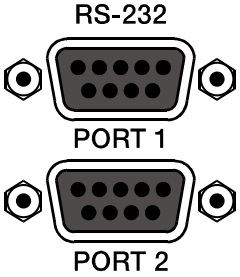

With the RS-232 interface on the rear panel, communication with the N8000 is possible via a simple ASCII communication protocol. Thus, the N8000 can be operated and configured via external devices (examples are, among other things, media control systems and PROMATRIX/ PROANNOUNCE DPM4000). In order to make data transfer between the N8000 and the connected device possible, the interfaces on both sides of the transmission route must be identically configured. The configuration of the interface of the N8000 is given in the following table.

Parameter	Value
Data bit	8
Parity bit	-
Stop bit	1
Transfer rate	19200 bit/s

The pins of the RS-232 interface used in the N8000 are indicated in the following illustration and table. Connections which are not given are internally connected in the N8000 so that the communication between the N8000 and the connected device is possible via a software handshake system. The cable which is used for the connection should not be longer than 15 meters.

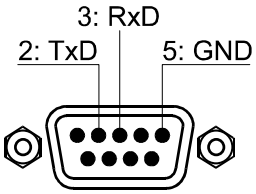

Assignment of RS-232 jack

Pin	Name	Description	Input/Output (view from N8000)
2	TxD	Transmit	Out
3	RxD	Receive	In
5	GND	Signal Ground	-

CONTROL PORT

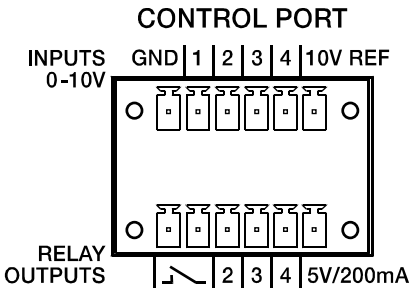

The control port on the rear of N8000 is divided into two parts. Two Phoenix connectors (6-pin) are included in delivery in order to be able to connect external components.

Control Inputs

The upper part, which is marked as INPUTS 0-10V on the device, provides four freely programmable control inputs for voltages between 0 volt and 10 volts. The inputs are numbered in order from 1 to 4. The N8000 provides its own voltage supply for externaly connected monitoring elements, e.g. potentiometers or switches. The voltage supply is available at the 10V REF and GND connectors of the control port.

ATTENTION:
The maximum allowable current at the 10 V REF is 100 mA.

The following figure shows an example application for the "analogue circuit" on the control inputs of the N8000. A voltage which can be changed via a potentiometer is connected at the control input 1. The N8000 can be configured via IRIS-Net so that this voltage can be used to adjust a variable parameter, for example, adjusting the volume of an audio input or output.

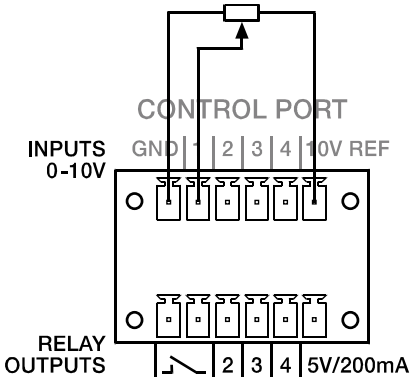

Control port with potentiometer

An example for a "digital circuit" on a control input of N8000 is shown in the following figure. The control input 2 is connected to ground via a switch (normally open contact). In IRIS-Net the N8000 can be so configured that, for example, an audio input or output channel can be muted by operating a switch. The threshold voltage for high/low which are used for this purpose are freely configurable for any input.

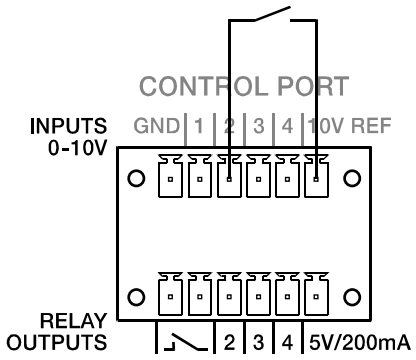

Control port with switch

Control Outputs

The lower part of the control port, which is marked as RELAY OUTPUTS on the N8000, provides different outputs. There are three freely programmable control outputs which are numbered in order from 2 to 4. These control outputs are designed as relays contacts (normally open), i.e. they are open when they are inactive (off) and closed towards ground when they are active (on). A voltage source at the 5V/200mA connection is available in order to operate the externally connected elements.

ATTENTION:
The maximum allowable current at the 5 V output is 200 mA.

The two left connections of the RELAY OUTPUTS are the READY/FAULT output of the N8000. This floating output is closed when the N8000 is ready for operation and no error has occurred. It is possible in IRIS-Net to configure which kind of error causes the contact to be opened. Due to this feature, this contact is especially suitable for the integration of the N8000 in life safety systems (closed current principle). An example application for the circuit of a control output is shown in the following figure. An operating state of the N8000 (e.g. the overstepping of a temperature limit) is indicated via a pilot light.

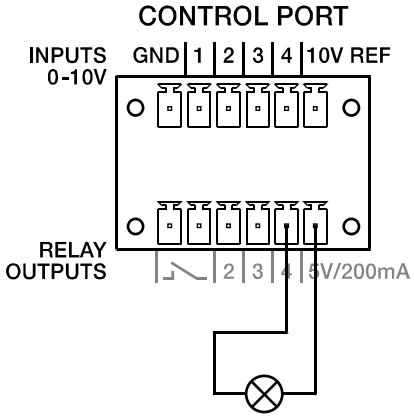

Control port with pilot light

Audio Interfaces

Analog audio connecting cable

It is advisable to choose balanced cables (2 signal conductors + shield) with XLR connectors as analog audio connections. Although all N8000 analog audio inputs and outputs can be used unbalanced, balanced audio cable is the better choice. A balanced differential audio circuit can prevent the injection of external noise into the audio path and is strongly recommended, particularly for long cable runs.

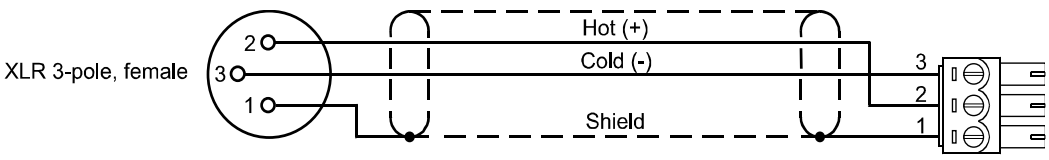

N8000 Analog audio input cable, XLR (female) on Phoenix

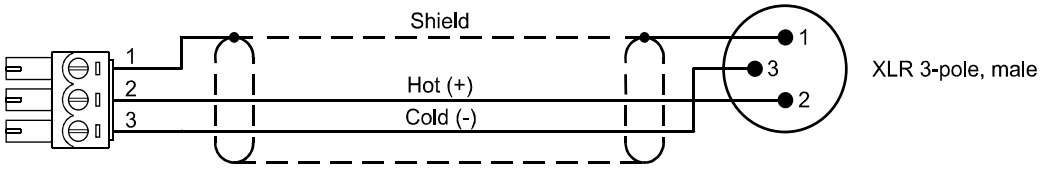

N8000 Analog audio output cable, XLR (male) on Phoenix

Digital audio connecting cable

It is advisable to choose balanced cables (2 signal conductors + shield) with XLR connectors as digital audio connections. Although all N8000 digital audio inputs can be used unbalanced, balanced audio cable is the better choice.

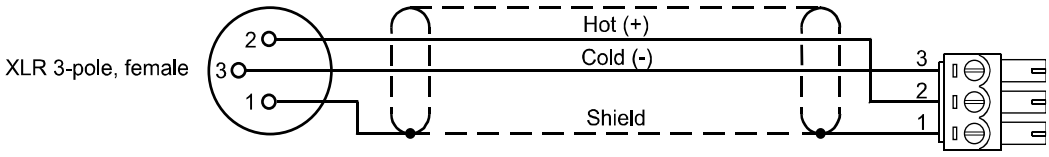

N8000 Digital (balanced) audio input cable, XLR (female) on Phoenix

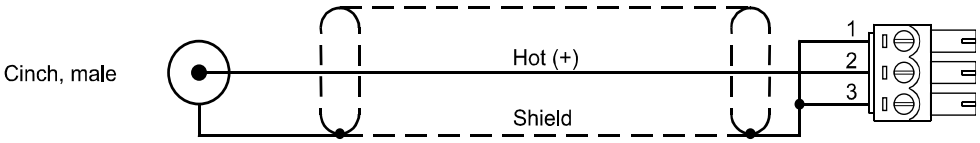

N8000 Digital (unbalanced) audio input cable, Cinch (male) on Phoenix

4 Network configuration

4.1 Introduction

The N8000 system controller can be connected to a TCP/IP-network via the Ethernet interface at its rear panel (see page 14). For further information on the principles of Ethernet and TCP/IP please see the chapter *Ethernet principles* on page 34 in the appendix of this document.

The N8000 comes with the following network configurations from the factory:

Parameter	Value
IP address	192.168.1.100
Subnet mask	255.255.255.0
Gateway	192.168.1.1
DHCP	deactivated

An IP address must be unique, it must only be allocated to one single device (host) in a network. In case a new Ethernet network is designed for the operation of the N8000, it is recommended to retain the subnet mask and network ID which had been set at the factory. If the N8000 is integrated in an existing Ethernet network, the network configuration of the N8000 must be adapted.

The preset IP address of the N8000 can be retained if and only if

- only a single N8000 with factory-set configuration is connected via Ethernet and
- the network ID 192.168.1 can be retained and
- no other devices have the Host-ID 100.

If at least one of these three conditions is not fulfilled, the preset IP address of the N8000 has to be changed.

Example:

The following illustration shows an example application with four NetMax N8000 in a closed network. These are networked with a PC via a central Ethernet switch. Thus, the factory preset

IP address 192.168.1.100 would exist four times in the network. Because of this, the preset IP address of three NetMax N8000s must be replaced with a unique address.

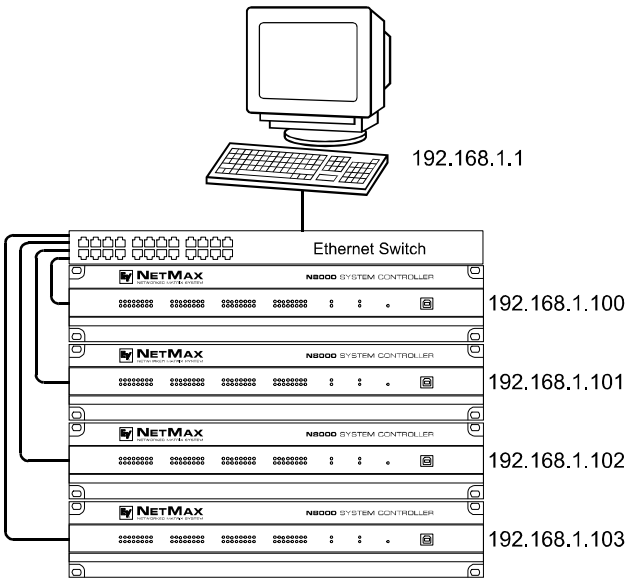

Example of an Ethernet network with four N8000

It is advantageous and strongly recommended to list all devices used in the Ethernet network and IP addresses for changing the preset IP addresses of the N8000s. An example of such a list for the example system shown in the above illustration is given in the following. You will find an empty form in the appendix. Please enter the description of the device, an unambiguous description and the IP address which has to be assigned to the device for every device used in the network in this list. If the device is displayed in IRIS-Net, you can also use the description that is used there.

Device	IRIS-Net Device Name	Location/Description	IP-Adresse
N8000	main office	main office	192.168.1.100
PC	-	main office	192.168.1.1
N8000	administration	administration building	192.168.1.101
N8000	production	production building	192.168.1.102
N8000	multi-purpose	mult-purpose hall	192.168.1.103

When the example system is put into operation, the IP addresses which are given in the overview table, should be assigned to each device. The assignment of the IP address can be made via IRIS-Net and via the N8000 browser interface. In IRIS-Net the assignment is possible both over the USB interface and the Ethernet interface of the N8000. Information about the exact proceedings are given in the IRIS-Net online-help. For the assignment of the IP address over the N8000 browser interface open the browser interface using the current (preset) IP address of the N8000. Information about the exact proceedings are given in the N8000 browser manual.

4.2 Configuration

Configuration and testing of an Ethernet connection with N8000

The purpose of this procedure is to build a connection between a PC and a N8000 with factory network settings (see page 26) via Ethernet and to check the proper function of this connection. In the following it is assumed that neither the PC nor the N8000 are connected with an existing network.

1. **Click on *Start > Control Panel > Network Connection*.**
   The window *Network Connections* appears. Here, all available possibilities for the connection of your PC with a network are given. The Ethernet connection that is used for the connection with the N8000 is contained in the *LAN or High-Speed Internet* category.

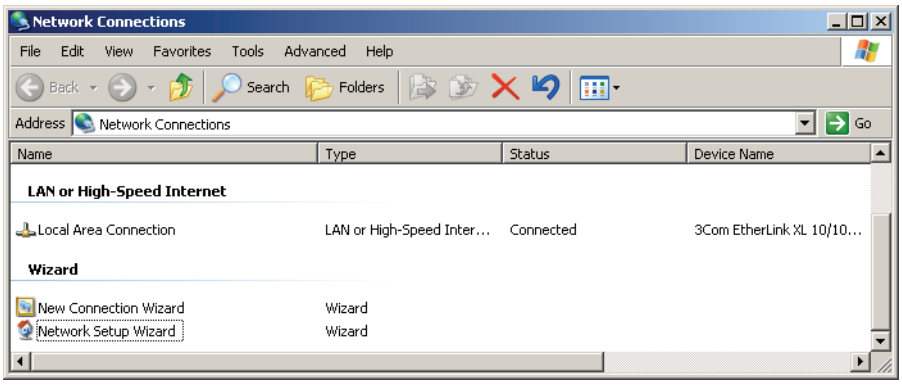
Network Connections
File Edit View Favorites Tools Advanced Help
Back Search Folders
Address Network Connections
Go
Name Type Status Device Name
LAN or High-Speed Internet
Local Area Connection LAN or High-Speed Inter... Connected 3Com EtherLink XL 10/10...
Wizard
New Connection Wizard Wizard
Network Setup Wizard Wizard

2. **Click on (with the right mouse button) that particular Ethernet connection in the N*etwork Connections* window that should be used for the connection with the N8000.**
   The context menu of the chosen Ethernet connection appears.

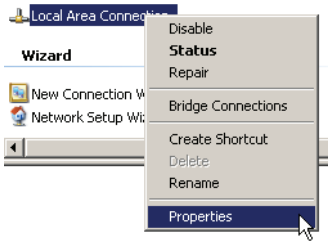

3. **Click on *Properties* in the context menu.**
   The pop-up window *Local Area Connection Properties* appears.

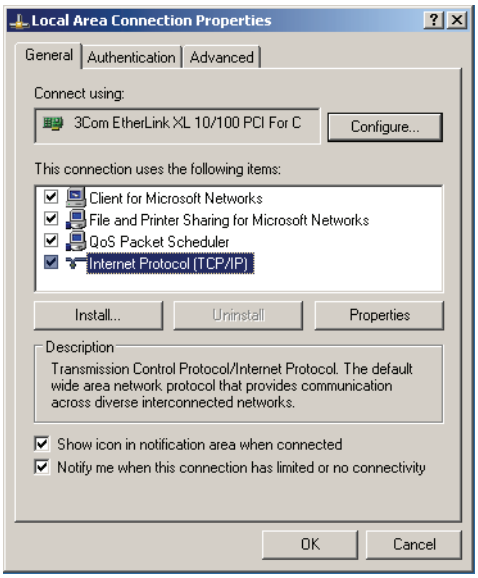

4. **Double click on I*nternet Protocol (TCP/IP)*.**
   The pop-up window *Internet Protocol (TCP/IP) Properties* appears.

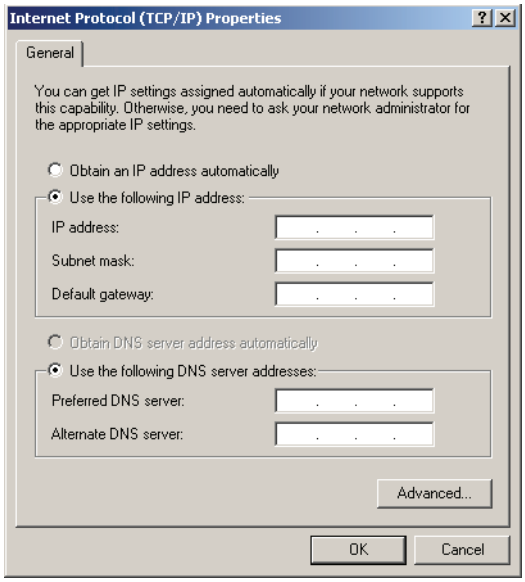
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
Subnet mask:
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

5. **Choose the option *Use the following IP address* in the window.**

6. **Type 192.168.1.1 in the *IP address* input field.**

7. **Type 255.255.255.0 in the S*ubnet mask* input field.**

8. **Close the window *Internet Protocol (TCP/IP) Properties* by clicking on the *OK* button.**

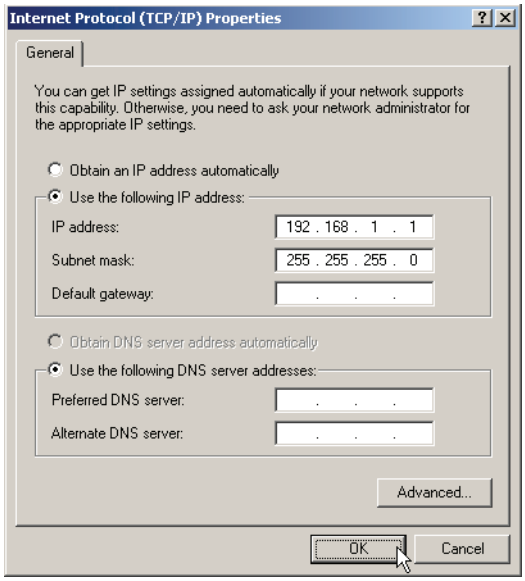
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
192 . 168 . 1 . 1
Subnet mask:
255 . 255 . 255 . 0
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

The IP configuration of the PC is now complete. In the following steps the connection of the PC with the N8000 will be established and checked.

9. **Connect the network connection of your PC to the Ethernet interface of the N8000 directly with a crossover cable, or with a patch cable and a hub/switch.**
   Please see the *Ethernet principles* chapter on page 34 in the appendix of this document for more information on the details of connecting devices via Ethernet.

10. **Connect the N8000 to the power supply system and switch it on by operating the power switch on the rear.**
    The green ON-LED (see page 12) on the front panel of the N8000 is illuminated. After some seconds the green READY-LED (see page 12) is also illuminated and signals the successful start activity of the N8000.

11. **Click on *Start* > *All Programs* > *Accessories* > Command Prompt.**
    The window *command prompt* appears.

12. Enter *ping 192.168.1.100* and tap the return button.

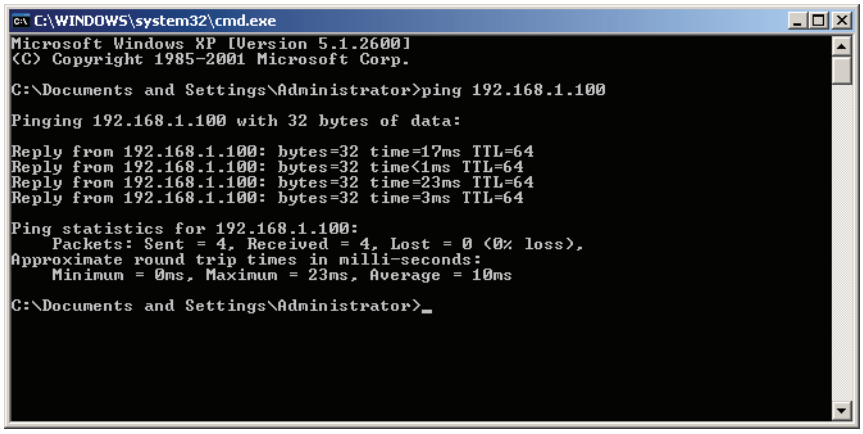
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.
C:\Documents and Settings\Administrator>ping 192.168.1.100
Pinging 192.168.1.100 with 32 bytes of data:
Reply from 192.168.1.100: bytes=32 time=17ms TTL=64
Reply from 192.168.1.100: bytes=32 time<1ms TTL=64
Reply from 192.168.1.100: bytes=32 time=23ms TTL=64
Reply from 192.168.1.100: bytes=32 time=3ms TTL=64
Ping statistics for 192.168.1.100:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 23ms, Average = 10ms
C:\Documents and Settings\Administrator>_

The PC is now checking the connection with the N8000. For this four network packets are sent to the N8000 via Ethernet then the N8000 has to confirm these packets. If the Ethernet connection is successful, no packets get lost. Therefore, 0% loss is stated in the ping statistics.

5 Appendix

5.1 Application Example

Installation in a multi-purpose hall

The following figure shows an example for the application of a N8000 system controller in a multi-purpose hall. Four microphones, one CD player and one tuner are the connected signal sources. Both active and passive speakers are used for the sound reinforcement. The Electro-Voice Precision Series Remote Amplifiers which are used for the operation of the passive speakers are connected with the N8000 via the CAN Bus in addition to the audio connections.

Two different methods are designed in order to operate and control the system. The first possibility is a conventional PC where the IRIS-Net (Intelligent Remote & Integrated Supervision) software is used to operate the N8000 and the remote amplifiers. It is not only possible to operate and control the system via IRIS-Net, but also to monitor the whole system. The N8000 and the PC are connected via Ethernet. Connecting a touch panel (e.g. AMX™, Crestron™) to the RS-232-interface of the N8000 is the second possibility for the operation of the system. The desired functions of the system can be accessed via the special operating interface of the touch panel.

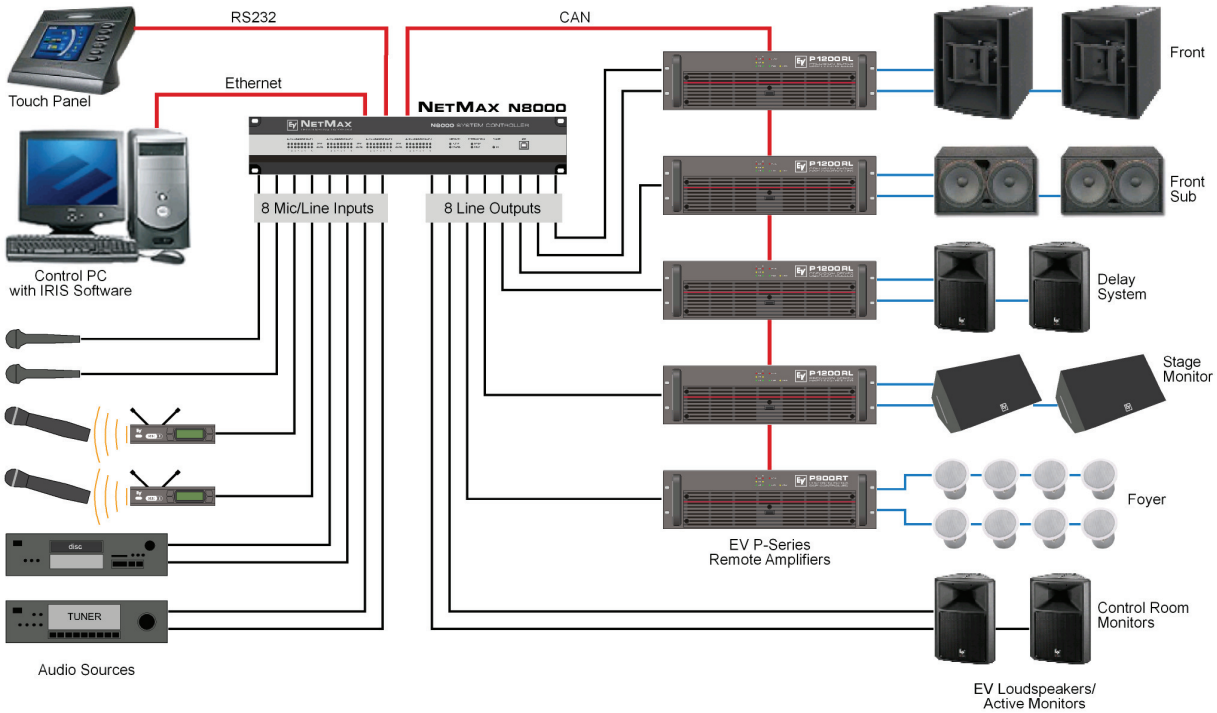

Installation in a multi-purpose hall

5.2 Troubleshootings

Problem: It is not possible to establish a connection with the N8000 via IRIS-Net.

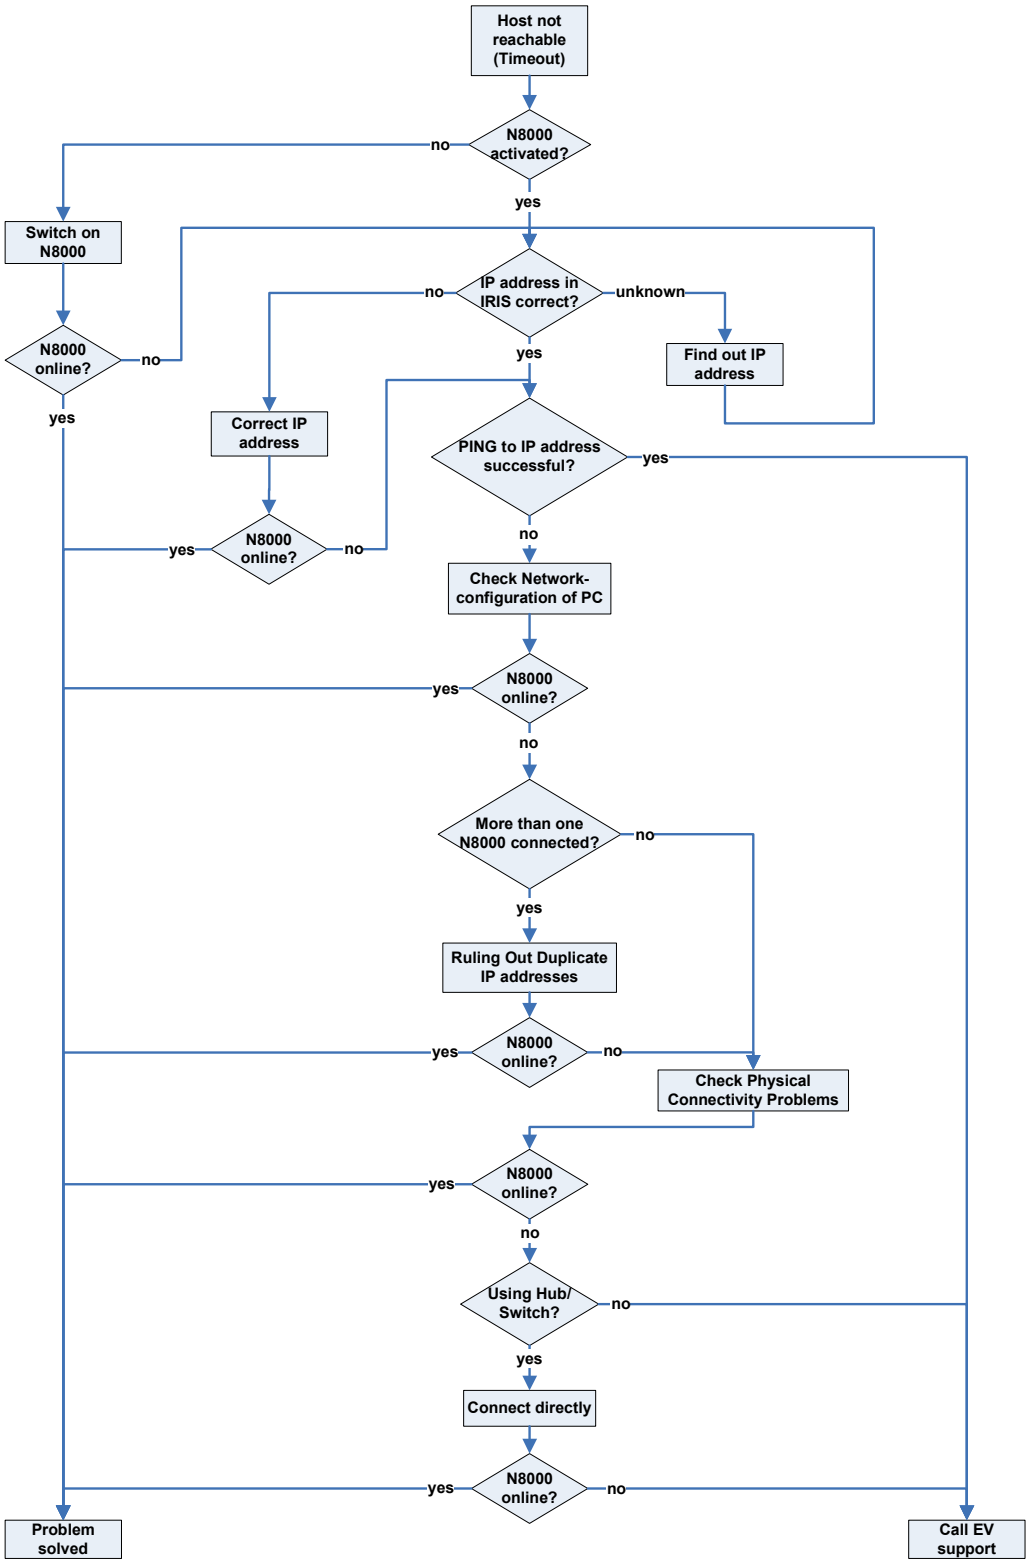

Check Network Configuration of PC:

Check the network configuration of the used PC. Remember that the network part of the used IP addresses that is used and the subnet mask of the PC and the N8000 have to be identical.

Ruling Out Duplicate IP-Adresses:

It is possible that the same IP address is allocated twice if there are more devices in an Ethernet network and if the IP addresses are allocated manually. Switch off the N8000 and try to ping the IP address of the off-state N8000 via a command line prompt (see page 31 of this manual). If the ping is successful, another device has the address of the off-state N8000. In this case, change the IP address of the device which is now answering or of the N8000 with the duplicate address (then you also have to change the IP address of the N8000 in IRIS-Net).

Check Physical Connectivity Problems:

When the PC and the N8000 are connected physically via the Ethernet, the following points have to be checked:

- Is the network cable undamaged and plugged in correctly?
- Is - if necessary - a crossover cable used?
- Do the indicator lights of the network socket of the PC, the N8000 and (if available) of the network devices between the PC and the N8000 glow after the network cable(s) has/have been plugged in?
- Is a problem indicated on the used network interface in the system control devices of the operating system?

Connect directly:

Establish a direct connection between the PC and the N8000 via a crossover cable in order to rule out internal problems in the network devices between the PC and the N8000. If an IP address had been set up automatically (DHCP) via a network device which is now no longer connected, this address has to be set up manually again.

5.3 Ethernet principles

The N8000 system controller can be connected to an Ethernet network via the Ethernet interface (RJ-45) on the rear panel. Ethernet is a computer networking technology for local networks. It is possible to connect two devices (hosts) directly via a crossed Ethernet cable (crossover cable) if this is necessary. If more than two devices have to be connected, they have to be connected via normal Ethernet cables (straight through cables) and a central node (hub or switch). For this purpose the central hub or switch has an extension (port) for every network member. The Ethernet interface of the N8000 is compatible with the following Ethernet standards:

- 10Base-T (IEEE 802.3i): Four wires (two twisted pairs) of CAT-3 or CAT-5 cables are used for this connection. The transfer rate is 10 MBit/s and the maximal length of a segment is 100 meters.

- 100Base-TX (IEEE 802.3u): Two twisted wire pairs are used for the connection (see above). However, in this case, a CAT-5 cable has to be used. 100Base-TX has a transfer rate of 100 MBit/s and is the standard Ethernet implementation nowadays.

IP addresses

Diverse network protocols can be used for the communication of the devices connected to the Ethernet network. The N8000 uses the TCP/IP protocol, thus, it is an IP network device. IP addresses are used for the logical addressing of devices in an IP network. The N8000 uses version IPv4 (Internet protocol version 4) for the addressing. Therefore, the length of an IP address is 32 bit (= 4 Byte). 4.3 billion unique addresses are theoretically possibl with this protocol. Normally IPv4 addresses are given in the dotted decimal notation, i.e. the four bytes are written as four decimals separated by dots. Thus, the general notation of an IPv4 address is AAA.BBB.CCC.DDD. An example of an IP address is 130.009.122.195. Zeros which stand in the first place can be omitted. That is the reason why the exemplary address can also be written as: 130.9.122.195.

The following table shows address sequences that should be used in private networks.

Class	Adress space	Subnet mask	CIDR	Number of IP addresses
A	10.0.0.0 - 10.255.255.255	255.0.0.0	10.0.0.0/8	16777216
B	172.16.0.0 - 172.31.255.255	255.240.0.0	172.16.0.0/12	1048576
C	192.168.0.0 - 192.168.255.255	255.255.0.0	192.168.0.0/16	65536
Link local	169.254.0.0 - 169.254.255.255	255.255.0.0	169.254.0.0/16	65536

Private IP addresses are especially of interest in networks which are connected to the Internet. Private IP addresses are not routed in the Internet. Thus, it is necessary to make an address conversion with NAT (Network Address Translation) or PAT (Port Address Translation = NAT and additional change of the port number) in order to be able to access the Internet. An benefit of this is that it is possible to connect several devices via a router with the Internet even when your Internet provider has only allocated one IP address. Additionally, the real IP address of the devices can be hidden from hackers by NAT/PAT (Security through Obscurity).

Subnet mask

An IP address is always divided into a network part (network address/ID) and a host part (host address/ID or device address). Devices are in the same network if, and only if, the network parts of their addresses are identical. Devices can interact directly with each other if they are in the same network. Ancillary equipment (e.g. a router) is necessary if devices in different networks should interact. Within one network host addresses may not be allocated twice.

For example, a network could e.g. split the 4 Byte (32 bit) of an IP address in a 3 Byte long network part and in 1 Byte long host part. The exact partitioning between network part and host part is given in the form of subnet masks. In this case, the partitioning of the first 24 bits or the last 8 bits would be made because of the subnet mask 255.255.255.0.

The CIDR notation which is designed to display a subnet mask is an alternative to the dotted decimal notation. So called suffixes are used in the CIDR notation. The suffix indicates the number of 1-bits in the subnet mask. Thus, the subnet mask 255.255.255.0 in dotted decimal notation would correspond to the suffix /24 as the first 24 places (in binary description) of an IP address are chosen as network address.

It is possible to impact the maximum number of the devices addressable within a network by choosing the subnet mask which results in different partitioning of the IP address in network part and in host part. For the exact number it has to be considered that the host part may neither be completely zero nor completely 1 in the binary description.

Example: In case of the above-mentioned example IP address 130.9.122.195 the network part would be 130.9.122.0 by using the subnet mask 255.255.255.0. So, each device (or interface) in the considered network uses an address of the type 130.9.122.DDD. As the values 00000000 and 11111111 are excluded for the host part DDD in binary description, the corresponding decimal values 1 to 254 for DDD are allowed. Thus, a maximum of 254 different devices can be addressed in a network and the corresponding addresses are 130.9.122.1 to 130.9.122.254.

Automatic/Manual Allocation of IP Addresses

IP addresses can be allocated both automatically and manually to a device in a network. If the address is allocated automatically via DHCP (Dynamic Host Configuration Protocol), the operation of a DHCP server in the network is necessary. This server makes it possible to dynamically allocate an IP address and additional configuration parameter to hosts in a network. The use of a DHCP server is especially useful for networks in which devices are often connected and removed.

If DHCP is used, certain incidents (e.g. the reboot of a device) can result in the change of the IP address of this device. If this device is a N8000 system controller, its configuration in IRIS-Net has to be modified to reflect the changed IP address. *For that reason it is not advisable to use DHCP for the dynamic configuration of N8000.* Instead, of that the network configuration of the N8000 should be done manually.

When a new Ethernet network which will not be connected to the Internet is established, any network part of the IP addresses can be defined. By choosing the appropriate subnet mask it is possible to adapt the number of the addressable devices to your requirements.

Please contact your network administrator regarding details on the correct network configurations if one or several N8000 is/are integrated in an existing Ethernet network (with or without DHCP server) or if the network is connected to the Internet.

5.4 CAN-Bus Principles

The network topology used by the CAN bus is based on the so-called “bus or line topology”, i.e. all participants are connected via a single two-wire cable (Twisted-Pair cable, shielded or unshielded) with the cabling running from one participant on the bus to the next, allowing unlimited communication among all devices. In general, it does not matter if the bus member is a power amplifier, a N8000 or a UCC1 USB-CAN converter. Thus, the N8000 can be connected at any place of the CAN bus. In total, up to 100 devices can be connected to one CAN bus.

The CAN bus has to be terminated with a 120 Ω terminating resistor at both ends. If the termination is missing or an improper resistor value is used, network errors can occur as a signal is reflected on the bus at both bus ends. Because of the superposition of the reflection with the original signal, the original signal is blurred. This may result in the loss of data. In order to prevent or minimize reflections at the bus ends, terminators are used as they "absorb" the energy of the signal.

Since the CAN interfaces of all EVI Audio appliances are galvanically separated from the rest of the circuitry, network cabling also carries a common ground conductor (CAN_GND) ensuring that all CAN-interfaces in the network are connected to a common ground potential.

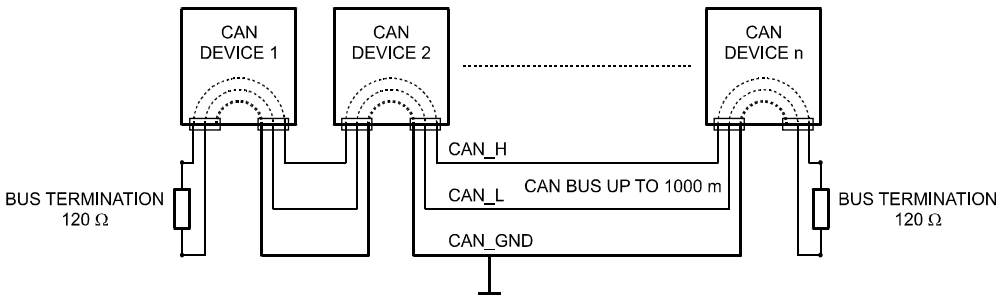

Bus Topology of the CAN bus

By using a CAN bus repeater a connection between two independent and self-contained CAN bus systems can be created. Thus, the following can be achieved:

- Increase of the max. number of members

  A maximum of 100 devices can be connected to one CAN bus. This number can be increased up to 250 by connecting several CAN bus systems. This limitation of exactly 250 devices results from the addressing scheme used by the CAN bus. The addressing scheme allows the allocation of a maximum of 250 different CAN device addresses.

- Improvement of signal quality

  With CAN bus systems, whose bus length exceeds 1000 meters, a CAN bus repeater should be used. The CAN bus repeater accomplishes a signal processing and a reinforcement of the

bus signals. The internal running time of the repeaters of approx. 150 ns corresponds to an extension of the bus over approx. 45 meters.

- Creation of alternative network topologies

  By using one or several repeaters, not only the above-mentioned bus topology, but the creation of other network topologies are also possible. In the following figure a star topology from three independent CAN bus systems is given as example. The three CAN buses are connected via two repeaters.

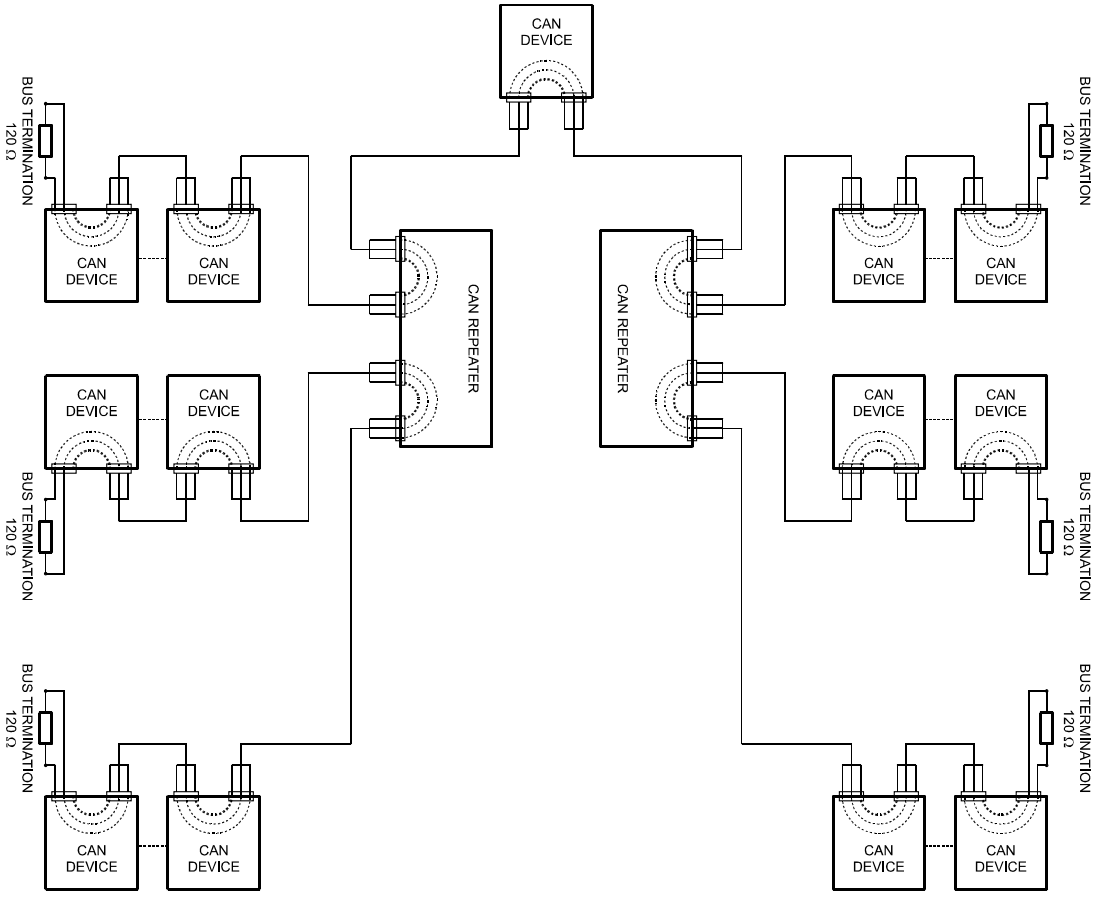

System Examples

The following illustrations show examples of the data-bus wiring for different sizes of CAN-bus networks..

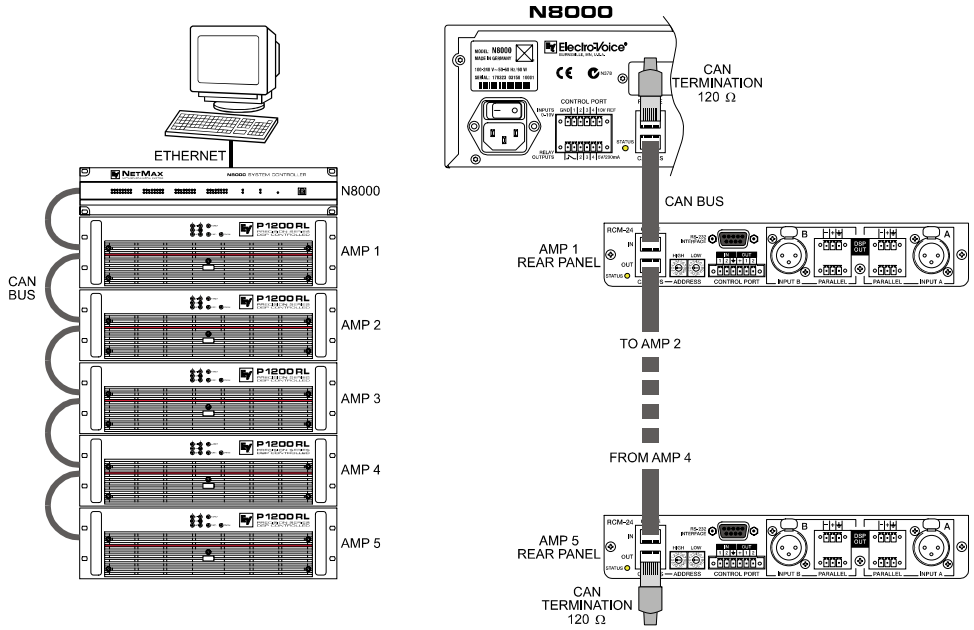

System with 5 power amps and 1 N8000 at the beginning of the bus. Termination plugs at the N8000 (first unit on the bus) and at amp 5 (last unit on the bus).

.

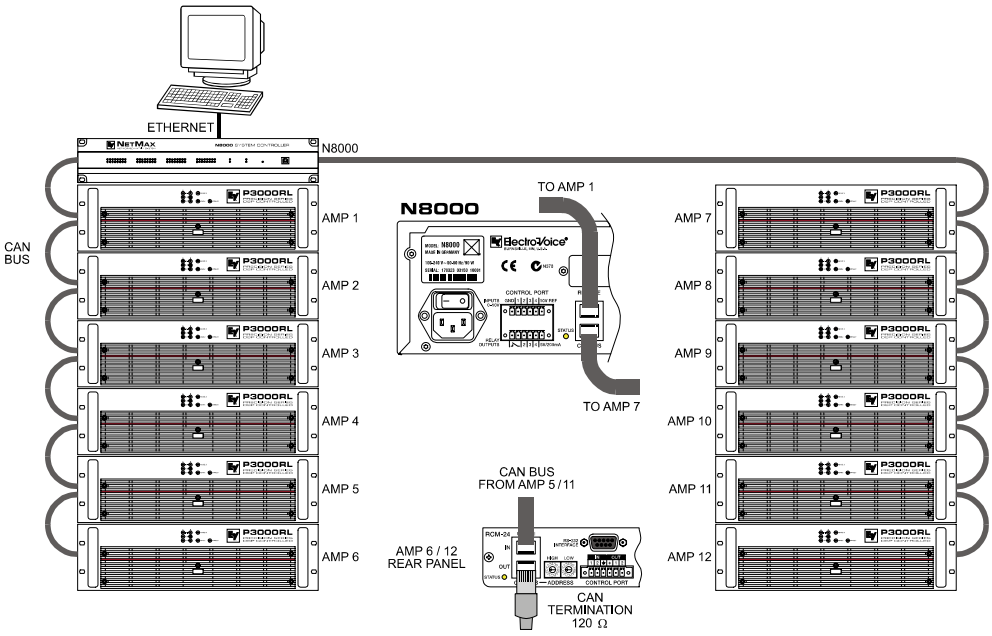

System with 2 amp-racks and 1 N8000/PC in the middle. Termination plugs at power amp 6 (first unit on the bus) and power amp 12 (last unit on the bus).

Performance Specifications

According to the ISO 11898-2 standard, CAN-bus data transfer cabling has to be carried out using Twisted-Pair cables with or without shielding providing a characteristic impedance of 120 Ω. Both ends of a CAN-bus need to be terminated with 120 Ω termination-plugs. The maximum bus-length depends on the actual data transfer rate, the kind of data transfer cable being used, as well as the total number of participants on the bus. The following table shows the most essential requirements for CAN-networks consisting of up to 64 participants.

Bus Length (in m)	Date Transmission Cable		Termination (in Ω)	Max. Data Transfer Rate
	Resistance per Unit Length (in mΩ/m)	Cable Diameter		
0...40	< 70	0,25...0,34 mm² AWG23, AWG22	124	1000 kbit/s at 40 m
40...300	< 60	0,34...0,6 mm² AWG22, AWG20	127	500 kbit/s at 100 m
300 ... 600	< 40	0,5...0,6 mm² AWG 20	150...300*	100 kbit/s at 500 m
600...1000	< 26	0,75...0,8 mm² AWG 18	150...300*	62,5 kbit/s at 1000 m

* With longer cables and many participants on the CAN-bus, termination resistors with higher impedance than the specified 120 Ω are recommended to reduce the ohmic load of the interface drivers and therefore the voltage drop between the two cable-ends.

The following table is meant for first assessment of necessary cable diameters for different bus lengths and bus-participant numbers.

Bus Length (in m)	Number of Units on the CAN-Bus		
	32	64	100
100	0,25 mm² bzw. AWG24	0,34 mm² bzw. AWG22	0,34 mm² bzw. AWG22
250	0,34 mm² bzw. AWG22	0,5 mm² bzw. AWG20	0,5 mm² bzw. AWG20
500	0,75 mm² bzw. AWG18	0,75 mm² bzw. AWG18	1,0 mm² bzw. AWG17

Additionally, the length of branch lines - for participants that are not directly connected to the CAN-bus - is also of importance. For data transfer rates of up to 125 kbit/s, the maximum length of a single stub cable should not exceed 2 meters. For higher bit rates a maximum length of only 0.3 meter is still permissible. The entire length of all branch lines should not exceed 30 meters.

General Note:

- As long as only short distances (up to 10 meters) are concerned, common RJ-45 patch cables with a characteristic impedance of 100 Ω (AWG 24 / AWG 26) can be used for the cabling inside of a rack mounted system.
- The previously outlined guidelines for network cabling are mandatory as far as the rack mounted shelve interconnection or fixed installations are involved.

5.5 IP Address Table

Project: _____

Subnet mask	
Gateway	

Device	IRIS-Net Device Name	Location / Description	IP Address

Electro-Voice®

BEDIENUNGSANLEITUNG

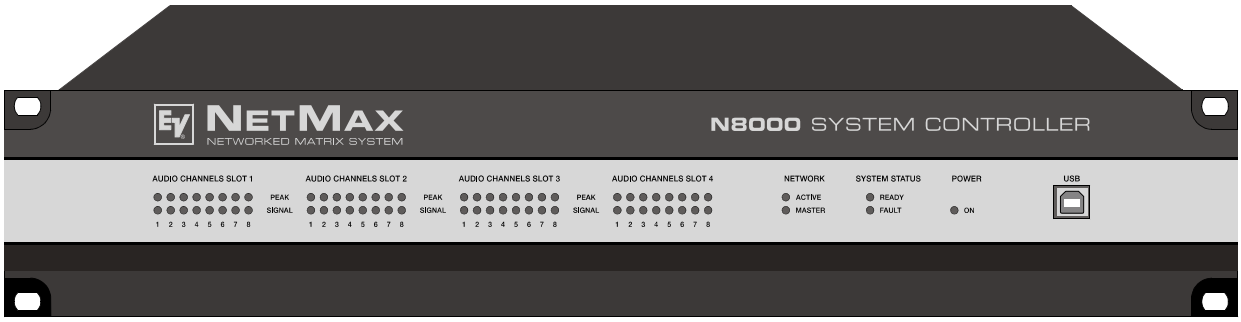

NETMAX
NETWORKED MATRIX SYSTEM

N8000 SYSTEM CONTROLLER

Einleitung 46
Systembeschreibung 46
N8000 Eigenschaften 47
Auspacken und Garantie 48
Installationshinweise 49
IRIS-Net 49
Browser Interface 50
Bedienelemente und Anschlüsse 51
Frontblende 51
SIGNAL / PEAK-LEDs 51
NETWORK-LEDs 51
SYSTEM STATUS-LEDs 52
POWER-LED 52
USB-Schnittstelle 52
Rückseite 53
AUDIO SLOTs 53
Netzwerk-Modul-Slot 53
ETHERNET-Schnittstelle 54
RS-232-Schnittstellen 54
REMOTE CAN BUS 54
CONTROL PORT 55
Netzbuchse und Netzschalter 55
Inbetriebnahme 56
Aufbauverfahren 56
Installation von Erweiterungskarten 57
Systemerweiterung mit analogen/digitalen Audioein- bzw. Ausgängen 57
Systemerweiterung mit einem Netzwerk-Modul 57
Erweiterung der DSP-Leistung des Systems 58
Schnittstellenbeschreibung 58
Ethernet-Schnittstelle 58
CAN-Schnittstelle 59
USB-Schnittstelle 61
RS-232-Schnittstelle 62
CONTROL PORT 63
Audioschnittstellen 65
Netzwerk-Konfiguration 67
Einführung 67
Konfiguration 69
Aufbau und Überprüfung einer Ethernet-Verbindung mit dem N8000 69
Anhang 73
Anwendungsbeispiel 73
Installation in einer Mehrzweckhalle 73
Problemlösungen 74
Ethernet-Grundlagen 75
IP-Adressen 76
Subnetzmaske 77
Automatische/manuelle Vergabe von IP-Adressen 77
CAN-Bus-Grundlagen 78
Systembeispiele 80
Leitungsspezifikation 81
Tabelle IP-Adressen 83

Specifications/Technische Daten 84
Block Diagram/Blockschaltbild 86
Dimensions/Abmessungen 87

WICHTIGE SICHERHEITSHINWEISE

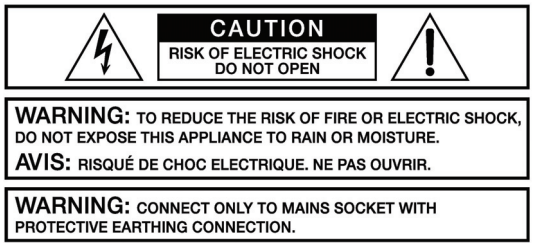
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
AVIS: RISQUÉ DE CHOC ELECTRIQUE. NE PAS OUVRIR.
WARNING: CONNECT ONLY TO MAINS SOCKET WITH PROTECTIVE EARTHING CONNECTION.

Das Blitzsymbol innerhalb eines gleichseitigen Dreiecks soll den Anwender auf nicht isolierte Leitungen und Kontakte im Geräteinneren hinweisen, an denen hohe Spannungen anliegen, die im Fall einer Berührung zu lebensgefährlichen Stromschlägen führen können.

Das Ausrufezeichen innerhalb eines gleichseitigen Dreiecks soll den Anwender auf wichtige Bedienungs- sowie Servicehinweise in der zum Gerät gehörenden Literatur aufmerksam machen.

1. Lesen Sie diese Hinweise.
2. Heben Sie diese Hinweise auf.
3. Beachten Sie alle Warnungen.
4. Richten Sie sich nach den Anweisungen.
5. Betreiben Sie das Gerät nicht in unmittelbarer Nähe von Wasser.
6. Verwenden Sie zum Reinigen des Gerätes ausschließlich ein trockenes Tuch.
7. Verdecken Sie keine Lüftungsschlitze. Beachten Sie bei der Installation des Gerätes stets die entsprechenden Hinweise des Herstellers.
8. Vermeiden Sie die Installation des Gerätes in der Nähe von Heizkörpern, Wärmespeichern, Öfen oder anderer Wärmequellen.
9. Achtung: Gerät nur an Netzsteckdose mit Schutzleiteranschluss betreiben. Setzen Sie die Funktion des Schutzleiteranschlusses des mitgelieferten Netzanschlusskabels nicht außer Kraft. Sollte der Stecker des mitgelieferten Kabels nicht in Ihre Netzsteckdose passen, setzen Sie sich mit Ihrem Elektriker in Verbindung.
10. Sorgen Sie dafür, dass das Netzkabel nicht betreten wird. Schützen Sie das Netzkabel vor Quetschungen insbesondere am Gerätestecker und am Netzstecker.
11. Verwenden Sie mit dem Gerät ausschließlich Zubehör/Erweiterungen, die vom Hersteller hierzu vorgesehen sind.
12. Ziehen Sie bei Blitzschlaggefahr oder bei längerem Nichtgebrauch den Netzstecker.
13. Überlassen Sie sämtliche Servicearbeiten und Reparaturen einem ausgebildeten Kundendiensttechniker. Servicearbeiten sind notwendig, sobald das Gerät auf irgendeine Weise beschädigt wurde, wie z.B. eine Beschädigung des Netzkabels oder des Netzsteckers, wenn eine Flüssigkeit in das Gerät geschüttet wurde oder ein Gegenstand in das Gerät gefallen ist, wenn das Gerät Regen oder Feuchtigkeit ausgesetzt wurde, oder wenn es nicht normal arbeitet oder fallengelassen wurde.
14. Stellen Sie bitte sicher, dass kein Tropf- oder Spritzwasser ins Geräteinnere eindringen kann. Platzieren Sie keine mit Flüssigkeiten gefüllten Objekte, wie Vasen oder Trinkgefäße, auf dem Gerät.
15. Um das Gerät komplett spannungsfrei zu schalten, muss der Netzstecker gezogen werden.
16. Beim Einbau des Gerätes ist zu beachten, dass der Netzstecker leicht zugänglich bleibt.

Entsorgung von gebrauchten elektrischen und elektronischen Geräten (Anzuwenden in den Ländern der Europäischen Union und anderen europäischen Ländern mit einem separaten Sammelsystem für diese Geräte) Das Symbol auf dem Produkt oder seiner Verpackung weist darauf hin, dass dieses Produkt nicht als normaler Haushaltsabfall zu behandeln ist, sondern bei einem Telex Händler abgegeben werden muss.

WICHTIGE SERVICEHINWEISE

ACHTUNG: Diese Servicehinweise sind ausschließlich zur Verwendung durch qualifiziertes Servicepersonal. Um die Gefahr eines elektrischen Schlages zu vermeiden, führen Sie keine Wartungsarbeiten durch, die nicht in der Bedienungsanleitung beschrieben sind, außer Sie sind hierfür qualifiziert. Überlassen Sie sämtliche Servicearbeiten und Reparaturen einem ausgebildeten Kundendiensttechniker.

1. Bei Reparaturarbeiten im Gerät sind die Sicherheitsbestimmungen nach EN 60065 (VDE 0860) einzuhalten.
2. Bei allen Arbeiten, bei denen das geöffnete Gerät mit Netzspannung verbunden ist und betrieben wird, ist ein Netz-Trenntransformator zu verwenden.
3. Vor einem Umbau mit Nachrüstsätzen, Umschaltung der Netzspannung oder sonstigen Modifikationen ist das Gerät stromlos zu schalten.
4. Die Mindestabstände zwischen netzspannungsführenden Teilen und berührbaren Metallteilen (Metallgehäuse) bzw. zwischen den Netzpolen betragen 3 mm und sind unbedingt einzuhalten.
5. Die Mindestabstände zwischen netzspannungsführenden Teilen und Schaltungsteilen, die nicht mit dem Netz verbunden sind (sekundär), betragen 6 mm und sind unbedingt einzuhalten.
6. Spezielle Bauteile, die im Stromlaufplan mit dem Sicherheitssymbol gekennzeichnet sind, (Note) dürfen nur durch Originalteile ersetzt werden.
7. Eigenmächtige Schaltungsänderungen dürfen nicht vorgenommen werden.
8. Die am Reparaturort gültigen Schutzbestimmungen der Berufsgenossenschaften sind einzuhalten. Hierzu gehört auch die Beschaffenheit des Arbeitsplatzes.
9. Die Vorschriften im Umgang mit MOS-Bauteilen sind zu beachten.

NOTE: **SAFETY COMPONENT (MUST BE REPLACED BY ORIGINAL PART)**

1 Einleitung

Wir möchten Ihnen zuallererst danken und Sie beglückwünschen, dass Sie sich für den NetMax N8000 System Controller von Electro-Voice entschieden haben. Um optimale Leistung mit diesem Gerät zu erzielen und um Schäden durch unsachgemäße Bedienung zu vermeiden, lesen Sie bitte diese Bedienungsanleitung aufmerksam durch, bevor Sie den NetMax N8000 betreiben.

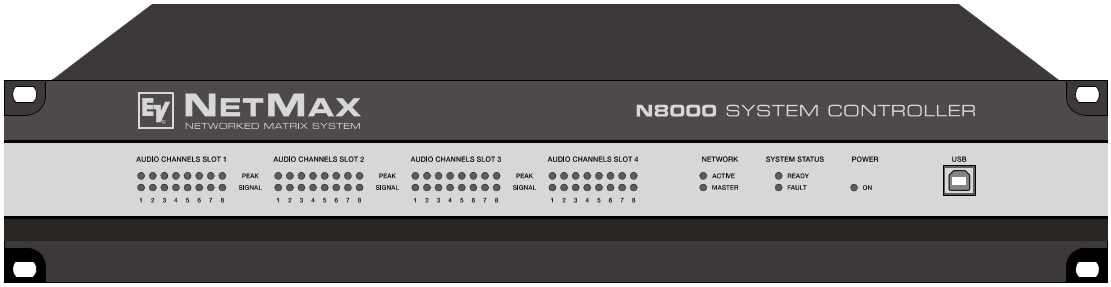

N8000 Frontansicht

1.1 Systembeschreibung

NetMax ist ein modulares, netzwerkfähiges und frei konfigurierbares Audiosystem, mit dem komplette Systemlösungen erstellt werden können, die exakt den kundenspezifischen Anforderungen entsprechen. Einsatzgebiete sind alle Arten von professionellen Audio-Installationen, komplexe Gebäude-Beschallungsanlagen sowie Concert Sound Applikationen. NetMax integriert alle Komponenten von der Matrix bis zu den Lautsprechern einschließlich der Systemsteuerung und -überwachung in ein gemeinsames Audio-Konzept. Die Konfiguration, Bedienung und Überwachung eines NetMax Systems erfolgt durch die PC-Software IRIS-Net – Intelligent Remote & Integrated Supervision.

Die Zentraleinheit von NetMax ist der N8000 System Controller mit bis zu 32 Audiokanälen, Mixer- und Matrixfunktionen, Signal Processing und umfangreichen Steuerungs- und Überwachungsfunktionen. Mehrere N8000 können über ein CobraNet™ Audio- und Steuer-Netzwerk verbunden und so zu einem großen, dezentralen Audiosystem zusammengestellt werden.

NetMax verwaltet auch die Electro-Voice Precision Series Remote Verstärker einschließlich ihrer Lautsprecher- und Systemüberwachungsfunktionen. Die Anbindung erfolgt über CAN direkt an den N8000.

Ein NetMax System erfüllt alle relevanten Sicherheitsforderungen. Sämtliche Audiowege, Schnittstellen und Prozessorsysteme werden überwacht und im Fehlerfall zur Anzeige gebracht. Durch die Verwendung von CobraNet™ können redundante Netzwerke aufgebaut werden.

1.2 N8000 Eigenschaften

Der NetMax N8000 ist ein universell einsetzbarer digitaler Audio System Controller mit herausragenden Leistungsmerkmalen. Ein kompromissloses Schaltungsdesign sorgt für exzellente Audioqualität und klaren Sound. Erreicht wird dies durch den Einsatz von High-End 24 Bit A/D- und D/A-Wandlern mit 120 dB Dynamikbereich, hochwertigen Eingangs- und Ausgangsstufen im Analogbereich und digitaler Signalverarbeitung mit optimierten 48 Bit Double-Precision Algorithmen. Damit ist der N8000 selbst für anspruchsvolle Anwendungen in Theatern, Konzertsälen, Veranstaltungszentren, großen Kirchen, usw. bestens geeignet.

Das modulare Hardware-Design macht den NetMax N8000 äußerst flexibel und eröffnet viele weitere Einsatzgebiete. Vier Steckplätze für 8-Kanal Audiomodule auf der Geräterückseite ermöglichen bis zu 32 lokale Audiokanäle. Jeder Steckplatz kann entweder mit einem Audio-Eingangsmodul oder einem Audio-Ausgangsmodul bestückt werden. Damit lassen sich bereits in einem einzelnen Gerät die verschiedensten Konfigurationen, z. B. 8-in/8-out, 8-in/16-out, 8-in/24-out, 16-in/16-out, 24-in/8-out usw., realisieren. Darüber hinaus kann der N8000 mit einem CobraNet™ Netzwerkmodul ausgestattet werden. Mehrere N8000 können somit in einem Netzwerk integriert und zu einem großen weit verzweigten System verbunden werden.

Die Signalverarbeitung im N8000 erfolgt auf leistungsstarken Audio-Signalprozessoren, wobei je nach Ausbaustufe bis zu 8 DSP's zur Verfügung stehen. Die Software umfasst eine Vielzahl an frei programmierbaren Signalverarbeitungs-Komponenten. Unter anderem sind dies Filter mit allen möglichen Charakteristiken, Parametrische und Grafische Equalizer, Frequenzweichen, Matrix-Router und Matrix-Mischer, Delays, Dynamik-Funktionen, usw. Durch völlig beliebige Kombination und Verdrahtung dieser Komponenten können Konfigurationen für die verschiedensten Anwendungen geschaffen werden. Die Programmierung geschieht mit Hilfe der PC-Software IRIS-Net. Damit wählen Sie die gewünschten Komponenten aus einer Signalverarbeitungs-Bibliothek, platzieren diese in einen Arbeitsbereich auf dem PC-Bildschirm, und verdrahten sie zu einem Signalfluß-Diagramm. Die so erstellte Signal-Struktur muss nur noch zum N8000 übertragen werden und ist sofort einsatzbereit.

Die leistungsfähige Signalverarbeitung erlaubt auch komplexe Konfigurationen für die Feineinstellung des Sounds je nach Räumlichkeit oder Art der Veranstaltung. So kann die Klang-Charakteristik für die PA-Lautsprecher, Monitor-Lautsprecher, Front Fill Systeme, sowie für die Beschallung von Nebenräumen, Lobby, Angestellten-Bereichen usw. völlig individuell eingestellt und optimiert werden. Anders gesagt, der N8000 meistert jede Anwendung, auch große und komplexe Systeme, absolut exakt und zuverlässig.

Neben den reinen Audio-Funktionen ist der NetMax N8000 mit vielfältigen Kontroll-Funktionen ausgestattet. Eine Zeitsteuerung mit Kalenderfunktion dient zur Programmierung von einmaligen oder periodisch wiederkehrenden Ereignissen. Die Wiederholung kann jährlich, monatlich, wöchentlich, täglich, stündlich oder sogar in noch kürzeren Zeiträumen stattfinden. Außerdem können Tagesprogramme erstellt und diese zu Wochenabläufen kombiniert werden. Mit der Ereignis-Steuerung können Reaktionen auf bestimmte Ereignisse oder Systemzustände konfiguriert werden, z. B. beim Über- oder Unterschreiten von Schwellwerten. Fehler im Gerät oder im gesamten NetMax System werden automatisch erkannt, und können je nach Bedarf auf dem PC-Bildschirm angezeigt oder an externe Stellen gemeldet werden. Fehler und sonstige Ereignisse werden in einer internen Protokoll-Datei mit Datum und Uhrzeit aufgezeichnet, wobei bestimmt werden kann, welche Fehlerarten oder Ereignisse erfasst werden sollen. Das Protokoll kann jederzeit ausgelesen und am PC-Bildschirm dargestellt werden. Im NetMax N8000 lassen

sich einzelne Funktionen zu komplexen Abläufen integrieren. So können z. B. mehrere Parameter mit ihren jeweiligen Werten oder Zuständen in einer Szene abgelegt und zu einem beliebigen Zeitpunkt manuell oder automatisch verändert werden.

Für die Anbindung an Netzwerke und externe Komponenten ist der NetMax N8000 mit allen relevanten Schnittstellen standardmäßig bestückt. Der Ethernet Port erlaubt die Anbindung an bestehende Gebäudenetzwerke (Intranet) und die Kommunikation über das Internet. Ethernet ist auch die übliche Verbindung zwischen einem oder mehreren N8000 und einem PC mit IRIS-Net Software. Darüber läuft die Konfiguration, Steuerung und Überwachung eines kompletten NetMax Systems. Zwei serielle RS-232 Ports können benutzt werden, um den N8000 von externen Multi-Media Systemen, z. B. Crestron™ oder AMX™, zu steuern. Hierfür steht ein offenes Schnittstellen-Protokoll zur Verfügung. Der CAN-Bus dient als Verbindung zu Electro-Voice Remote Verstärkern. Bis zu 100 Verstärker können über CAN an einen einzelnen N8000 angeschlossen und zusammen mit weiteren N8000 und Verstärkern zu einem komplexen und leistungsfähigen Audiosystem integriert werden. Weiterhin findet sich am NetMax N8000 ein Control Port, der frei programmierbare Steuereingänge und Steuerausgänge bietet. An die Steuereingänge (GPI's) können entweder Schalter oder Potentiometer bzw. externe Steuerspannungen angeschlossen werden und es lassen sich beliebige Logik- oder Analogfunktionen programmieren. An den Steuerausgängen (GPO's) können externe Elemente angeschlossen werden, die etwa zur Signalisierung bestimmter Zustände verwendet werden können. Der USB Port an der Frontblende des N8000 dient zum Anschluss eines PCs auch im eingebauten Zustand, d.h. wenn der Ethernet-Port womöglich nur schlecht erreichbar ist. Der USB Port kann zur Übertragung einer Datei mit der gesamten N8000-Konfiguration vom N8000 auf den PC bzw. vom PC zurück auf den N8000 verwendet werden. Auch die Parameteränderung der Ethernet-Schnittstelle ist über den USB Port möglich.

Höchste Ansprüche wurden auch an die Konstruktion und mechanische Verarbeitung gestellt. Das Chassis ist besonders robust und schützt so die Elektronik wirkungsvoll vor äußeren Einflüssen. Ein temperaturgesteuerter Lüfter sorgt für thermische Stabilität und gleich bleibende Umgebungsbedingungen innerhalb des Geräts. Alle Audioschnittstellen sind elektronisch symmetrisch und mit verschraubbaren Phoenix-Steckverbindern ausgeführt.

In dieser Bedienungsanleitung werden Sie noch viele weitere Eigenschaften des NetMax N8000 kennen lernen. Lesen Sie deshalb bitte aufmerksam weiter und bewahren Sie diese gut auf, um sie zum Nachschlagen jederzeit griffbereit zu haben.

1.3 Auspacken und Garantie

Öffnen Sie die Verpackung und entnehmen Sie den N8000. Dem Gerät liegt folgendes Zubehör bei:

- N8000 Benutzerhandbuch (dieses Dokument)
- Netzkabel
- 2 Stück CAN-Abschlusswiderstände
- 2 Stück Phoenix-Stecker 6-polig
- Garantiekarte

Überprüfen Sie bitte, ob die Garantiekarte vollständig ausgefüllt ist, denn nur so können Sie etwaige Garantieansprüche geltend machen. Bewahren Sie zur Garantiekarte auch den Kaufbeleg und ebenso die Verpackung für eventuelle Rücksendung gut auf.

1.4 Installationshinweise

Generell ist der N8000 so aufzustellen oder zu montieren, dass die Luftzufuhr und die Entlüftung an beiden Geräteseiten nicht behindert werden. Die Belüftungsrichtung ist von links nach rechts, wenn man das Gerät von der Frontseite betrachtet. Geräte mit umgekehrter Luftführung sollen möglichst nicht im gleichen Rack/Schrank verbaut werden. Beim Einbau in Gehäuse und Gestellschränke ist ein freier Luftkanal zwischen den N8000 Geräteseiten und der Schrank/ Rack-Seitenwand bis zur oberen Rack- oder Schrankentlüftung vorzusehen, um eine ausreichende Belüftung der Geräte zu gewährleisten. Oberhalb des Schrankes soll ein freier Raum von mindestens 100 mm für die Entlüftung zur Verfügung stehen.

ACHTUNG:
Die max. Umgebungstemperatur von +40°C soll für störungsfreien Betrieb nicht überschritten werden.

Beim Einbau in Gestellschränken oder Transport-Racks sollen in jedem Fall handelsübliche Einbauschienen verwendet werden, um ein Verwinden der Frontblende zu verhindern.

Der N8000 ist zu schützen vor: Tropf- oder Spritzwasser, direkter Sonnenbestrahlung, hoher Umgebungstemperatur oder unmittelbarer Einwirkung von Wärmequellen, hoher Luftfeuchtigkeit, starken Staubablagerungen und starken Vibrationen.

Können die angeführten Forderungen nicht dauerhaft gewährleistet werden, so ist eine regelmäßige Wartung des Geräts zwingend erforderlich, um etwaigen Ausfällen vorzubeugen, die wesentlich durch negative Umwelteinflüsse entstehen können.

Wenn der N8000 direkt von einem kalten an einen warmen Ort gebracht wird, kann sich Feuchtigkeit auf Innenteilen niederschlagen. Das Gerät darf erst in Betrieb genommen werden, wenn es sich auf die geänderte Temperatur erwärmt hat (nach etwa einer Stunde). Sollte ein fester Gegenstand oder Flüssigkeit in das Gehäuse gelangen, trennen Sie sofort das Gerät vom Netz und lassen Sie das Gerät von einer autorisierten Servicestelle überprüfen, bevor Sie es weiterverwenden.

1.5 IRIS-Net

Zur Konfiguration und Bedienung des N8000 System Controller wird die PC-Software IRIS-Net (Intelligent Remote & Integrated Supervision) verwendet. Die gesamte Konfiguration des N8000 kann hierbei offline (d.h. ohne Verbindung zwischen PC und N8000) auf dem PC erstellt werden. Nach Herstellung einer Verbindung zwischen PC und N8000 über Ethernet kann die

Konfiguration auf diesen übertragen werden. Neben der Erstellung von Konfigurationen kann IRIS-Net auch für die umfassende Kontrolle und Überwachung von N8000 System Controllern (und daran angeschlossenen Electro-Voice Precision Series Remote Amplifier) genutzt werden. Hinweise für die Installation von IRIS-Net auf Ihrem PC finden Sie in der Datei „iris_readme.htm“. Die Bedienungsanleitung von IRIS-Net wird während dessen Installation automatisch auf den Computer kopiert.

Eine IRIS-Kurzeinführung finden Sie im Menü unter ? > Quick Start Guide ... .

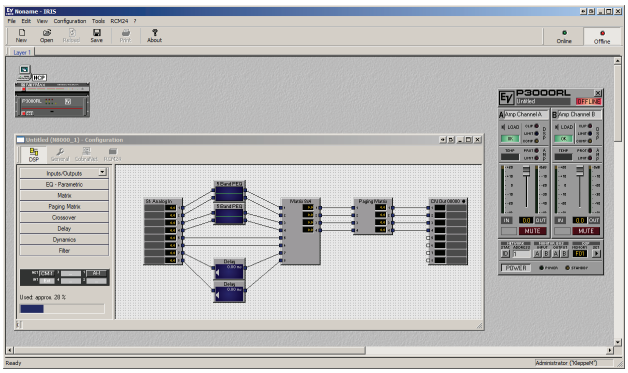

IRIS-Net (Intelligent Remote & Integrated Supervision)

1.6 Browser Interface

Das N8000-Browser-Interface stellt einen Teil der in IRIS-Net vorhandenen Möglichkeiten zur Konfiguration und Bedienung des N8000 zur Verfügung. Zur Nutzung des Browser-Interface ist jeder herkömmlicher Internet Browser mit aktiviertem JavaScript und CSS verwendbar. Detaillierte Informationen über das N8000-Browser-Interface finden Sie im N8000-Browser-Manual. Sie finden dieses im Unterverzeichnis \Documentation\NetMax im IRIS-Installationsverzeichnis.

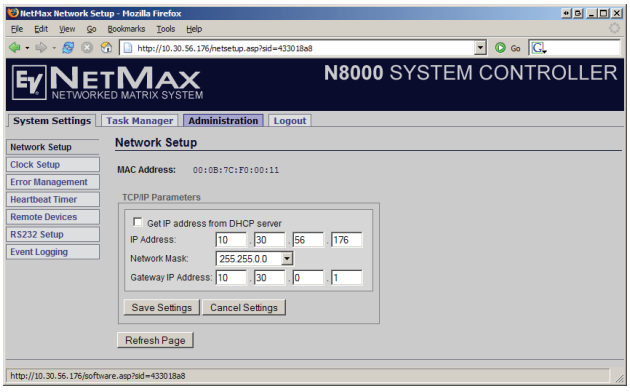

NetMax N8000 Browser Interface

2 Bedienelemente und Anschlüsse

2.1 Frontblende

Die N8000 Frontblende enthält Pegel- und Status-Anzeigen sowie die Anschlussmöglichkeit für einen PC über eine USB-Schnittstelle. Für alle 32 Audiokanäle sind SIGNAL / PEAK-LEDs vorhanden. Die Kanäle sind in 8er Gruppen zusammengefasst und den Audio-Slots 1 bis 4 auf der Rückseite zugeordnet. Weitere LEDs informieren über den Netzwerk-, System- und Geräte-Status und geben einen schnellen Überblick, ob das System einwandfrei arbeitet oder ob ein Problem aufgetreten ist.

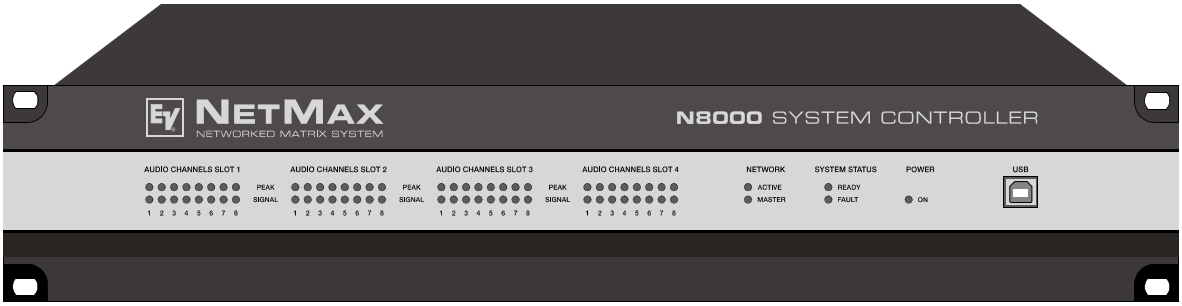

SIGNAL / PEAK-LEDs

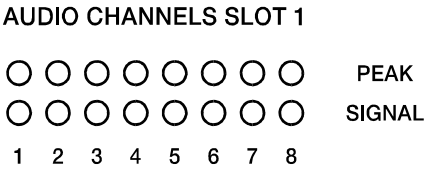

Diese LEDs dienen zur Aussteuerungskontrolle für die Eingangs- und Ausgangssignale. Die SIGNAL-LED beginnt bei -25 dBu zu leuchten und zeigt an, ob generell ein Signal am Eingang oder am Ausgang vorhanden ist. Die PEAK-LED leuchtet auf, wenn der N8000 nahe an der Aussteuergrenze betrieben wird. Die Schwelle liegt bei +18 dBu. Die maximale Aussteuerung beträgt +21 dBu, es verbleibt somit noch eine Reserve von 3 dB bis zur endgültigen Clip-Grenze.

Die PEAK-LEDs sollten nur bei Dynamik-Spitzen sporadisch aufflackern. Wenn die PEAK-LED eines Eingangs dauernd oder sehr häufig leuchtet, sollten Sie das entsprechende Eingangssignal etwas zurücknehmen. Falls die PEAK-LED eines Ausgangs dauernd aufleuchtet, sollte die interne Verstärkung reduziert werden, da sonst der N8000 permanent übersteuert wird.

NETWORK-LEDs

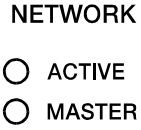

Wenn der N8000 an einem Audio-Netzwerk, z. B. CobraNet™, betrieben wird, zeigen diese LEDs den Netzwerk-Status an. Die ACTIVE-LED leuchtet, wenn Audiodaten über das Netzwerk gesendet oder empfangen

werden. Ist die LED aus, findet keine Kommunikation über das Audio-Netzwerk statt. Die MASTER-LED leuchtet, wenn der N8000 als Clock-Master – bei CobraNet™ auch als Conductor bezeichnet – fungiert. In einem Audio-Netzwerk gibt es immer nur einen Master, das heißt, die MASTER-LED muss und darf nur an einem N8000 innerhalb des Netzwerk-Verbunds leuchten. Falls der momentan als Clock-Master fungierende N8000 ausfällt oder aus dem Netzwerk entfernt wird, wird diese Funktion automatisch von einem anderen N8000 übernommen.

SYSTEM STATUS-LEDs

SYSTEM STATUS

○ READY

○ FAULT

Diese LEDs zeigen den Geräte- oder System-Status an. Die READY-LED leuchtet grün, wenn das Gerät nach dem Einschalten gebootet hat und betriebsbereit ist. Die FAULT-LED zeigt durch ihr Aufleuchten einen internen Fehler des N8000 oder einen Fehler im System an. Während der Konfiguration des N8000 kann festgelegt werden, welche Fehler zu einer Anzeige führen sollen. Wenn die FAULT-LED leuchtet, sollte umgehend überprüft werden, was die Ursache ist. Mit Hilfe der PC-Software IRIS-Net ist eine detaillierte Diagnose möglich. Die Fehlerursache muss umgehend beseitigt werden.

POWER-LED

POWER

○ ON

Diese LED leuchtet grün, wenn der N8000 eingeschaltet ist. Falls die ON-LED trotz eingeschaltetem Gerät nicht leuchtet, ist das Gerät entweder nicht mit dem Stromnetz verbunden oder die interne Primärsicherung ist defekt.

USB-Schnittstelle

USB



Die USB-Schnittstelle dient zum frontseitigen Anschluss eines PCs. Damit ist es möglich, den N8000 auch im eingebauten Zustand – wenn die Ethernet-Schnittstelle an der Rückseite womöglich nicht mehr zugänglich ist – mit einem PC zu verbinden. Über die USB-Schnittstelle können Netzwerkparameter eingestellt und Dateien mit der gesamten N8000-Konfiguration übertragen werden. Die genauen Vorgehensweisen hierzu finden Sie in der Online-Hilfe von IRIS-Net. Den benötigten Treiber finden Sie im Unterverzeichnis *\Driver\USB NetMax Driver* des IRIS-Installationsverzeichnis. Für technische Eigenschaften der USB-Schnittstelle, wie auch der nachfolgend beschriebenen übrigen Schnittstellen des N8000, sei auf den Abschnitt Schnittstellenbeschreibung (Seite 58) verwiesen.

2.2 Rückseite

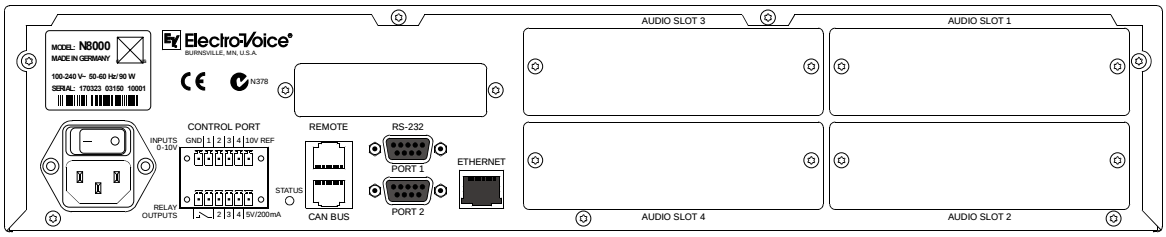

Auf der Rückseite des N8000 befinden sich sämtliche Anschlüsse für analoge und digitale Audiosignale, Steuer-Schnittstellen und für die Stromversorgung.

AUDIO SLOTs

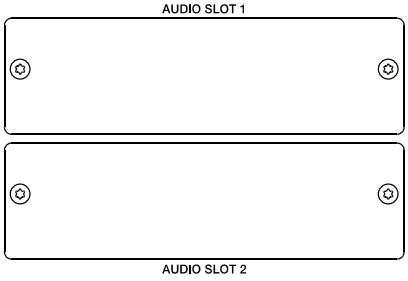

Die AUDIO SLOTS 1 – 4 sind Modul-Steckplätze zur Aufnahme von NetMax Audio-Modulen. Es stehen sowohl analoge als auch digitale Eingangs- und Ausgangsmodule zur Verfügung. Auch ein Eingangsmodul mit Mikrophonempfindlichkeit ist optional erhältlich. Jeder Slot kann ein beliebiges Modul aufnehmen, dadurch können Sie exakt die Ein- und Ausgänge bestücken, die Sie für Ihre Anwendung benötigen. Der N8000 erkennt die Modul-Type automatisch und bietet die entsprechenden Konfigurationsmöglichkeiten an.

ACHTUNG:
Der N8000 muss unbedingt ausgeschaltet werden, wenn Sie ein Modul wechseln wollen. Eine genaue Anleitung finden Sie in der Beschreibung des jeweiligen Moduls.

Netzwerk-Modul-Slot

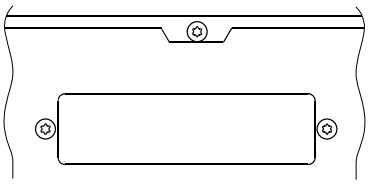

Dieser Slot dient zur Bestückung mit einem Netzwerk-Modul, z. B. dem CM-1 CobraNet™ Modul. Intern stehen an diesem Slot alle 64 Audiokanäle – 32 Eingänge und 32 Ausgänge – zur Verfügung. Mit dem CM-1 können gleichzeitig bis zu 32 digitale Audio Input Signale und 32 digitale Audio Output Signale über ein CobraNet™ Netzwerk übertragen werden. Mehrere N8000 NetMax System Controller können so zu einem weit verbreiteten, dezentralen Audiosystem verbunden werden. Ein bestücktes Netzwerk-Modul

wird vom N8000 automatisch erkannt. In der PC-Software IRIS-Net kann das Modul für die jeweiligen Anforderungen konfiguriert werden.

ACHTUNG:
Der N8000 muss unbedingt ausgeschaltet werden, bevor Sie ein Modul einbauen. Eine genaue Anleitung finden Sie in der Beschreibung des jeweiligen Moduls.

ETHERNET-Schnittstelle

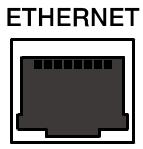

Die Ethernet-Schnittstelle für 100Base-TX / 10Base-T Ethernet-Netzwerke dient zur Verbindung des N8000 mit einem PC und/oder anderen N8000. Normalerweise wird diese Verbindung über ein Standard-Ethernet-Kabel (nicht gekreuzt) und einen Ethernet-Hub oder Switch hergestellt. Wenn ein N8000 direkt mit einem PC oder einem anderen N8000 verbunden werden soll, muss ein gekreuztes Ethernet-Kabel (Crossover-Kabel) verwendet werden.

RS-232-Schnittstellen

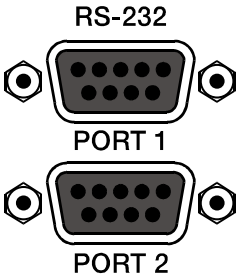

Die beiden RS-232-Schnittstellen dienen zur Verbindung des N8000 mit externen Geräten, z. B. Mediensteuerungssystemen (AMX™, Crestron™ u. a.) oder Gebäudemanagementsystemen. Über RS-232 können sämtliche N8000 Funktionen und Parameter gesteuert und abgefragt werden. Die Kommunikation erfolgt über ein einfach zu implementierendes ASCII String-Protokoll. Auf diese Weise kann ein NetMax System problemlos mit Medien- und Touchpanel-Steuerungen kombiniert werden. An der RS-232 Schnittstelle kann auch ein PC angeschlossen werden, der Parameterzugriff kann hierbei über ein einfaches Terminalprogramm erfolgen. Für die Anbindung an ein PROMATRIX System steht ein spezieller Befehlssatz zur Verfügung. Mit Hilfe der PC-Software IRIS-Net werden die beiden RS-232-Schnittstellen für ihre jeweilige Anwendung konfiguriert.

REMOTE CAN BUS

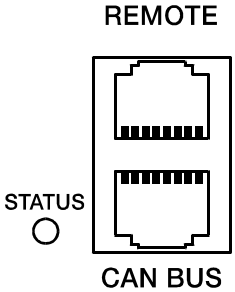

Die CAN-Schnittstelle dient zum Anschluss von Electro-Voice Remote Verstärkern und anderen Geräten mit CAN-Interface. Hierbei können bis zu 100 Remote Verstärker mit einem einzelnen N8000 verbunden werden. Alle angeschlossenen Komponenten werden in das NetMax Überwachungs- und Steuerungskonzept eingebunden. Die STATUS-LED dient zur Kontrolle der Kommunikation am CAN-Bus. Ist die CAN-Schnittstelle nicht in Betrieb, ist die

LED deaktiviert. Im Normalbetrieb blinkt die LED in einem 2-Sekunden-Takt. Die Dauer des Aufleuchtends der LED innerhalb dieser 2 Sekunden entspricht hierbei der Busbelastung, d.h. bei hoher Last leuchtet die LED innerhalb der 2 Sekunden für eine längere Zeitdauer als bei niedriger Buslast.

CONTROL PORT

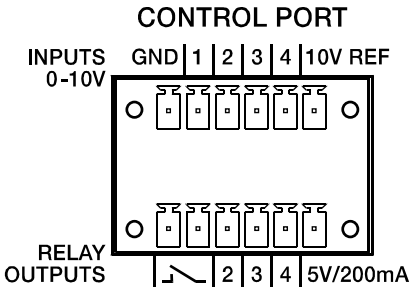

Der CONTROL PORT enthält vier frei programmierbare Steuereingänge, drei frei programmierbare Steuerausgänge, einen Ready-/Fault-Ausgang sowie Referenzspannungsanschlüsse für Masse, +5 V und +10 V.

Die Steuereingänge IN1 – IN4 sind Gleichspannungseingänge, die intern über Pull-Down Widerstände auf Masse liegen. Extern kann eine Steuerspannung zwischen 0 V und +10 V angelegt werden. Mit Hilfe der PC-Software IRIS-Net können für die Steuereingänge entweder Schaltfunktionen oder Regler-Funktionen programmiert werden. Anwendungsbeispiele sind z. B. Power On / Standby Umschaltung, Presetumschaltung oder Parameterkontrolle.

Die Steuerausgänge OUT2 – OUT4 sind Relais-Kontakte, die im nichtaktiven Zustand offen sind (Off). Im aktiven Zustand (On) sind die Ausgänge gegen Masse geschlossen. Die Ausgänge dienen zur Signalisierung interner Zustände und können direkt LEDs, Kontrollleuchten oder Relais ansteuern. Der +5 V Referenzanschluss dient zur Versorgung der extern angeschlossenen Elemente mit einem Strom von bis zu 200 mA. Über die Steuerausgänge können Betriebszustände (kritische Temperatur, Über- oder Unterschreitung definierter Grenzwerte, Fehler, usw.) an zentrale Bedienplätze oder andere Systeme (Brandmeldeanlage, Alarmierungsanlage) auch ohne Nutzung eines PC gemeldet werden. Nähere Hinweise zur Konfiguration des Control Ports finden Sie in der IRIS-Net Dokumentation.

Netzbuchse und Netzschalter

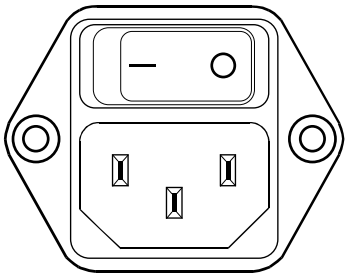

Verwenden Sie das beiliegende Netzkabel zum Anschluss des NetMax N8000 an das Stromnetz. Der N8000 ist für Netzspannungen von 100 V AC bis 240 V AC ausgelegt, es ist also keine Netzspannungsumschaltung erforderlich. Intern befindet sich eine Netzsicherung, die normalerweise nur im Fehlerfall auslöst. Die Sicherung darf nur von einer autorisierten Servicestelle gegen eine gleichwertige Sicherung mit identischen Daten für Strom, Spannung und Auslösecharakteristik getauscht werden.

Mit dem Netzschalter auf der Geräterückseite wird der N8000 ein- und ausgeschaltet. Nach dem Einschalten leuchtet sofort die ON-LED an der Frontseite. Der N8000 bootet und initialisiert alle Parameter mit den zuletzt eingestellten Werten. Die Initialisierung dauert einige Sekunden. Sobald der N8000 betriebsbereit ist, leuchtet auch die READY-LED.

3 Inbetriebnahme

3.1 Aufbauverfahren

1. **Installieren Sie die Erweiterungskarten.**
   Falls Sie für Ihren N8000 System Controller Erweiterungskarten (AI-1, AO-1, CM-1 bzw. DSP-1) erworben haben, bauen Sie diese ein. Beachten Sie hierzu den Abschnitt *Installation von Erweiterungskarten* auf Seite 57 und die Einbauhinweise in den mitgelieferten Bedienungsanleitungen der Erweiterungskarten.

2. **Schließen Sie das Netzkabel an.**
   Achten Sie darauf, dass der Netzschalter des N8000 (über der Netzbuchse, siehe Seite 55) ausgeschaltet ist.

3. **Installieren Sie das Programm IRIS-Net (Intelligent Remote & Integrated Supervision) auf dem PC.**
   Beachten Sie hierbei die Installationsanleitung von IRIS-Net in der Datei *iris_readme.htm*.

4. **Falls in Schritt 1 Erweiterungskarten mit Ein- bzw. Ausgängen (AI-1, AO-1, MI-1, DI-1 oder CM-1) installiert wurden, schließen Sie dort die zu verwendenden Geräte an.**
   Beachten Sie hierzu die jeweils mitgelieferten Bedienungsanleitungen der Erweiterungskarten und der verwendeten Geräte.

5. **Verbinden Sie die Ethernet-Schnittstelle des N8000 mit dem PC über ein geeignetes Ethernet-Kabel.**
   Beachten Sie hierzu den Abschnitt *Ethernet-Schnittstelle* auf Seite 58.

6. **Falls Ihre Anwendung Electro Voice P-Series Verstärker umfasst, verbinden Sie die CAN-Schnittstelle des N8000 mit den Verstärkern.**
   Beachten Sie hierzu den Abschnitt *CAN-Schnittstelle* auf Seite 59.

7. **Schalten Sie den N8000 (über den Netzschalter an der Rückseite), den Computer, und, falls vorhanden, die weiteren angeschlossenen Geräte ein.**
   Damit der Einschaltstrom keine Spannungsspitze im Audiosignal erzeugt und Ihre Lautsprecher beschädigt, schalten Sie angeschlossene Geräte (falls vorhanden) in der folgenden Reihenfolge ein: Audiosignalquellen - Mischpult und/oder Aufnahmegeräte - Verstärker/Endstufen. Das Ausschalten der Geräte sollte in umgekehrter Reihenfolge erfolgen.

8. **Starten Sie das Programm IRIS-Net auf dem PC.**
   Eine Einführung in das Programm finden Sie in der Online-Hilfe von IRIS-Net. Sie finden den Quick Start Guide in IRIS-Net im Menü unter ? > Quick Start Guide ... .

3.2 Installation von Erweiterungskarten

In diesem Kapitel werden die Möglichkeiten zum Ausbau des N8000 System Controller mit Erweiterungskarten beschrieben. Der N8000 kann auf verschiedene Weisen mit Erweiterungskarten bestückt werden:

- 4 Slots (Modul-Steckplätze) für die Erweiterung des Systems mit analogen/digitalen Eingängen (AI-1, MI-1, DI-1) bzw. Ausgängen (AO-1)
- 1 Netzwerk Modul-Slot für den Einbau eines Audio-Netzwerk-Moduls, etwa dem CM-1 CobraNet™ Modul
- 1 DSP-Erweiterungsmodul (DSP-1) zur Erweiterung der maximalen Speicherkapazität und Signalverarbeitungsleistung

ACHTUNG:
Der N8000 muss unbedingt ausgeschaltet werden, wenn Sie ein Modul einbauen möchten. Eine genaue Einbauanleitung finden Sie in der Beschreibung des jeweiligen Moduls.

Systemerweiterung mit analogen/digitalen Audioein- bzw. Ausgängen

Für die Erweiterung des Systems mit analogen oder digitalen Audioein- bzw. Ausgängen stehen auf der Rückseite des N8000 vier Slots zur Verfügung, diese sind mit AUDIO SLOT 1 bis AUDIO SLOT 4 beschriftet (siehe Seite 53). In diese Slots kann eine beliebige Kombination von Erweiterungskarten folgender Typen eingebaut werden:

- AI-1 mit 8 analogen Eingängen
- MI-1 mit 8 Mikrofon-Eingängen
- DI-1 mit 8 digitalen Eingängen
- AO-1 mit 8 analogen Ausgängen

Die Wahl des Slots für den Einbau der Erweiterungskarten ist hierbei völlig frei, nach Einbau der Karten werden diese vom N8000 automatisch erkannt.

Systemerweiterung mit einem Netzwerk-Modul

Über den Netzwerk Modul-Slot an der Rückseite des N8000 kann eine Audio-Netzwerkschnittstelle zu einem CobraNet™ nachgerüstet werden. Das hierzu verwendete Modul CM-1 besitzt zwei Ethernetanschlüsse zum Aufbau eines redundanten Netzwerks. Es können gleichzeitig bis zu 32 digitale Audio Input Signale und 32 digitale Audio Output Signale übertragen werden.

Erweiterung der DSP-Leistung des Systems

Der N8000 System Controller besitzt leistungsfähige DSP-Bausteine mit einer Gesamtrechenleistung von 300 MIPS und Arbeitsspeicher für ein maximales Delay von 21,8 Sekunden. Sollte dies den Anforderungen ihrer Anwendung nicht genügen, kann durch den Einbau des NetMax DSP Extension Moduls DSP-1 die Rechenleistung und Speicherkapazität des N8000 erhöht werden. Hierdurch werden die Ausführung komplexerer DSP-Programme und die Verwendung längerer Verzögerungszeiten oder zusätzliche Delay-Lines ermöglicht.

3.3 Schnittstellenbeschreibung

Ethernet-Schnittstelle

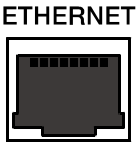

Durch den Anschluss des N8000 System Controller über die Ethernet-Schnittstelle wird die Kommunikation eines oder mehrerer PCs mit dem N8000 ermöglicht. Hierdurch kann nicht nur die komfortable Konfiguration des N8000 über die mitgelieferte Software IRIS-Net erfolgen, es kann auch das gesamte angeschlossene System (bestehend aus N8000 und EV Precision Series Verstärker) bedient und überwacht werden.

Durch Verwendung geeigneter Netzwerk-Hardware kann der N8000 auch über ein Funknetzwerk (WLAN) bedient werden. Die Ethernet-Schnittstelle ist als RJ-45-Buchse (8P8C) ausgeführt. Es werden die beiden Ethernet-Standards 10Base-T und 100Base-TX unterstützt. Die Belegung der Ethernet-Schnittstelle kann folgender Abbildung und Tabelle entnommen werden.

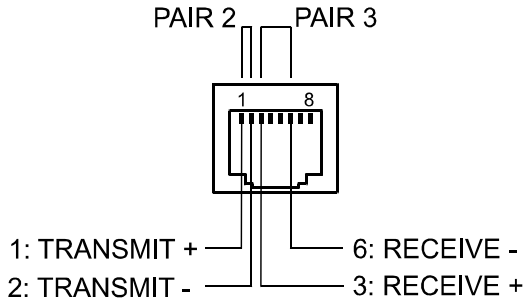

Belegung der Ethernet Schnittstelle

Pin	Name	Beschreibung	Paar	Kabelfarbe nach	
				T568A	T568B
1	Tx+	Transmit+	2	Green striped	Orange striped
2	Tx-	Transmit-		Green	Orange
3	Rx+	Receive+	3	Orange striped	Green striped
6	Rx-	Receive-		Orange	Green

Die Belegung des Ethernet-Steckers ist in folgender Abbildung dargestellt. Die Betrachtung des Steckers erfolgt hierbei von der Kontaktseite.

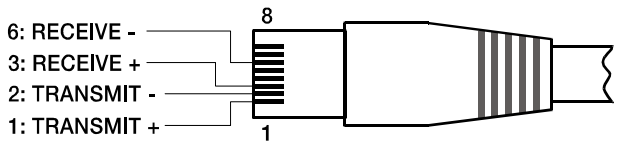

Belegung des Ethernet Steckers

Die maximale Länge eines angeschlossenen Kabels beträgt bei beiden Ethernet-Standards 100 Meter, wobei in einem Kabel jeweils zwei verdrillte Adernpaare verwendet werden. Für 10Base-T ist ein Kabel der Kategorie 3 (ungeschirmt, CAT-3), für 100Base-TX ein Kabel der Kategorie 5 (geschirmt, CAT-5) zu verwenden.

Bei Anschluss des N8000 mittels eines Patch-Kabels in Verbindung mit einem Hub/Switch ist die Verdrahtung des Kabels eins zu eins, d.h. die Ader des Kabels an Pin 1 des einen Steckers wird mit Pin 1 des anderen Steckers verbunden, für die übrigen Pins wird analog vorgegangen. Für die Farben der verwendeten Kabeladern existieren die beiden Standards T568A und T568B, der Standard T568B ist allerdings weiter verbreitet.

Bei Verwendung eines Crossover-Kabels zur Direktverbindung eines N8000 mit einem PC ist auf einer Seite des Crossover-Kabels das Adern-Paar 2 mit dem Adern-Paar 3 zu vertauschen. Hierdurch wird der notwendige Tausch der Sende- und Empfangsleitungen durchgeführt, in einem Hub/Switch wird dieser Tausch intern vorgenommen.

CAN-Schnittstelle

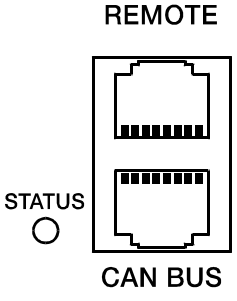

Das Netzwerk für die Electro-Voice Remote Endstufen basiert auf dem CAN-Bus Standard, der sich im Automotive-, Industrie- und Sicherheits-Bereich durchgesetzt und über Jahre hinweg bewährt hat. Der CAN-Bus ist eine symmetrische serielle Schnittstelle zur Übertragung von Kommandos und Daten. Pro CAN-Bus lassen sich 100 Endstufen oder andere Geräte bis zu einer maximalen Kabellänge von 1000 Meter anschließen.

Jeder Bus-Teilnehmer hat 2 Stück RJ-45 Buchsen fur den Remote CAN-Bus. Die Buchsen sind parallel geschaltet und dienen als Eingang und Ausgang (zum Weiterschleifen) des Remote-Netzwerkes. Der CAN-Bus muss an beiden Enden mit einem 120 Ω-Abschlusswiderstand terminiert werden. Zu diesem

Zweck liegen dem N8000 zwei Abschluss-Stecker CAN-TERM 120 Ω bei. Stecken Sie diese Abschluss-Stecker in die freien RJ-45 Buchsen des ersten und des letzten Gerätes am CAN-Bus.

In der Netzwerk-Verkabelung ist neben dem CAN-Bus auch das symmetrische Audio-Monitor Signal zum Abhören der Endstufeneingänge und -ausgänge mitgeführt. Dieser Monitorbus ermöglicht das softwaregesteuerte Abhören der Eingangs- oder Ausgangssignale aller im Remote-Netzwerk vorhandenen Endstufen ohne zusätzlichen Verdrahtungsaufwand. Am N8000 kann der Monitorbus an einer CAN-Buchse abgegriffen (Pins 7 und 8, siehe Abbildung auf Seite 60), mit einem Audio-Eingang verbunden und zum Abhören beispielsweise auf eine Monitorbox geroutet werden.

Der CAN-Bus erlaubt die Verwendung unterschiedlicher Datenraten, wobei die Datenrate indirekt proportional zur Buslänge ist. Wenn das Netzwerk nur eine geringe Ausdehnung hat, sind Datenraten bis zu 500 kbit/s möglich. Bei größeren Ausdehnungen muss die Datenrate herabgesetzt werden (bis zur minimalen Datenrate von 10 kbit/s). Die folgende Tabelle erläutert den Zusammenhang zwischen Bit Rate und Buslänge bzw. Netzwerkausdehnung. Buslängen über 1000 Meter sollten grundsätzlich nur mit Repeatern realisiert werden.

Bit Rate (in kbit/s)	Bus Länge (in m)
500	100
250	250
125	500
62,5	1000
20	2500
10	5000

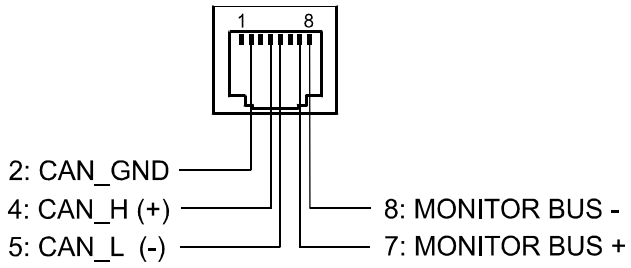

Belegung der CAN Buchse

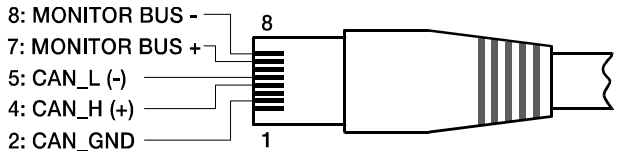

Belegung des CAN Steckers

Pin	Name	Kabelfarbe nach	
		T568A	T568B
2	CAN_GND	Green	Orange
4	CAN_H (+)	Blue	
5	CAN_L (-)	Blue striped	
7	MONITOR BUS +	Brown striped	
8	MONITOR BUS -	Brown	

Für weitere Informationen über den CAN-Bus, insbesondere Systembeispiele und Leitungsspezifikationen, sei auf den Abschnitt *CAN-Bus-Grundlagen* auf Seite 78 im Anhang dieses Dokument und die Bedienungsanleitungen der angeschlossenen Geräte verwiesen.

USB-Schnittstelle

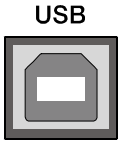

Die USB-Schnittstelle an der Frontseite des N8000 System Controller kann mit Hilfe von IRIS-Net für verschiedene Zwecke verwendet werden. Einerseits kann die Konfigurationsdatei des N8000 ausgelesen und zurückgeschrieben werden. Andererseits können über die USB-Schnittstelle die Netzwerk-Einstellungen (IP-Adresse, Subnetzmaske usw.) der Ethernet-Schnittstelle des N8000 konfiguriert werden. Die USB-Schnittstelle entspricht dem Standard USB 1.1. Dementsprechend werden die Übertragungsraten Low Speed (1,5 MBit/s) und Full Speed (12 MBit/s) unterstützt.

Das an dieser Schnittstelle angeschlossene Kabel darf laut USB-Spezifikation höchstens 5 Meter lang sein. Bei der USB-Schnittstelle des N8000 handelt es sich um eine Buchse des USB-Typ B (female), die standardgemäße Belegung kann folgender Abbildung und Tabelle entnommen werden.

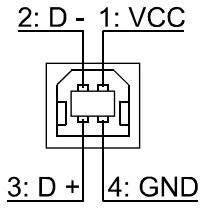

Belegung USB Buchse

Pin	Name	Beschreibung
1	VCC	+5 V
2	D-	Data -
3	D+	Data +
4	GND	Ground

RS-232-Schnittstelle

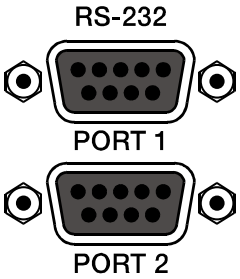

Die RS-232-Schnittstelle auf der Rückseite des N8000 dient zur Kommunikation mit dem N8000 über ein einfaches ASCII-Protokoll. Hierdurch kann der N8000 von externen Geräten (Beispiele hierfür sind z.B. Mediensteuerungen und der PROMATRIX DPM4000) bedient und überwacht werden. Für eine Datenübertragung zwischen dem N8000 und dem angeschlossenen Gerät müssen die Schnittstellen auf beiden Seiten der Übertragungs-Strecke identisch konfiguriert sein. Die Werkskonfiguration der beiden RS-232-Schnittstellen ist in folgender Tabelle angegeben.

Parameter	Wert
Datenbits	8
Paritybit	-
Stoppbit	1
Geschwindigkeit	19200 bit/s

In folgender Abbildung und Tabelle sind die im N8000 verwendeten Pins der RS-232-Schnittstelle angegeben. Das zur Verbindung des N8000 mit einem anderen Gerät verwendete Verbindungskabel sollte eine Länge von 15 Meter nicht überschreiten.

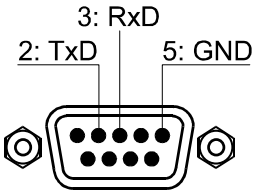

Belegung RS-232

Pin	Name	Beschreibung	Input/Output (von N8000 aus gesehen)
2	TxD	Transmit	Out
3	RxD	Receive	In
5	GND	Signal Ground	-

CONTROL PORT

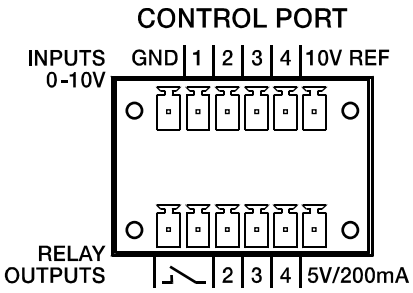

Der Control Port an der Rückseite des N8000 ist in zwei Hälften unterteilt. Für den Anschluss externer Komponenten sind zwei Phoenix-Stecker (6-polig) im Lieferumfang des N8000 enthalten.

Steuereingänge

Die obere Hälfte, am N8000 mit INPUTS 0-10V beschriftet, stellt vier frei programmierbare Steuereingänge für Spannungen zwischen 0 Volt und 10 Volt zur Verfügung. Die Eingänge sind mit 1 bis 4 durchnummeriert. Der N8000 stellt eine eigene Spannungsversorgung für extern angeschlossene Kontrollelemente, z. B. Potentiometer oder Schalter, zur Verfügung. Die Spannungsversorgung ist an den Anschlüssen 10V REF und GND des Control Ports verfügbar.

ACHTUNG:
Der maximal zulässige Strom am Ausgang 10V REF beträgt 100 mA.

Analoge Beschaltung

In der folgenden Abbildung ist eine Beispielanwendung zur „analogen Beschaltung“ der Steuereingänge des N8000 dargestellt. Hierbei ist eine über ein Potentiometer änderbare Spannung am Steuereingang 1 angeschlossen. Über IRIS-Net kann der N8000 so konfiguriert werden, dass diese Spannung etwa zur Regelung der Lautstärke eines Audio-Eingangs oder Audio-Ausgangs verwendet wird.

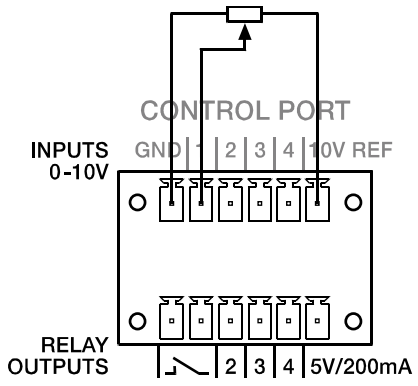

Control Port mit Potentiometer

Digitale Beschaltung

In folgender Abbildung ist ein Beispiel für eine „digitale Beschaltung“ eines Steuereingangs des N8000 dargestellt. Hierbei ist der Steuereingang 2 über einen Schalter (Schließer) mit GND (Masse) verbunden. In IRIS-Net kann der N8000 so konfiguriert werden, dass bei Betätigung des Schalters etwa ein Audio-Eingang oder Audio-Ausgang Kanal stumm geschaltet wird. Die dabei verwendeten Logik-Schwellen für High / Low sind für jeden Eingang frei konfigurierbar.

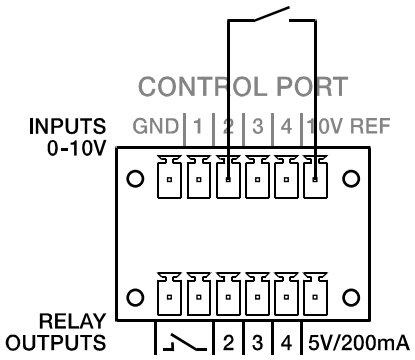

Control Port mit Schalter

Steuerausgänge

Die untere Hälfte des Control Ports, am Gerät mit RELAY OUTPUTS beschriftet, stellt verschiedene Ausgänge zur Verfügung. Es sind drei frei programmierbare Steuerausgänge vorhanden, die mit 2 bis 4 durchnummeriert sind. Diese Steuerausgänge sind als Relais-Kontakte (Schließer) ausgeführt, d.h. im nichtaktiven Zustand (Off) sind diese offen, im aktiven Zustand (On) sind sie gegen Masse geschlossen. Für den Betrieb der extern angeschlossenen Elemente steht eine Spannungsquelle am Anschluss 5V/200mA zur Verfügung.

ACHTUNG:
Der maximal zulässige Strom am 5 V-Ausgang beträgt 200 mA.

Die beiden linken Anschlüsse der RELAY OUTPUTS sind der READY/FAULT-Ausgang des N8000. Dieser potentialfreie Ausgang ist geschlossen, wenn der N8000 betriebsbereit ist und kein Fehler aufgetreten ist. Über IRIS-Net kann konfiguriert werden, bei welchen Fehlerarten der Kontakt geöffnet werden soll. Durch dieses Funktionsprinzip eignet sich dieser Kontakt besonders gut für die Integration des N8000 in Gefahrenmeldeanlagen (Ruhestromprinzip).

Eine Beispielanwendung zur Beschaltung eines Steuerausgangs ist in folgender Abbildung dargestellt. Hierbei wird über eine Kontrollleuchte ein Betriebszustand des N8000, etwa die Überschreitung eines Temperatur-Grenzwertes, angezeigt.

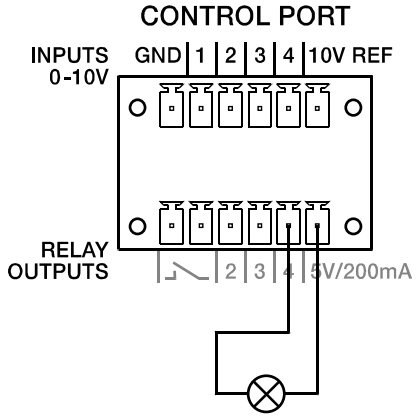

Control Port mit Kontrollleuchte

Audioschnittstellen

Analoge Audio-Verbindungskabel

Als analoge Audio-Verbindung wählen Sie am besten symmetrisch ausgelegte Kabel (2 Signaladern + Schirmgeflecht) mit XLR-Stecker. Obwohl alle analogen Ein- und Ausgänge des N8000 auch unsymmetrisch belegt werden können, stellt ein symmetrisch ausgeführtes Audio-Verbindungskabel die bessere Alternative dar. Der Schirm im Kabel verbindet bei symmetrischer Signalführung alle metallischen Gehäuse und verhindert dadurch lückenlos ein Einkoppeln von externen Störsignalen, im wesentlichen Brummen, auf den Audiosignalpfad..

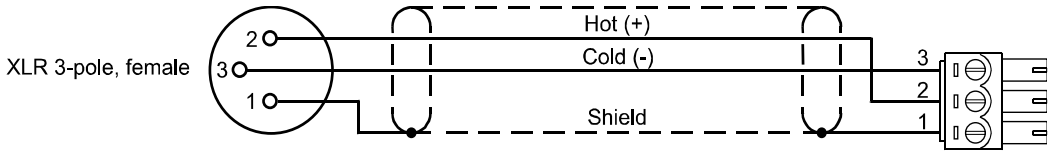

Analoges Audio-Ausgangskabel, XLR (male) auf Phoenix

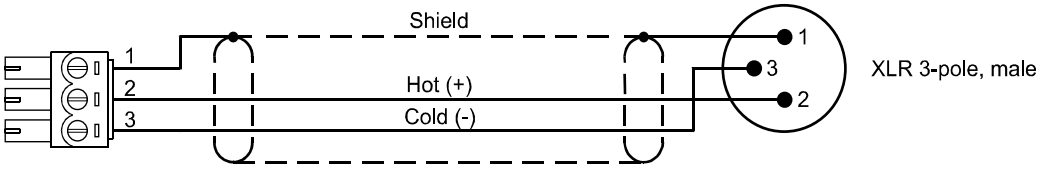

Analoges Audio-Eingangskabel, XLR (female) auf Phoenix

Digitale Audio-Verbindungskabel

Als digitale Audio-Verbindung wählen Sie am besten symmetrisch ausgelegte Kabel (2 Signaladern + Schirmgeflecht) mit XLR-Stecker. Obwohl die digitalen Eingänge des N8000 auch unsymmetrisch belegt werden können, stellt ein symmetrisch ausgeführtes Audio-Verbindungskabel die bessere Alternative dar.

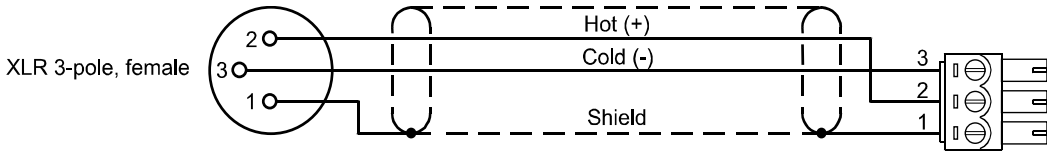

Digitales (symmetrisches) Audio-Eingangskabel, XLR (female) auf Phoenix

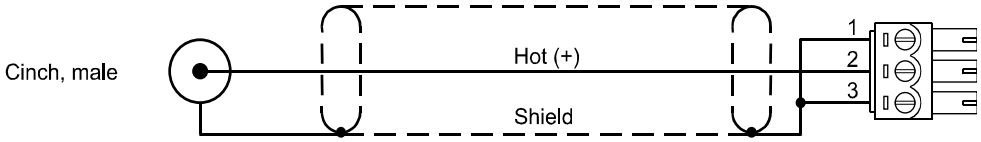

Digitales (unsymmetrisches) Audio-Eingangskabel, Cinch (male) auf Phoenix

4 Netzwerk-Konfiguration

4.1 Einführung

Der N8000 System Controller kann über die Ethernet-Schnittstelle an der Rückseite (siehe Seite 54) an ein TCP/IP-Netzwerk angeschlossen werden. Für Informationen über die Grundlagen von Ethernet und TCP/IP siehe Abschnitt *Ethernet-Grundlagen* ab Seite 75 im Anhang dieses Dokumentes.

Ab Werk besitzt der N8000 folgende Netzwerk-Konfiguration:

Parameter	Wert
IP-Adresse	192.168.1.100
Subnetzmaske	255.255.255.0
Gateway	192.168.1.1
DHCP	deaktiviert

Eine IP-Adresse muss eindeutig sein, sie darf also jeweils nur einem einzigen Gerät (Host) in einem Netzwerk zugewiesen werden. Wird für den Betrieb des N8000 ein neues Ethernet aufgebaut, wird die Beibehaltung der werkseitig voreingestellten Netzwerk-ID und Subnetzmaske empfohlen. Bei Integration des N8000 in ein bestehendes Ethernet muss die Netzwerk-Konfiguration des N8000 angepasst werden.

Die voreingestellte IP-Adresse des N8000 kann genau dann beibehalten werden, wenn

- nur ein einzelner N8000 mit werksseitiger Netzwerk-Konfiguration über Ethernet angeschlossen wird und
- die Netzwerk-ID 192.168.1 beibehalten werden kann und
- kein anderes Gerät die Host-ID 100 besitzt.

Ist mindestens eine dieser drei Bedingungen nicht erfüllt, muss die voreingestellte IP-Adresse des N8000 geändert werden.

Beispiel:

In folgender Abbildung ist eine Beispielanwendung mit vier NetMax N8000 in einem abgeschlossenen Ethernet dargestellt. Diese werden über einen zentralen Ethernet-Switch mit einem PC verbunden. Die werkseitig eingestellte IP-Adresse 192.168.1.100 wäre hierdurch viermal im Netzwerk vorhanden, durch die Änderung der voreingestellten IP-Adressen von

mindestens drei NetMax N8000 muss also eine eindeutige Adressierung der Geräte im Netzwerk hergestellt werden.

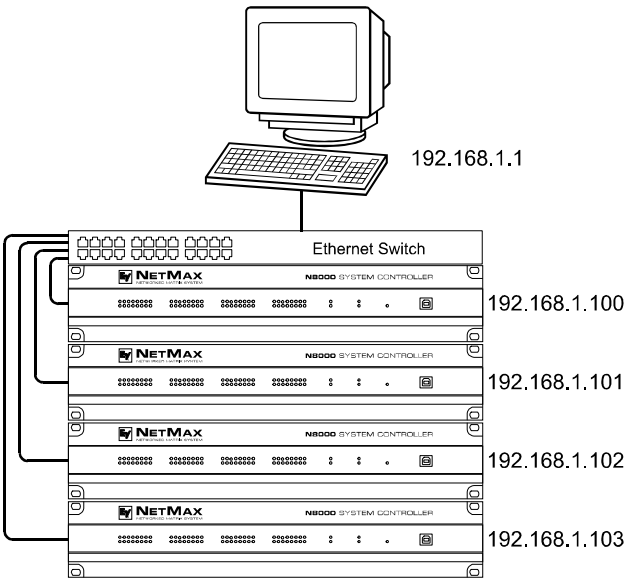

Beispiel eines Ethernet mit vier N8000

Für die Änderung der voreingestellten IP-Adressen der N8000 ist die Erstellung einer Auflistung aller im Ethernet verwendeten Geräte und IP-Adressen von Vorteil. Ein Beispiel einer solchen Liste für das System in obiger Abbildung ist im Folgenden dargestellt. Einen leeren Vordruck finden Sie im Anhang. Tragen Sie in die Liste für jedes der im Netzwerk verwendeten Geräte die Bezeichnung des Gerätes, eine eindeutige Beschreibung und die ihm zuzuweisende IP-Adresse ein. Falls das Gerät in IRIS-Net dargestellt wird, können Sie die dort verwendete Bezeichnung ebenfalls in die Tabelle eintragen.

Gerät	IRIS-Bezeichnung	Standort/Beschreibung	IP-Adresse
N8000	Hauptzentrale	Hauptzentrale	192.168.1.100
PC	-	Hauptzentrale	192.168.1.1
N8000	Verwaltung	Verwaltungsgebäude	192.168.1.101
N8000	Produktion	Produktionsgebäude	192.168.1.102
N8000	Mehrzweck	Mehrzweckhalle	192.168.1.103

Bei der Inbetriebnahme dieses Beispielsystems müssten die in der Übersichtstabelle angegebenen IP-Adressen an die einzelnen Geräte vergeben werden. Die Änderung der IP-Adresse kann sowohl über IRIS-Net als auch über das N8000 Browser Interface erfolgen. In IRIS-Net ist die Änderung sowohl über die USB-Schnittstelle als auch die Ethernet-Schnittstelle des N8000 möglich. Informationen über die genauen Vorgehensweisen entnehmen Sie bitte der Online-Hilfe von IRIS-Net. Zur Änderung der IP-Adresse über das Browser-Interface öffnen Sie dieses unter Verwendung der aktuellen (voreingestellten) IP-Adresse des N8000. Beachten Sie zur genauen Vorgehensweise das N8000-Browser-Manual.

4.2 Konfiguration

Aufbau und Überprüfung einer Ethernet-Verbindung mit dem N8000

Das Ziel dieses Vorgangs ist es, eine Verbindung zwischen einem PC und einem N8000 mit werksseitiger Netzwerkeinstellung (siehe Seite 67) über Ethernet aufzubauen und die korrekte Funktion der Verbindung zu überprüfen. Es wird im Folgenden davon ausgegangen, dass weder der PC noch der N8000 mit einem bestehenden Ethernet verbunden sind, der N8000 ist vom Stromnetz getrennt.

1. **Klicken Sie *Start* > *Einstellungen* > *Netzwerkverbindungen*.**
   Das Fenster *Netzwerkverbindungen* erscheint, hier sind alle vorhandenen Möglichkeiten ihres PC zur Verbindung mit einem Netzwerk aufgeführt. Der zur Verbindung mit dem N8000 verwendete Ethernet-Anschluss ist in der Kategorie *LAN oder Hochgeschwindigkeitsinternet* enthalten.

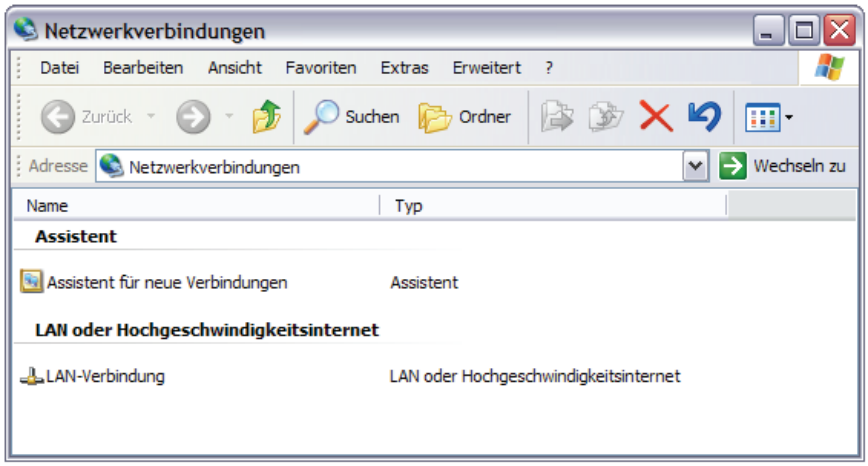

2. **Klicken Sie im Fenster *Netzwerkverbindungen* mit der rechten Maustaste auf den Ethernet-Anschluss, der zur Verbindung mit dem N8000 verwendet werden soll.**
   Es erscheint das Kontextmenü des gewählten Ethernet-Anschlusses.

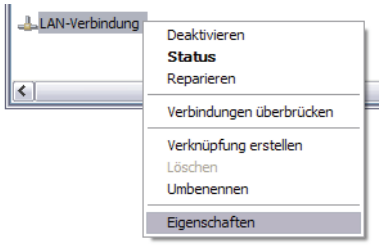

3. **Klicken Sie im Kontextmenü auf *Eigenschaften*.**
   Es erscheint das Dialogfenster *Eigenschaften von LAN-Verbindung*.

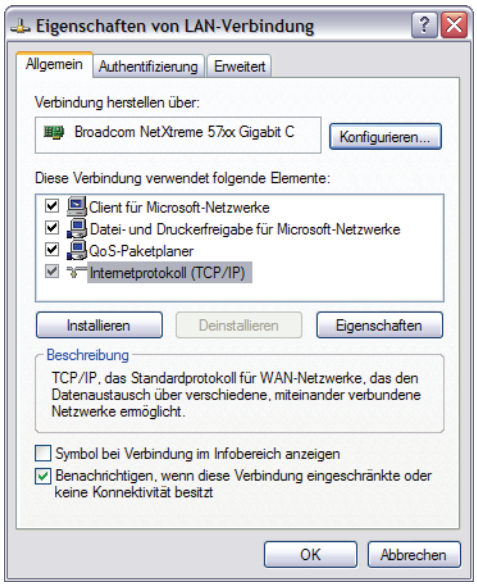

4. **Doppelklicken Sie auf *Internetprotokoll (TCP/IP)*.**
   Es erscheint das Dialogfenster *Eigenschaften von Internetprotokoll (TCP/IP)*

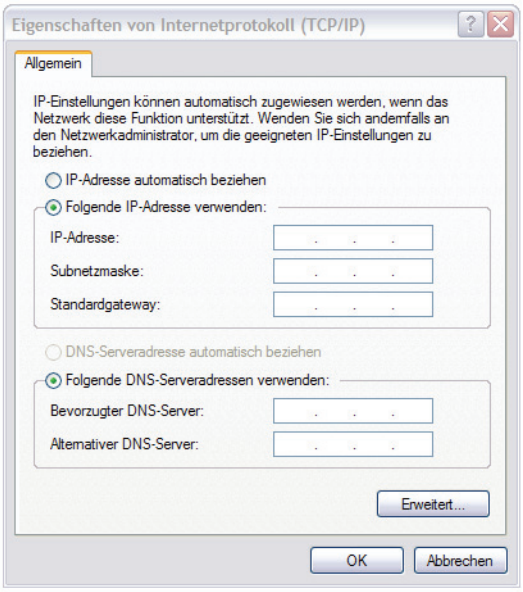

5. **Wählen Sie im Fenster die Option *Folgende IP-Adresse verwenden*.**

6. **Schreiben Sie in das Eingabefeld *IP-Adresse*: 192.168.1.1**

7. **Schreiben Sie in das Eingabefeld *Subnetzmaske*: 255.255.255.0**

8. **Schließen Sie das Fenster *Eigenschaften von LAN-Verbindung* durch klicken auf die Schaltfläche *OK*.**

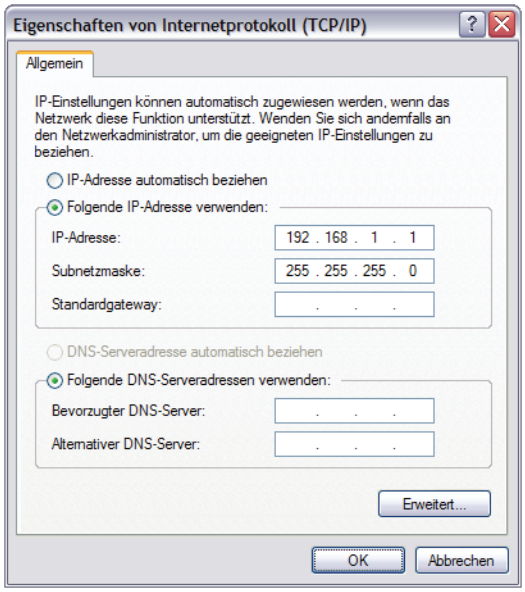
Eigenschaften von Internetprotokoll (TCP/IP)
Allgemein
IP-Einstellungen können automatisch zugewiesen werden, wenn das Netzwerk diese Funktion unterstützt. Wenden Sie sich andernfalls an den Netzwerkadministrator, um die geeigneten IP-Einstellungen zu beziehen.
IP-Adresse automatisch beziehen
Folgende IP-Adresse verwenden:
IP-Adresse: 192 . 168 . 1 . 1
Subnetzmaske: 255 . 255 . 255 . 0
Standardgateway:
DNS-Serveradresse automatisch beziehen
Folgende DNS-Serveradressen verwenden:
Bevorzugter DNS-Server:
Alternativer DNS-Server:
Erweitert...
OK
Abbrechen

Die Konfiguration des PC ist damit vollständig, in den folgenden Schritten wird die Verbindung des PC mit den N8000 hergestellt und überprüft.

9. **Verbinden Sie den Netzwerkanschluss Ihres PC mit dem Ethernet Interface des N8000 direkt über ein Crossover-Kabel oder über zwei Patchkabel und einen Hub/Switch.**
   Für Informationen über Möglichkeiten zur Verbindung von Geräten über Ethernet siehe auch Abschnitt *Ethernet-Grundlagen* auf Seite 75 im Anhang dieses Dokumentes.

10. **Schließen Sie den N8000 an das Stromnetz an und schalten Sie ihn mittels des Netzschalters an der Rückseite ein.**
    Die grüne ON-LED (siehe Seite 52) an der Frontblende des N8000 leuchtet auf. Nach einigen Sekunden signalisiert das zusätzliche Aufleuchten der grünen READY-LED (siehe Seite 52) den erfolgreichen Startvorgang des N8000.

11. **Klicken Sie *Start > Programme > Zubehör > Eingabeaufforderung***
    Es erscheint das Fenster *Eingabeaufforderung*.

12. Geben Sie *ping 192.168.1.100* ein und drücken Sie Return-Taste.

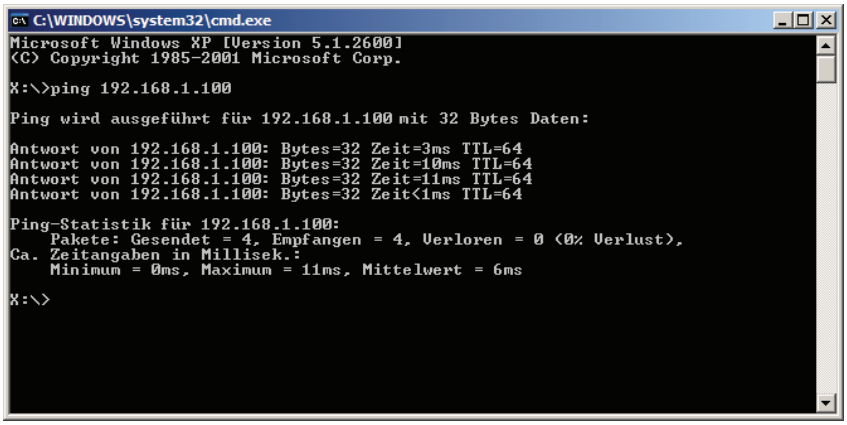

Der PC überprüft nun die Verbindung mit dem N8000. Hierzu werden vier Netzwerk-Pakete über das Ethernet an den N8000 verschickt, die von diesem bestätigt werden müssen. Bei erfolgreicher Ethernet-Verbindung werden keine Pakete verloren, in der Ping-Statistik ist daher 0% Verlust angegeben.

5 Anhang

5.1 Anwendungsbeispiel

Installation in einer Mehrzweckhalle

In untenstehender Abbildung ist ein Beispiel für die Verwendung eines N8000 System Controller in einer Mehrzweckhalle dargestellt. Hierbei sind als Signalquellen vier Mikrofone, ein CD-Spieler und ein Tuner angeschlossen. Zur Beschallung werden sowohl aktive als auch passive Lautsprecher verwendet. Die zum Betrieb der passiven Lautsprecher verwendeten Electro-Voice Precision Series Remote Amplifier sind zusätzlich zu den Audio-Verbindungen über den CAN-BUS mit dem N8000 verbunden.

Für die Bedienung und Steuerung des Systems sind zwei verschiedene Wege vorgesehen. Die erste Möglichkeit stellt ein herkömmlicher PC dar. Auf diesem wird die Software IRIS-Net (Intelligent Remote & Integrated Supervision) zur Bedienung des N8000 und der Remote Amplifier verwendet. Neben der Bedienung und Steuerung kann über IRIS-Net auch die Überwachung des gesamten Systems erfolgen. Die Verbindung zwischen N8000 und PC erfolgt über Ethernet. Als zweite Möglichkeit zur Bedienung des Systems ist ein Touch Panel (z.B. AMX™, Crestron™) an die RS-232-Schnittstelle des N8000 angeschlossen. Das Touch Panel macht über eine eigene Bedienoberfläche die gewünschten Funktionen des Systems zugänglich.

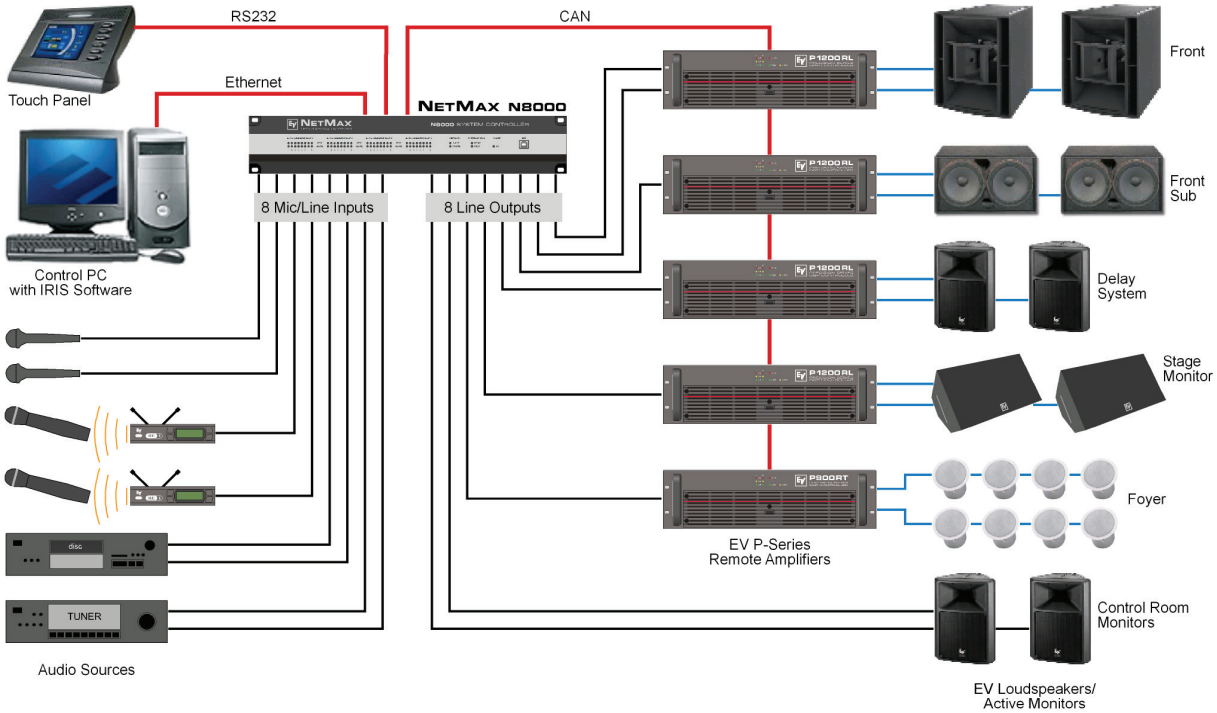

Installation in einer Mehrzweckhalle

5.2 Problemlösungen

Problem: Es kann keine Verbindung über IRIS-Net mit dem N8000 aufgebaut werden.

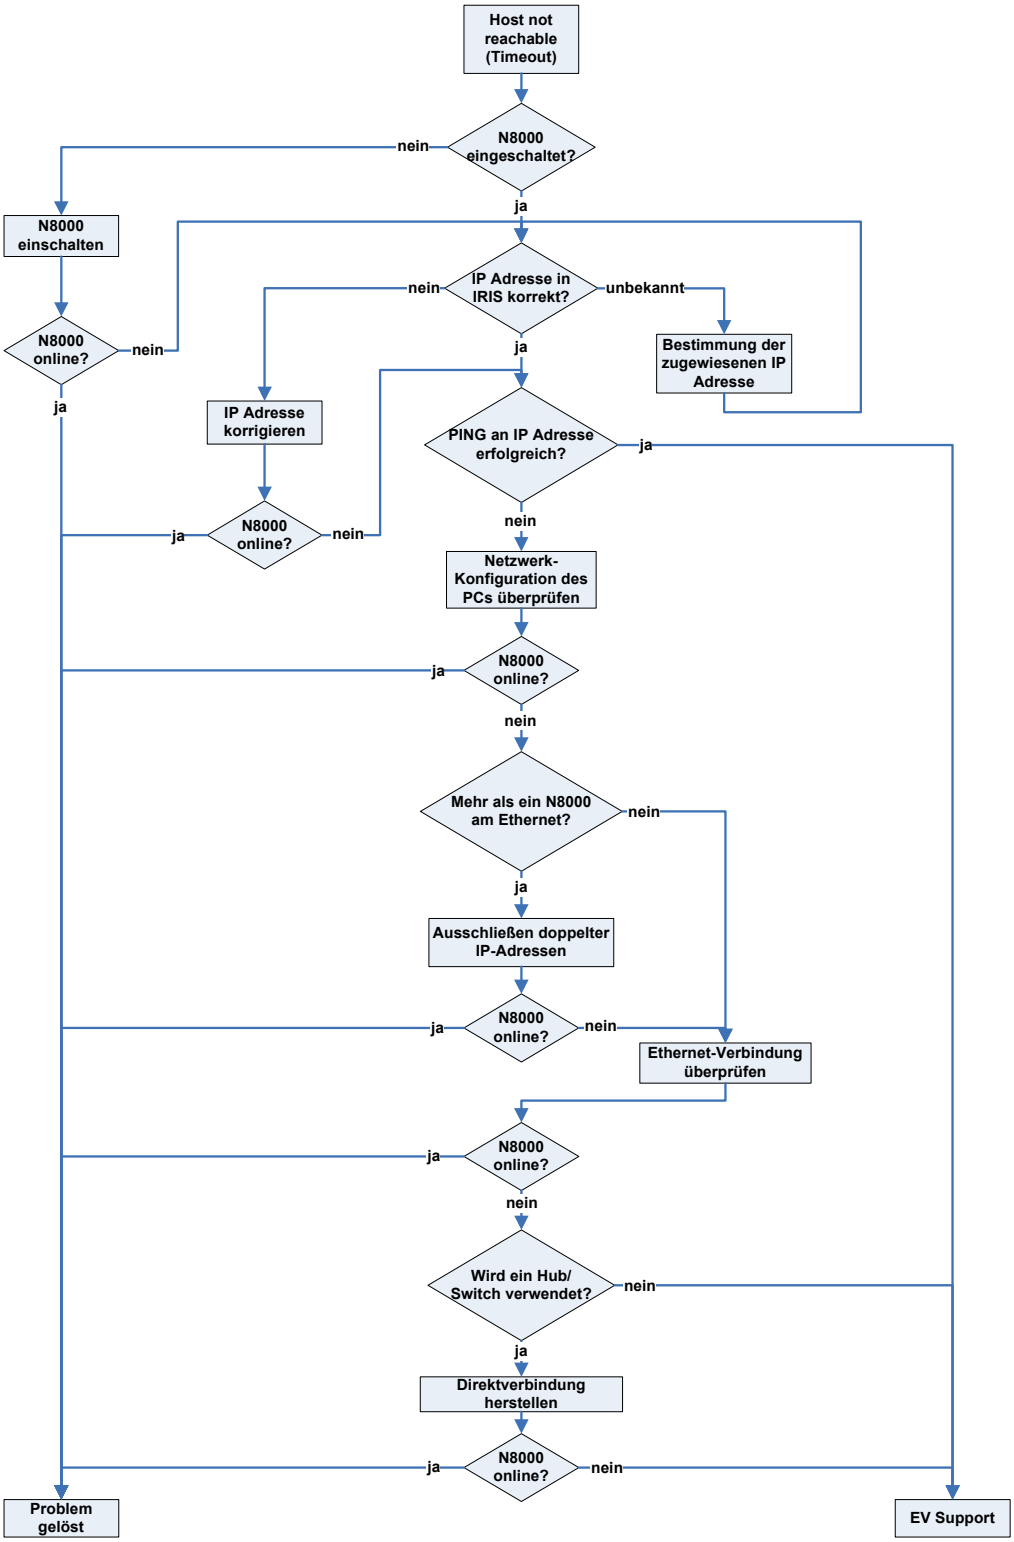

Netzwerk-Konfiguration des PCs überprüfen:

Überprüfen sie die Netzwerk-Konfiguration des verwendeten PCs. Insbesondere der Netzwerkteil der verwendeten IP-Adressen und die Subnetzmaske von PC und N8000 müssen identisch sein.

Ausschließen doppelter IP-Adressen:

Sind mehrere Geräte in einem Ethernet vorhanden und werden IP-Adressen manuell vergeben, kann unter Umständen die selbe IP-Adresse doppelt vergeben sein. Um zu überprüfen, ob dies der Fall ist, schalten Sie den N8000 aus und versuchen sie bei ausgeschaltetem N8000 dessen IP-Adresse über ein ping zu erreichen. Falls der ping erfolgreich ist, besitzt ein anderes Gerät die IP-Adresse des N8000. Ändern Sie in diesem Fall die IP-Adresse des nun antwortenden Gerätes oder des N8000 (hierbei müssen Sie entsprechend die IP-Adresse des N8000 in IRIS-Net anpassen).

Ethernet-Verbindung überprüfen:

Bei der physischen Verbindung zwischen PC und N8000 über Ethernet sind folgende Punkte zu überprüfen:

- Ist das Netzwerkkabel unbeschädigt und korrekt eingesteckt?
- Wird, falls notwendig, ein Crossover-Kabel verwendet?
- Leuchten nach Einstecken des/der Netzwerkkabel die indicator lights der Netzwerkbuchsen von PC, N8000 und, falls vorhanden, der Netzwerkgeräte zwischen PC und N8000 auf?
- Wird vom Betriebssystem ein Problem bei dem verwendeten Netzwerkinterface angezeigt?

Direktverbindung herstellen:

Um interne Probleme in verwendeten Netzwerkgeräten zwischen PC und N8000 auszuschließen, stellen Sie eine Direktverbindung zwischen PC und N8000 über ein Crossover-Kabel (siehe Seite 58) her. Falls zuvor durch ein nun nicht mehr angeschlossenes Netzwerkgerät eine automatische IP-Adressvergabe (DHCP) durchgeführt wurde, muss diese nun manuell erfolgen.

5.3 Ethernet-Grundlagen

Der N8000 System Controller kann über die Ethernet-Schnittstelle (RJ-45) an der Rückseite an ein Ethernet angeschlossen werden. Ethernet ist eine Computer-Vernetzungtechnologie für lokale Netzwerke. Sollen zwei Geräte (Hosts) verbunden werden, kann dies direkt über ein gekreuztes Ethernet-Kabel (Crossover-Kabel) erfolgen. Ist die Anzahl der zu verbindenden Geräte größer als zwei, erfolgt die Verbindung über normale Ethernet-Kabel (Patchkabel) und einen zentralen Knoten (Hub oder Switch). Der zentrale Knoten besitzt hierbei für jeden Teilnehmer des Netzwerks einen Anschluss (Port). Das Ethernet-Interface des N8000 ist zu folgenden Ethernet-Standards kompatibel:

- 10Base-T (IEEE 802.3i): Bei diesem Standard werden vier Adern (zwei verdrillte Paare) eines CAT-3 oder CAT-5-Kabels für die Verbindung verwendet. Die Übertragungsgeschwindigkeit ist 10 MBit/s und die maximale Länge eines Segments beträgt 100 Meter.
- 100Base-TX (IEEE 802.3u): Für die Verbindung werden wie bei 10Base-T zwei verdrillte Adernpaare verwendet, es muss allerdings ein CAT-5-Kabel verwendet werden. Mit einer Übertragungsgeschwindigkeit von 100 MBit/s ist 100Base-TX heute (2005) die Standard-Ethernet-Implementation.

IP-Adressen

Zur Kommunikation der an das Ethernet angeschlossenen Geräte können verschiedene Netzwerkprotokolle verwendet werden. Der N8000 verwendet das Protokoll TCP/IP, es handelt sich daher um ein IP-Netzwerk. In einem IP-Netzwerk werden IP-Adressen zur logischen Adressierung von Geräten verwendet. Der N8000 verwendet die Version IPv4 (Internet Protocol Version 4) zur Adressierung, eine IP-Adresse ist daher 32 Bit (= 4 Byte) lang. Hierdurch sind theoretisch etwa 4,3 Milliarden eindeutige Adressen möglich. IPv4-Adressen werden gewöhnlich in der *dotted decimal notatio*n dargestellt, d.h. die vier Bytes werden als vier durch Punkte voneinander getrennte Dezimalzahlen geschrieben. Die allgemeine Form einer IPv4-Adresse lautet somit AAA.BBB.CCC.DDD, ein Beispiel für eine IP-Adresse ist 130.009.122.195. Führende Nullen können weggelassen werden, die Beispieladresse kann somit auch als 130.9.122.195 geschrieben werden.

Folgende Tabelle zeigt Adressbereiche, die in privaten Netzwerken verwendet werden sollen.

Klasse	Adressbereich	Subnetzmaske	CIDR-Schreibweise	Anzahl möglicher Adressen
A	10.0.0.0 - 10.255.255.255	255.0.0.0	10.0.0.0/8	16777216
B	172.16.0.0 - 172.31.255.255	255.240.0.0	172.16.0.0/12	1048576
C	192.168.0.0 - 192.168.255.255	255.255.0.0	192.168.0.0/16	65536
Link local	169.254.0.0 - 169.254.255.255	255.255.0.0	169.254.0.0/16	65536

Private IP-Adressen sind insbesondere in Netzwerken, die mit dem Internet verbunden sind, von Interesse. Private IP-Adressen werden nicht im Internet geroutet, daher ist für den Zugriff auf das Internet eine Adressumsetzung mit NAT (Network Adress Translation) oder PAT (Port Adress Translation = NAT und zusätzliche Änderung der Port-Nummer) notwendig. Hierdurch können einerseits mehrere Geräte über einen Router mit dem Internet verbunden werden, auch wenn man von einem Internetprovider nur eine einzelne IP-Adresse zugeteilt bekommen hat. Andererseits lassen sich die echten IP-Adressen der Geräte durch NAT/PAT vor Hackern verbergen (Security through Obscurity).

Subnetzmaske

Eine IP-Adresse wird stets in einen Netzwerkteil (Netzwerk-Adresse/ID) und einen Hostteil (Host-Adresse/ID bzw. Geräteadresse) unterteilt. Geräte sind genau dann im selben IP-Netzwerk, wenn die Netzwerkteile ihrer Adressen identisch sind. Sind Geräte im selben IP-Netzwerk, können sie direkt miteinander kommunizieren. Für die Kommunikation von Geräten in verschiedenen Netzwerken sind Zusatzgeräte (z.B. Router) notwendig. Innerhalb eines Netzwerks darf keine Host-Adresse doppelt vergeben sein.

Ein Netzwerk könnte z.B. die Aufteilung der 4 Byte (32 Bit) einer IP-Adresse in einen 3 Byte langen Netzwerkteil und einen 1 Byte langen Hostteil vornehmen. Die genaue Aufteilung zwischen Netzwerkteil und Hostteil wird in Form der Subnetzmaske angegeben. In diesem Fall würde durch die Subnetzmaske 255.255.255.0 die Aufteilung in die ersten 24 Bit bzw. die letzten 8 Bit vorgenommen.

Die CIDR-Schreibweise zur Darstellung einer Subnetzmaske stellte eine Alternative zur *dotted decimal notation* dar. In der CIDR-Schreibweise werden sogenannte Suffixe verwendet. Das Suffix gibt die Anzahl der 1-Bits in der Subnetzmaske an. Der Subnetzmaske 255.255.255.0 in *dotted decimal notation* würde somit das Suffix /24 entsprechen, da durch die Subnetzmaske 255.255.255.0 die (in binärer Darstellung) ersten 24 Stellen einer IP-Adresse als Netzwerkadresse gewählt werden.

Durch die Wahl der Subnetzmaske, und der daraus resultierenden unterschiedlichen Aufteilung der IP-Adresse in Netzwerkteil und Hostteil, lässt sich die maximale Anzahl der innerhalb eines Netzwerks adressierbaren Geräte beeinflussen. Für die genaue Anzahl ist jedoch die Festlegung zu beachten, dass der Hostanteil in binärer Darstellung weder vollständig Null noch vollständig Eins sein darf.

Beispiel: Bei oben genannter Beispiel-IP-Adresse 130.9.122.195 wäre bei Verwendung der Subnetzmaske 255.255.255.0 der Netzwerkteil 130.9.122.0. Jedes Gerät (bzw. Schnittstelle) im betrachteten Netzwerk verwendet also eine Adresse der Form 130.9.122.DDD. Da für den Hostteil DDD in binärer Darstellung die beiden Werte 00000000 und 11111111 ausgenommen sind, sind die entsprechenden dezimalen Werte 1 bis 254 für DDD zulässig. Es sind somit höchstens 254 verschiedene Geräte in dem Netzwerk adressierbar, die möglichen Adressen lauten entsprechend 130.9.122.1 bis 130.9.122.254.

Automatische/manuelle Vergabe von IP-Adressen

Die Zuweisung einer IP-Adresse an ein Gerät in einem Netzwerk kann sowohl manuell als auch automatisch erfolgen. Bei automatischer Vergabe über DHCP (Dynamic Host Configuration Protocol) ist der Betrieb eines DHCP-Servers im Netzwerk erforderlich. Dieser Server ermöglicht die dynamische Zuweisung einer IP-Adresse und weiterer Konfigurationsparameter an Hosts in einem Netzwerk. Diese Verwendung eines DHCP-Servers ist besonders in solchen Netzwerken nützlich, in denen häufig Geräte neu angeschlossen oder wieder entfernt werden.

Bei Verwendung von DHCP kann es durch bestimmte Vorkommnisse, etwa dem Neustart eines Geräts, zu einer Änderung der geräteeigenen IP-Adresse kommen. Handelt es sich bei dem Gerät um einen N8000 System Controller, müsste hierbei dessen Konfiguration in IRIS-Net an

die geänderte IP-Adresse angepasst werden. *Aus diesem Grund wird von der Verwendung von DHCP zur dynamischen Konfiguration des N8000 abgeraten.* Stattdessen sollte die Netzwerk-Konfiguration des N8000 manuell erfolgen.

Bei Aufbau eines neuen Ethernets, das nicht mit dem Internet verbunden werden wird, kann ein beliebiger Netzwerkteil der IP-Adressen festgelegt werden. Durch die Wahl einer geeigneten Subnetzmaske kann die Anzahl der adressierbaren Geräte den eigenen Ansprüchen angepasst werden.

Wird ein oder mehrere N8000 in ein bestehendes Ethernet (mit oder ohne DHCP-Server) integriert oder besteht eine Verbindung des Netzwerkes mit dem Internet, kontaktieren Sie bitte ihren Netzwerkadministrator bezüglich Details zur korrekten Netzwerk-Konfiguration.

5.4 CAN-Bus-Grundlagen

Der CAN-Bus verwendet als Netzwerktopologie die so genannte „Bus- oder Linien-Topologie“. Das heißt, alle Teilnehmer sind an einer einzigen Zweidrahtleitung (Twisted-Pair-Kabel, geschirmt oder ungeschirmt) angeschlossen, wobei die Verkabelung von einem Busteilnehmer zum nächsten verlaufen muss. Jedes Gerät kann hierbei uneingeschränkt mit jedem anderen Gerät kommunizieren. Dabei ist es grundsätzlich egal, ob der Busteilnehmer eine Endstufe, ein N8000 oder ein UCC1 USB-CAN Converter ist. Somit kann der N8000 an beliebiger Stelle am CAN-Bus betrieben werden. Insgesamt können bis zu 100 Geräte an einem CAN-Bus angeschlossen werden.

Der CAN-Bus muss an beiden Enden mit einem 120 Ω–Abschlusswiderstand terminiert werden. Bei fehlender oder falscher Terminierung können Funktionsstörungen auftreten, da ein Signal auf einem Bus an beiden Bus-Enden reflektiert wird. Durch Überlagerung der Reflexionen mit dem ursprünglichen Signal wird dieses verzerrt, was zu Datenverlusten führen kann. Zur Verhinderung oder Minimierung von Reflexionen an den Bus-Ende werden daher Terminatoren verwendet, um die Energie des Signals dort zu "absorbieren".

Da die CAN-Schnittstelle in allen EVI Audio Geräten galvanisch getrennt von den übrigen Schaltungsteilen aufgebaut ist, wird auch eine gemeinsame Masseleitung (CAN_GND) in der Netzwerkverkabelung mitgeführt (siehe folgende Abbildung). Damit ist sichergestellt, dass alle CAN-Schnittstellen im Netzwerk auf einem gemeinsamen Potential liegen.

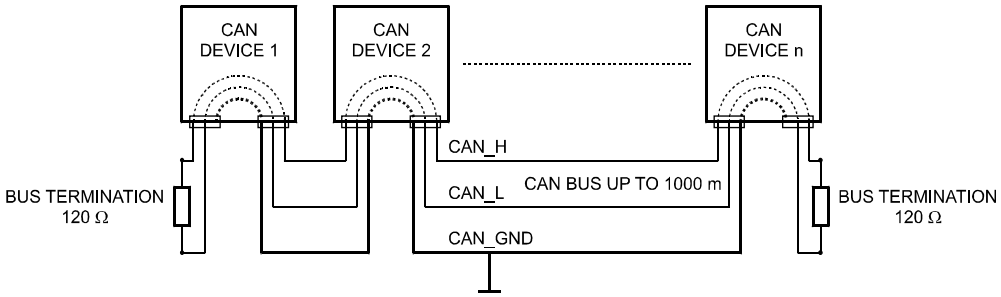

CAN Bus mit Linien-Topologie

Durch einen CAN-Bus-Repeater kann eine Verbindung zwischen zwei unabhängigen und in sich abgeschlossenen CAN-Bus-Systemen hergestellt werden. Hierdurch lassen sich folgende Ziele erreichen:

- Erhöhung der maximalen Teilnehmerzahl am CAN-Bus

  An einem einzelnen CAN-Bus können maximal 100 Geräte angeschlossen sein, durch die Verbindung mehrerer CAN-Bus-Systeme durch CAN-Bus-Repeater lässt sich diese Zahl auf bis zu 250 erhöhen. Die Beschränkung auf genau 250 Geräte folgt aus dem verwendeten Adressierungsschema des CAN-Busses, dieses erlaubt die Vergabe von höchstens 250 unterschiedlichen CAN-Geräteadressen.

- Verbesserung der Signalqualität auf dem CAN-BUS

  Bei CAN-Bus-Systemen, deren Bus-Länge 1000 Meter überschreitet, sollte ein CAN-Bus-Repeater verwendet werden. Der CAN-Bus-Repeater führt eine Aufbereitung und Verstärkung der Bussignale durch. Die dabei auftretende interne Laufzeit des Repeaters von ca. 150 ns entspricht einer Verlängerung des Busses um ca. 45 Meter.

- Bildung alternativer Netztopologien

  Durch die Verwendung von einem oder mehreren Repeatern ist neben der oben dargestellten Bus-Topologie auch der Aufbau anderer Netztopologien möglich. Als Beispiel ist in folgender Abbildung eine Stern-Topologie aus drei unabhängigen CAN-Bus-Systemen dargestellt. Die drei CAN-Busse werden hierbei durch zwei Repeater miteinander verbunden.

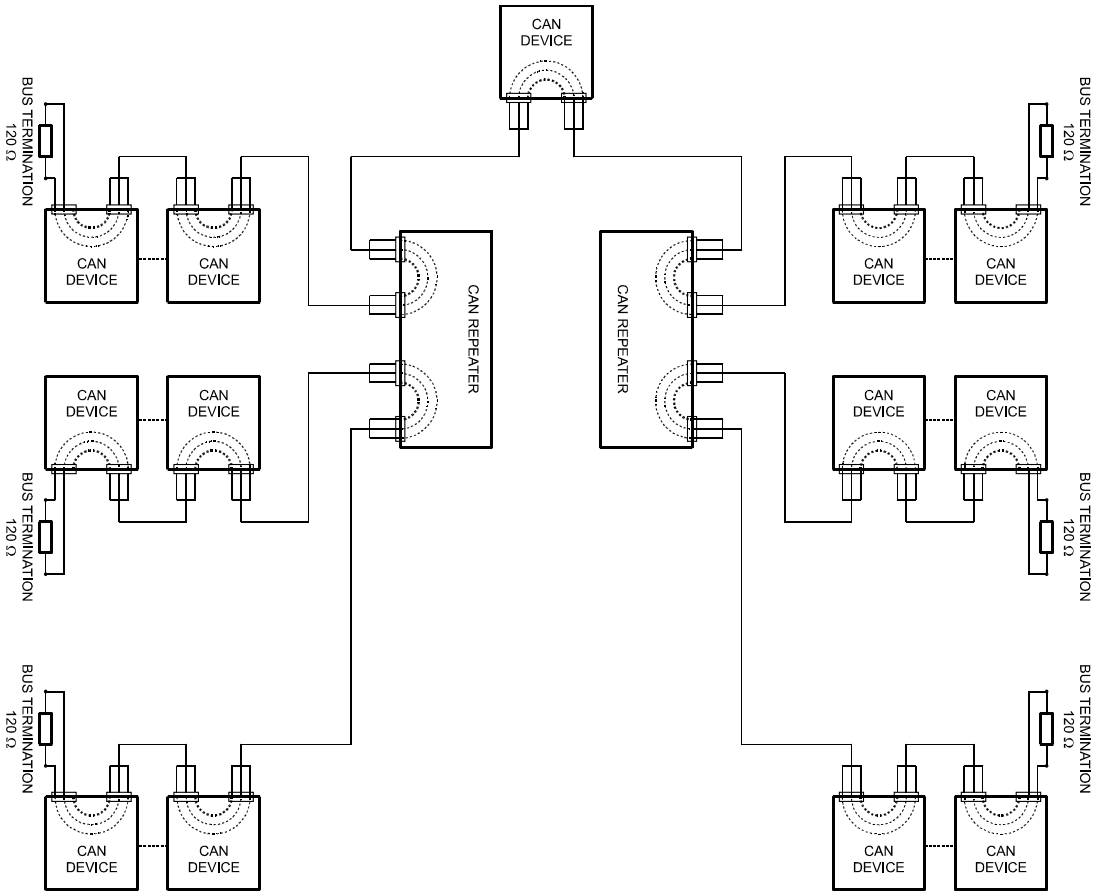

Systembeispiele

Die folgenden beiden Abbildungen zeigen Beispiele von Systemverdrahtungen eines CAN-BUS.

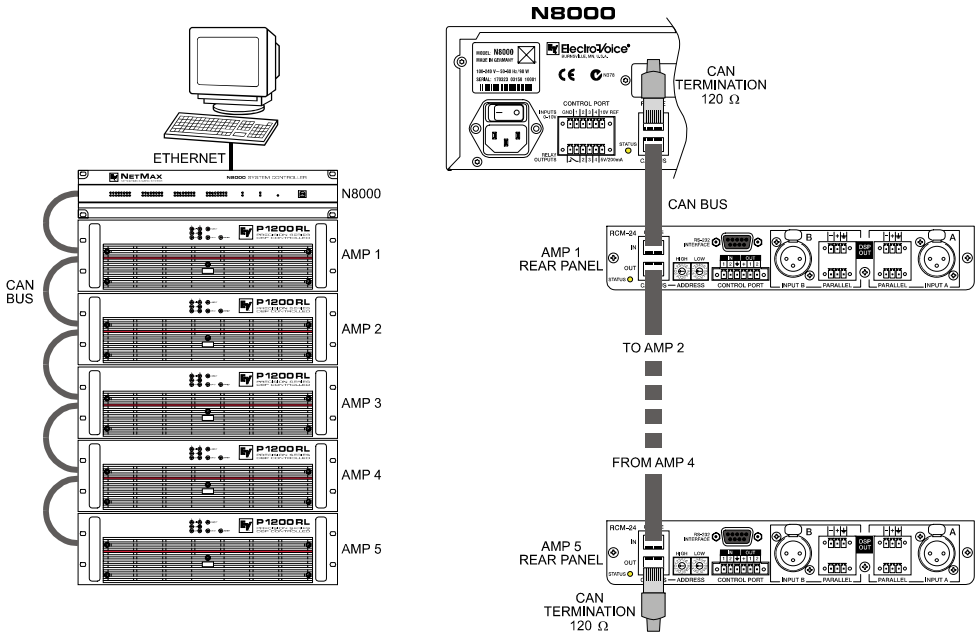

System mit 5 Verstärkern und einem N8000 am Bus-Anfang. Abschluss-Stecker am N8000 (Bus-Anfang) und am Verstärker 5 (Bus-Ende).

.

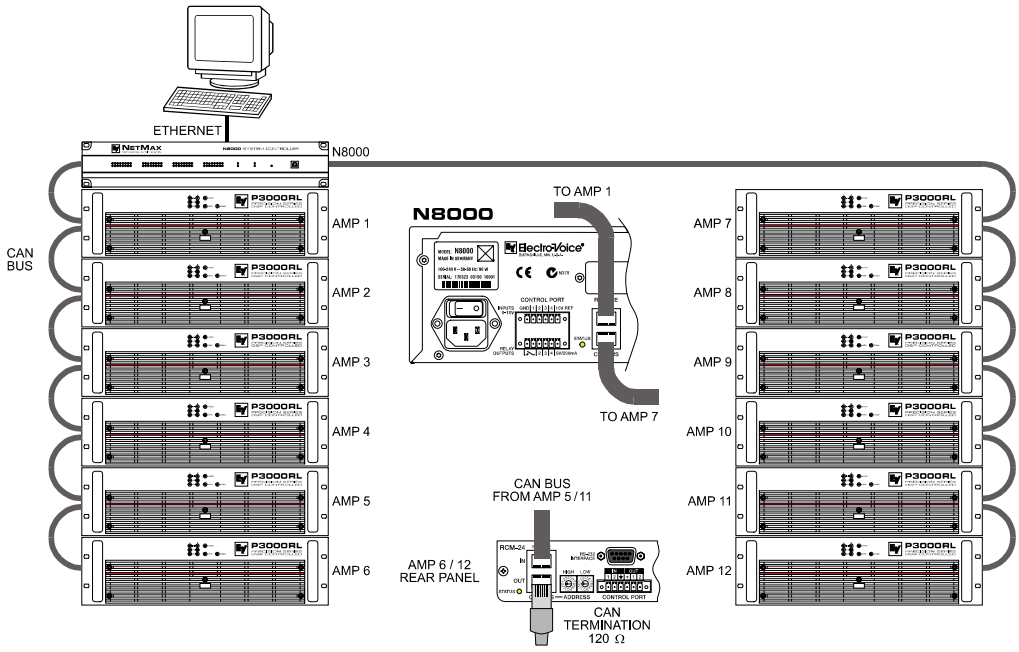

System mit 2 Racks und einem N8000 in der Mitte. Abschluss-Stecker am Verstärker 6 (Bus-Anfang) und Verstärker 12 (Bus-Ende)

Leitungsspezifikation

Gemäß dem ISO 11898-2 Standard sollten für den CAN-Bus als Datenübertragungskabel vorzugsweise Twisted-Pair-Leitungen, geschirmt oder ungeschirmt, mit einem Wellenwiderstand von 120 Ω zum Einsatz kommen. Als Leitungsabschluss muss an beiden Enden ein Abschlusswiderstand von 120 Ω vorgesehen werden. Die maximale Buslänge ist abhängig von der Datenübertragungsrate, von der Art des Datenübertragungskabels sowie von der Anzahl der Bus-Teilnehmer. Die folgende Tabelle zeigt die wesentlichen Zusammenhänge für CAN-Netzwerke mit bis zu 64 Teilnehmern.

Buslänge (in m)	Datenübertragungskabel		Abschlusswiderstand (in Ω)	Max. Datenübertragungsrate
	Widerstandsbelag (in mΩ/m)	Kabelquerschnitt		
0...40	< 70	0,25...0,34 mm² AWG23, AWG22	124	1000 kbit/s bei 40 m
40...300	< 60	0,34...0,6 mm² AWG22, AWG20	127	500 kbit/s bei 100 m
300 ... 600	< 40	0,5...0,6 mm² AWG 20	150...300*	100 kbit/s bei 500 m
600...1000	< 26	0,75...0,8 mm² AWG 18	150...300*	62,5 kbit/s bei 1000 m

* Bei langen Leitungen und vielen Geräten am CAN-Bus werden hochohmigere Abschlusswiderstande als die spezifizierten 120 Ω empfohlen, um die ohmsche Last für die Schnittstellentreiber und damit den Spannungsabfall von einem zum anderen Leitungsende zu verringern.

Die nächste Tabelle dient zur ersten Abschätzung des erforderlichen Kabelquerschnitts für unterschiedliche Buslängen und verschiedene Anzahl der Bus-Teilnehmer.

Buslänge (in m)	Anzahl der Geräte am CAN-Bus		
	32	64	100
100	0,25 mm² bzw. AWG24	0,34 mm² bzw. AWG22	0,34 mm² bzw. AWG22
250	0,34 mm² bzw. AWG22	0,5 mm² bzw. AWG20	0,5 mm² bzw. AWG20
500	0,75 mm² bzw. AWG18	0,75 mm² bzw. AWG18	1,0 mm² bzw. AWG17

Wenn ein Teilnehmer nicht direkt am CAN-Bus angeschlossen werden kann, muss eine Stichleitung (Abzweigleitung) verwendet werden. Da an einem CAN-Bus immer genau zwei Abschlusswiderstände vorhanden sein müssen, kann eine Stichleitung nicht terminiert sein. Dadurch entstehen wiederum Reflexionen, die den übrigen Bus beeinträchtigen. Zur Begrenzung dieser Reflexionen sollten diese Stichleitungen bei Datenübertragungsraten bis zu 125 kbit/s eine Einzellänge von max. 2 Meter und bei höheren Bitraten von max. 0,3 Meter nicht überschreiten. Die Gesamtlänge aller Abzweigleitungen sollte 30 Meter nicht übersteigen.

Grundsätzlich gilt:

- Für die Rack-Verdrahtung können handelsübliche RJ-45 Patchkabel mit 100 Ω Wellenwiderstand verwendet werden (AWG 24 / AWG 26), wenn es sich nur um kurze Strecken handelt (bis zu 10 Meter).
- Für die Verdrahtung der Racks untereinander und in der Gebäudeinstallation sind unbedingt die oben genannten Richtlinien für die Netzwerkverkabelung einzuhalten.

5.5 Tabelle IP-Adressen

Projekt: _____

Subnetzmaske	
Gateway	

Gerät	IRIS-Bezeichnung	Standort/Beschreibung	IP-Adresse

6.1 Specifications/Technische Daten

GENERAL DESCRIPTION AND FEATURES	
N8000 System Controller	Modular NetMax system manager including signal processing, routing, system control and supervision
Audio	32 Audio Channels 4 Audio Slots, modular 8-Channel Input and Output cards, analog or digital
Networking	Module Slot for optional CobraNet™ Interface 32 I/O Audio and Control
Safety / Redundancy	Internal Supervision, System Monitoring, Watchdog, Fault Output, Redundant Audio Network possible
PC Configuration and Control Software	IRIS-Net - Intelligent Remote & Integrated Supervision Integration of N8000, Remote Amplifiers, peripheral control Configuration, Control and Supervision for complete Audio Systems Freely programmable User Control Panels and Access Levels

AUDIO SPECIFICATIONS	
Audio Inputs - Analog Input Module AI-1	8 analog audio inputs per module, line level, electronically balanced
Connectors	8 x 3-pole Euro block connectors
Input Level (nominal)	+6 dBu / 1.55 V
Input Level (max. before clip)	+21 dBu / 8.7 V
Input Impedance	20 kΩ
Common Mode Rejection	> 70 dB
A/D Conversion	24 Bit, Sigma-Delta, 128 times oversampling
Audio Outputs - Analog Output Module AO-1	8 analog audio outputs per module, line level, electronically balanced
Connectors	8 x 3-pole Euro block connectors
Output Level (nominal)	+6 dBu / 1.55 V
Output Level (max. before clip)	+21 dBu / 8.7 V
Output Impedance	100 Ω
Min. Load Impedance	600 Ω
D/A Conversion	24 Bit, Sigma-Delta, 128 times oversampling
Frequency Response	20 Hz...20 kHz (-0.5 dB)
Signal to Noise Ratio (A-weighted)	AI-1: 117 dB typical AO-1: 118 dB typical N8000 analog In to analog Out: 115 dB typical
THD+N	< 0.005 %
Signal Delay	AI-1: 1.3958 ms AO-1: 0.646 ms N8000 analog In to analog Out: 2.2917 ms
Crosstalk	< -110 dB @ 1 kHz

SIGNAL PROCESSING	
Sample Rate	48 kHz internal 32 kHz - 192 kHz external
Data Format	24 Bit linear A/D and D/A conversion, 48 Bit processing
Signal Processing	2 DSPs Standard (150 MHz, 300 MIPS) 1 DSP per Audio Module (100 MHz, 100 MIPS) DSP-1 Extension Module optional (+300 MIPS)

INTERFACES	
Ethernet	10 / 100 MBit/s, RJ-45 (PC Control)
CAN	10... 500 kbit/s, 2 x RJ-45 (Remote Amp Control)
RS-232	2 Ports, 9pin D-Sub female (Remote Control)
USB	USB Type B on Front Panel (PC Control)
GPIO Control Port	2 x 6-pole Euro block 4 Control Inputs (analog 0 - 10 V / logic control) 3 Control Outputs (Relay contact to ground) 1 Fault Output (NC Relay contact) 3 Reference Outputs (+5 V / +10 V / GND)

N8000 GENERAL SPECIFICATIONS	
Power Supply	100 - 240 V AC, 50/60 Hz
Power Consumption	90 W max. (incl. 2 x AI-1, 2 x AO-1, 1 x CM-1 modules)
Safety Class	I
Cooling	Left-to-right, 3-stage fan
Operating Temperature Range	0 °C ... 40 °C
Dimensions (W x H x D)	483 x 88.1 x 381 mm (19“, 2 HU)
Weight	N8000 (without optional modules): 7.35 kg AI-1 Analog Input Module: 200 g AO-1 Analog Output Module: 260 g CM-1 CobraNet™ Module: 75 g

MODULES / OPTIONS	
AI-1 Analog Input Module	8 analog audio inputs, line level, electronically balanced
AO-1 Analog Output Module	8 analog audio outputs, line level, electronically balanced
CM-1 CobraNet™ Module	32 digital audio inputs and outputs, 2 CobraNet™ ports (Primary / Secondary) for network redundancy
DSP-1 DSP Extension Module	Internal DSP processing power and Delay-RAM extension, 300 MIPS, 256k x 24 SRAM
MI-1 Microphone Input Module	8 microphone inputs, programmable Gain and Phantom Power, PAD for line level switching
DI-1 Digital Input Module	8 digital audio inputs, AES/EBU, S/PDIF and Optical formats, sample rate converters for 32-192 kHz operation

6.2 Block Diagram/Blockschaltbild

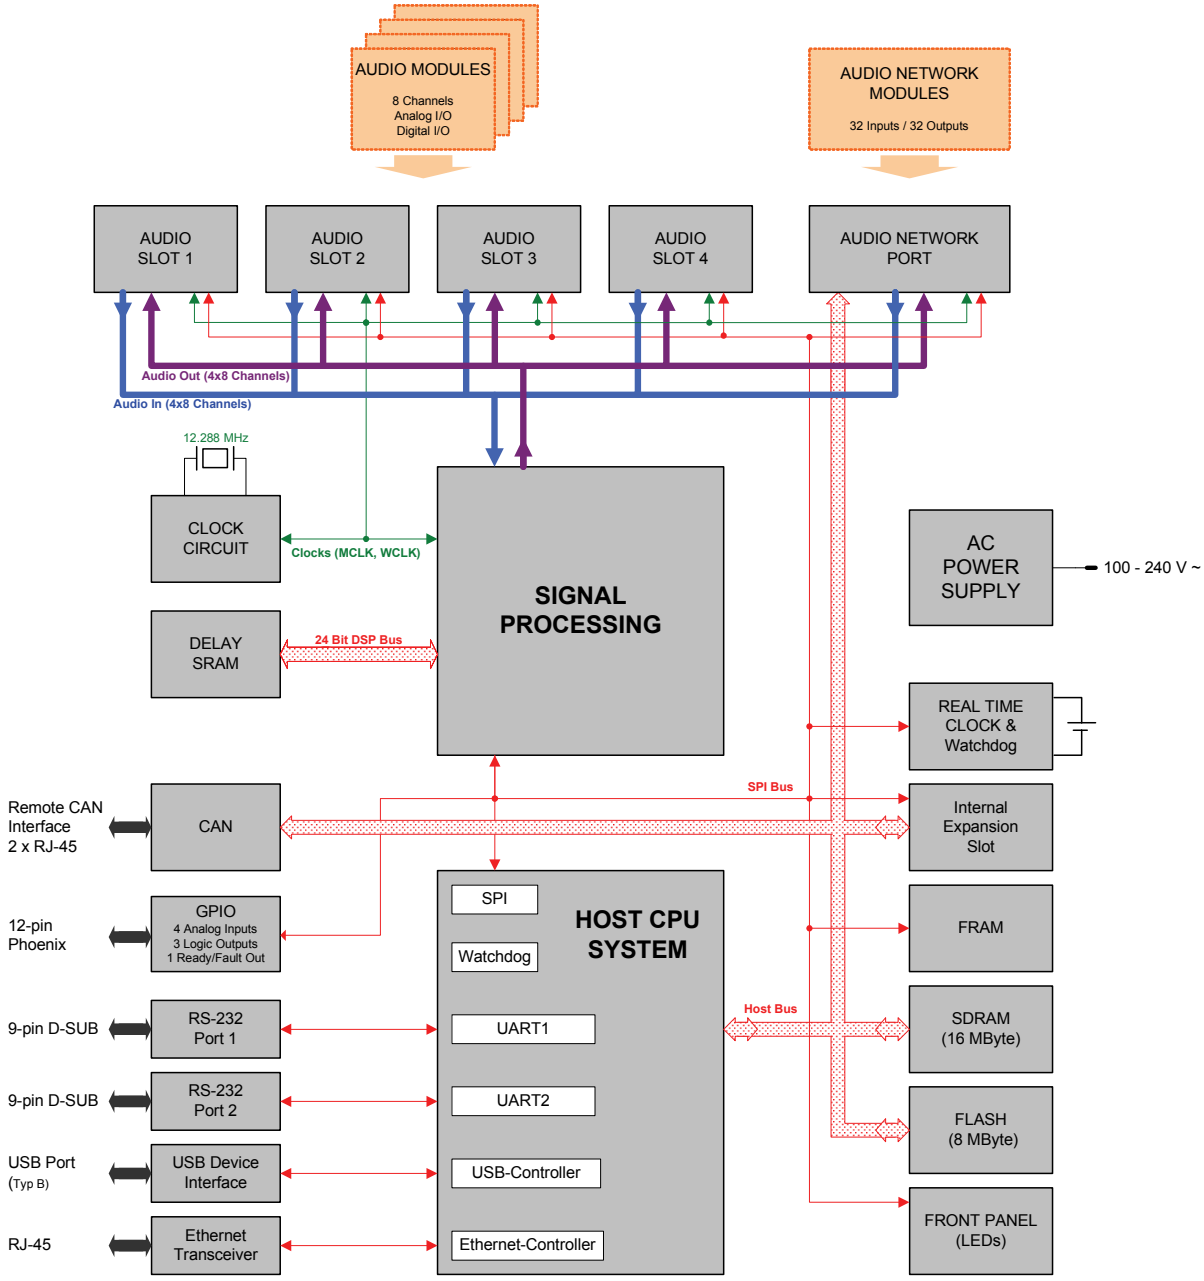

6.3 Dimensions/Abmessungen

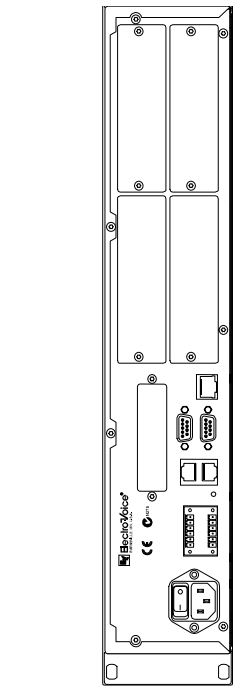

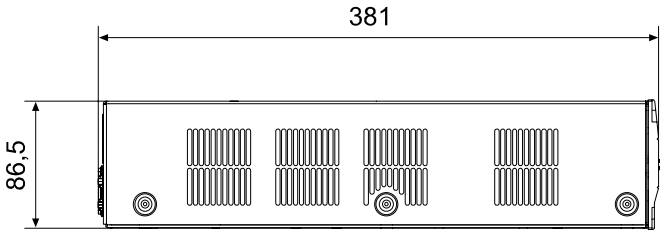

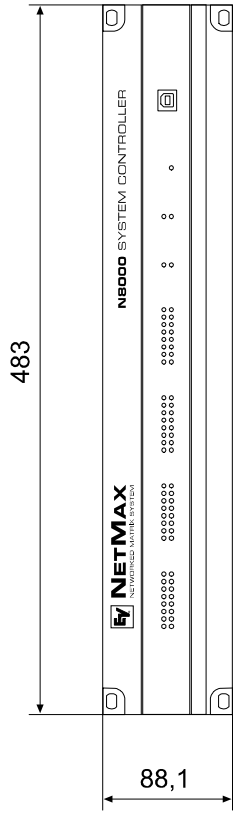

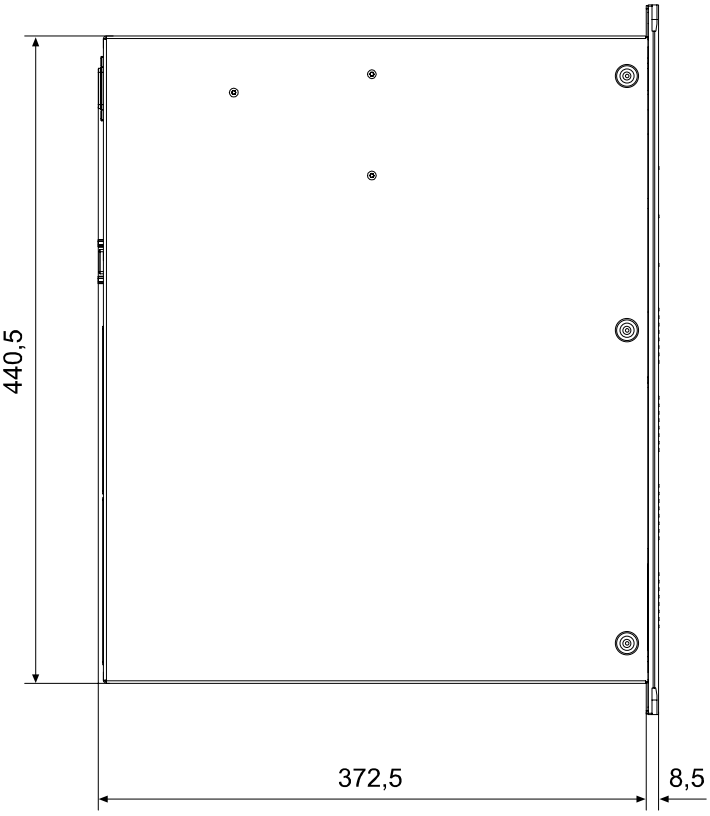

USA: Telex Communications Inc., 12000 Portland Ave. South, Burnsville, MN 55337, Phone: +1 952-884-4051, FAX: +1 952-884-0043
Germany: EVI Audio GmbH, Hirschberger Ring 45, D 94315, Straubing, Germany, Phone: +49 9421-706 0, FAX: +49 9421-706 265
France: EVI Audio France, Parc de Courcerin, Allée Lech Walesa, 77185 Lognes, France, Tél : +33 1 6480 0090, FAX: +33 1 6006 5103

Subject to change withou prior notice. Printed in Germany V1.2 5/18/06 / D 362 478

www.electro-voice.de